


SERVICE MANUAL

TS-530S/SP/D* (*: KOREA MARKET ONLY)

SP-230, VFO-240, AT-230, PK-3*

HF TRANSCEIVER

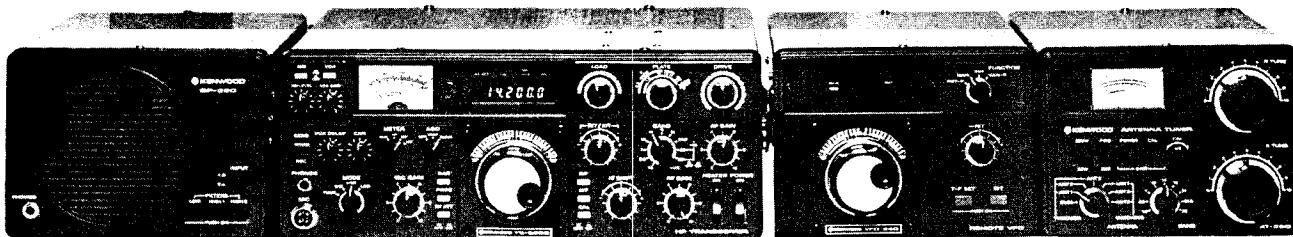

SP-230

TS-530S

VFO-240

AT-230

CONTENTS

SPECIFICATION	2	COUNTER UNIT (X54-1540-00)	19
CIRCUIT DESCRIPTION	3	PARTS LIST	20
AC VOLTAGE CONVERSION	9	PACKING	27
INSIDE VIEWS	10	DISASSEMBLY	28
PC BOARD VIEWS/CIRCUIT DIAGRAMS		ADJUSTMENTS	33
RECTIFIER UNIT (X43-1370-02)	11	LEVEL DIAGRAM	45
ANT RELAY BOARD (J25-3015-04)	11	VFO-240	46
SWITCH BOARD (J25-3016-03)	11	AT-230	48
FINAL UNIT (X56-1380-00)	11	SCHEMATIC ABBREVIATION	51
VFO UNIT (X40-1170-00)	12,13	SCHEMATIC DIAGRAM (S TYPE)	53
AF UNIT (X49-1150-00)	12,13	SCHEMATIC DIAGRAM (SP/D TYPE)	53,54
IF UNIT (X48-1310-00)	14,15	BLOCK DIAGRAM	54
PLL UNIT (X50-1680-01)	16,17	SP-230	BACK COVER
RF UNIT (X44-1360-01)	18	PK-3	BACK COVER

TS-530S

SPECIFICATIONS

[GENERAL]

Frequency Range.....	160 m Band 1.8 ~ 2.0 MHz 80 m Band 3.5 ~ 4.0 MHz 40 m Band 7.0 ~ 7.3 MHz 30 m Band 10.1 ~ 10.15 MHz (10.0 MHz WWV) 20 m Band 14.0 ~ 14.35 MHz * 17 m Band 18.068 ~ 18.168 MHz 15 m Band 21.0 ~ 21.45 MHz * 12 m Band 24.89 ~ 24.99 MHz 10 m Band 28.0 ~ 29.7 MHz
Modes.....	SSB/CW
Frequency Stability.....	Within 1 kHz during the first hour after 1 minute of warmup. Within 100 Hz during any 30 minute period thereafter.
Power Requirement.....	110VAC/120VAC/240VAC, 50/60 Hz
Power Consumption	Transmit: 295 watts Receive: 27 watts (with heaters off)
Dimensions	333 (13.3) x 133 (5.3) x 333 (13.3) mm (inch)
Weight.....	12.8 kg (28.2 lbs)

[TRANSMITTER]

* Final Power Input	TS-530S/SP	TS-530D
220W PEP for SSB operation		160W PEP for SSB operation
180W DC for CW operation		130W DC for CW operation
Audio Input Impedance	500Ω ~ 50 kΩ	
RF Output Impedance.....	50Ω ~ 75Ω	
Carrier Suppression	Better than 40 dB	
Sideband Suppression	Better than 50 dB	
Spurious Radiation	Better than 60 dB	
Harmonic Radiation	Better than 40 dB	
Audio Freq. Response	400 to 2,600 Hz, within -6 dB	
ALC Input	-10V DC Max	
Linear Amp Relay Contact Rating.....	100V DC 1A	

[RECEIVER]

Receiver Sensitivity	0.25 μV at 10 dB S + N/N
Image Ratio.....	Better than 60 dB
IF Rejection	Better than 70 dB
Receiver Selectivity	
SSB/CW.....	2.4 kHz (-6 dB), 4.2 kHz (-60 dB) CW Optional Filter YK-88C 500 Hz (-6 dB), 1.5 kHz (-60 dB) YK-88CN 270 Hz (-6 dB), 1.1 kHz (-60 dB)
SSB Optional Filter	YK-88SN 1.8 kHz (-6 dB), 3.3 kHz (-60 dB)
Notch-filter Attenuation	Better than 20 dB (1.5 kHz)
Audio Output Impedance	8 ~ 16Ω
Audio Output	1.5W (8Ω)

NOTE: The circuit and ratings may be changed without notice due to developments in technology.

NOTE: For the TS-530SP shipped to the USA, and for the TS-530D.

* Will transmit on the 17 and 12 meter bands.

Diodes installed for preventing accidental transmission before government Amateur authorization.

CIRCUIT DESCRIPTION

INTRODUCTION

The TS-530 is a single conversion transceiver with an intermediate frequency of 8.83 MHz.

In transmission, an SSB signal generated at 8.83 MHz is mixed with the PLL local oscillator output to produce the final transmission frequency. The circuitry is hybrid with vacuum tubes used only in the driver (12BY7A) and final-stage power amplifier (6146B's).

The PLL circuit generates a heterodyne frequency for each band and a counter reference signal from a single crystal oscillator.

The TS-530 incorporates an IF SHIFT circuit, VOX (also used for CW semi-break-in), side tone circuit, speech processor, noise blower, XTAL calibrator, and etc.

RECEIVER CIRCUIT

The signal coming from the antenna is routed through a step-up antenna coil via an RF ATT switch and IF trap. MOS FET Q1,3SK73 amplifies this signal. Approximately 9 dB of negative feedback is applied to the RF amplifier to reduce noise and expand dynamic range. The signal passes through buffer amplifier Q2, 2SK125 and is mixed with the PLL VCO output by a balanced mixer (Q3,Q4 : 2SK125). The DOUBLE SIDE-BAND signal is now converted to the intermediate frequency, 8.83 MHz.

Entering the IF unit, this signal is amplified by Q1(2SK125), passes through ceramic filter CF1 and the NB gating circuit, and is applied to the crystal filter whose center frequency is 8.83 MHz.

The SINGLE SIDE-BAND signal leaving the crystal filter is amplified by Q2~Q4(3SK73) and is then demodulated to an audio signal by the product detector consisting of D16~D19 (1N60 x4).

In the AF unit, the audio signal is amplified by Q2(2SC2240) passes through the AF GAIN control, and after being amplified by the power amplifier Q6 (MB3712), drives the speaker.

Item	Rating
Nominal center frequency (f_0)	8.830 MHz
3dB Bandwidth	$f_0 \pm 5$ kHz or more, total 25 kHz or more
20 dB Bandwidth	90 kHz or less
Ripple (Within 3 dB bandwidth)	1 dB or less
Spurious response	14 dB or more within $f_0 \pm 1.5$ MHz
Input and output impedance	330 Ω

Table 1 Ceramic filter (L72-0324-05)
SFE8.83MF (IF unit, CF1)

Item	Rating
Center frequency	8830 kHz
Center frequency deviation	Within ± 150 Hz at 6 dB
Pass bandwidth	± 1.2 kHz or more at 6 dB
Attenuation bandwidth	± 1.5 kHz or less at 20 dB ± 2.2 kHz or less at 60 dB ± 3.0 kHz or less at 80 dB
Ripple	2 dB or less
Loss	6 dB or less
Guaranteed attenuation	80 dB or more within ± 3 kHz to ± 1 MHz
Input and output impedance	monolithic 600 Ω //15 pF

Table 2 Crystal (monolithic) filter (L71-0208-05)
YK-88S (IF unit, XF1)

TRANSMITTER CIRCUIT

Audio input picked up by the microphone comes to the IF unit and is amplified by Q11, 12, 15 and 16. The input circuit adapts to any microphone impedance of from 500 ohms to 50 kohms. This amplified signal is converted into a DSB signal by the balanced modulator D27~D30 (1N60 x4), passes through buffer amplifier Q18 (2SK19) and an 8.83 MHz crystal filter, and the output appears as a SSB signal. The SSB signal is amplified by Q2 (3SK73) and is applied to the transmitter mixer in the RF unit. The transmitter mixer is a double balanced mixer consisting of Q6 and Q7 (3SK73), which mixes the SSB signal with the PLL VCO output to generate the final transmission frequency. The signal is then amplified by the driver (V1 : 12BY7A) and then by the final power amplifier (two 6146B's) and is applied to the antenna via a π -matching network.

PLL CIRCUIT

The PLL signal is synthesized from the VFO, CAR and VCO outputs. The TS-530S employs a programmable divider in the PLL to synthesize the heterodyne frequency from the standard reference oscillator frequency. This simplifies the PLL circuit by eliminating the need for a separate HET XTAL for each band.

Frequency organization of the PLL circuit is shown in Fig. 1, the circuit diagram in Fig. 2, and frequency organization in other circuits is summarized in Table 4. Please refer to Fig. 1 when reading the following description of PLL circuit operation. MIX (3), a double balanced mixer, mixes the CAR output with the VFO output. MIX (2), which operates for the 18 MHz band and above, mixes either 10 MHz, in the 14 and 18 MHz bands, or 20 MHz, in the 21, 24.5 and 28 MHz bands, with the output of MIX (3) to generate the appropriate frequency needed for each band, as shown in Table 4.

CIRCUIT DESCRIPTION

This is mixed with the VCO output for each band by MIX (1) to a frequency given in **Table 4**, which is then routed through LPF (1), amplified, and wave-shaped to a digital signal. A programmable divider divides this signal into a 500 kHz output. This programmable divider is preset, as shown in **Table 4**, by the BCD signal which is counter-generated from information coming from the band switch. The phase comparator used is a Motorola MC4044P. The loop filter is made of completely discrete components to minimize VCO spurious content.

Six VCOs cover all bands. If the PLL unlocks for any reason, it will be detected from the phase comparator output. This will turn off the VCO output to prevent spurious radiation and, at the same time, the display will be blanked to inform the operator of unlock status.

BAND	RX, Tx frequency (MHz)	VCO (MHz)	MIX (1) input (MHz)	MIX (1) output (MHz)	Division ratio	DCBA
1.5	1.5 ~2.0	10.33 ~10.83	14.33 ~14.83	4.0	1/8	1 0 0 0
3.5	3.5 ~4.0	12.33 ~12.83	14.33 ~14.83	2.0	1/4	1 1 0 0
7	7.0 ~7.5	15.83 ~16.33	14.33 ~14.83	1.5	1/3	1 1 0 1
10	10.0 ~10.5	18.83 ~19.33	14.33 ~14.83	4.5	1/9	0 1 1 1
14	14.0 ~14.5	22.83 ~23.33	24.33 ~24.83	1.5	1/3	1 1 0 1
18	18.0 ~18.5	26.83 ~27.33	24.33 ~24.83	2.5	1/5	1 0 1 1
21	21.0 ~21.5	29.83 ~30.33	34.33 ~34.83	4.5	1/9	0 1 1 1
24.5	24.5 ~25.0	33.33 ~33.83	34.33 ~34.83	1.0	1/2	1 1 1 0
28	28.0 ~28.5	36.83 ~37.33	"	2.5	1/5	1 0 1 1
28.5	28.5 ~29.0	37.33 ~37.83	"	3.0	1/6	1 0 1 0
29	29.0 ~29.5	37.83 ~38.33	"	3.5	1/7	1 0 0 1
29.5	29.5 ~30.0	38.33 ~38.83	"	4.0	1/8	1 0 0 0

Table 3 Frequency chart

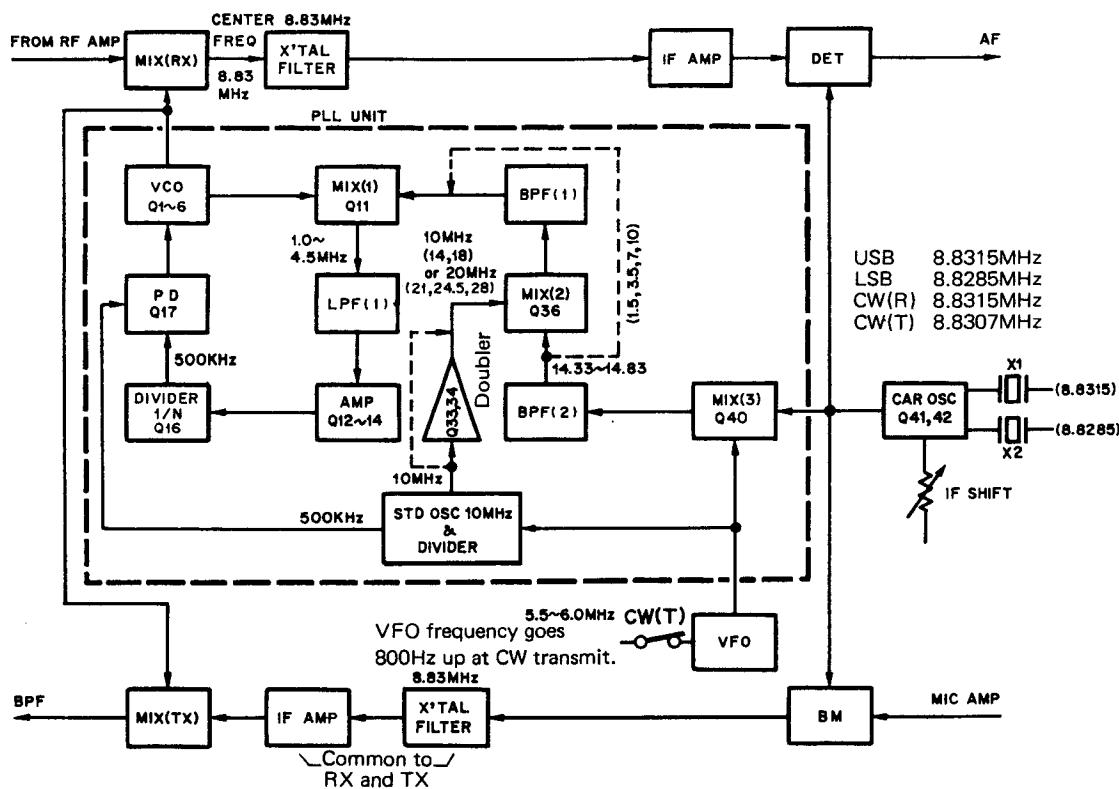


Fig. 1 TS-530 Frequency configuration

CIRCUIT DESCRIPTION

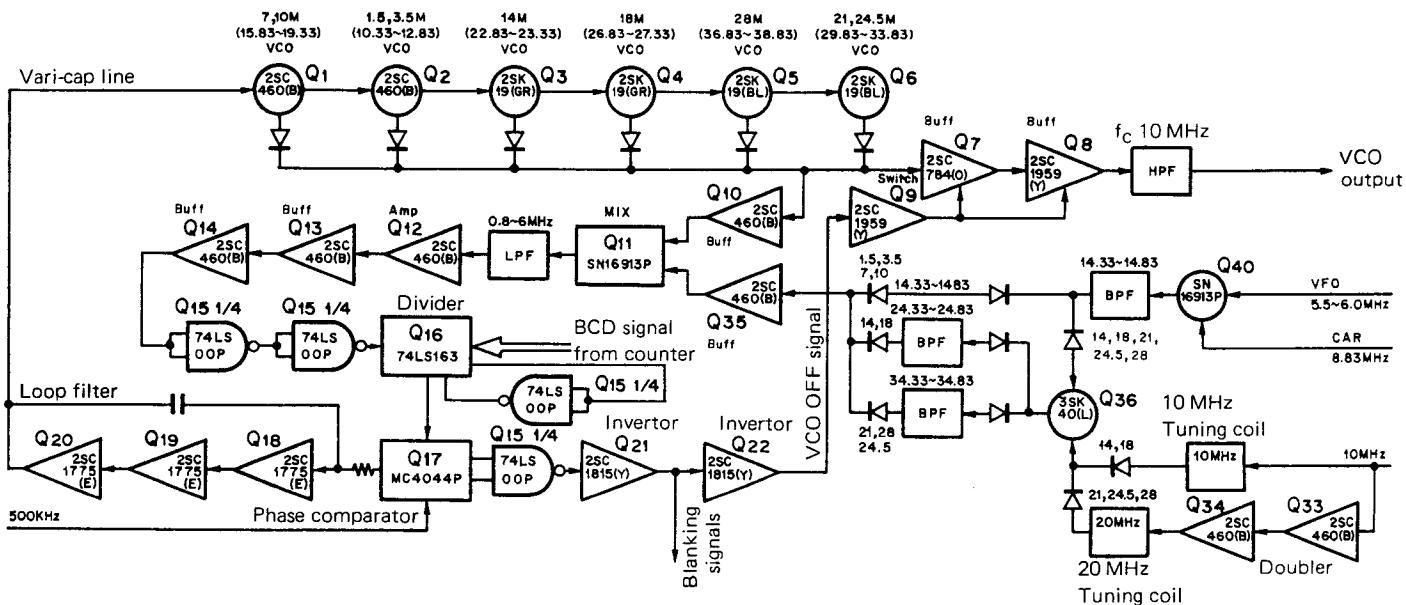


Fig. 2 TS-530 PLL circuit configuration

COUNTER

This counts the 500 kHz to 1 MHz signal which the PLL unit generates by mixing the VFO output with 5 MHz (halved from the 10 MHz reference frequency). Gate, latch, and preset pulses are generated from a 10 Hz pulse generated by dividing 1 kHz, supplied from the PLL, by 100.

BAND	100K	1 M	10M	DCBA	0.5	BAND	100K	1 M	10M	DCBA	0.5
1.5	0	1	0	1 0 0 0	H	21	5	0	2	0 1 1 1	L
3.5	0	3	0	1 1 0 0	H	24.5	0	4	2	1 1 1 0	H
7	5	6	0	1 1 0 1	L	28	5	7	2	1 0 1 1	L
10	5	9	0	0 1 1 1	L	28.5	0	8	2	1 0 1 0	H
14	5	3	1	1 1 0 1	L	29	5	8	2	1 0 0 1	L
18	5	7	1	1 0 1 1	L	29.5	0	9	2	1 0 0 0	H

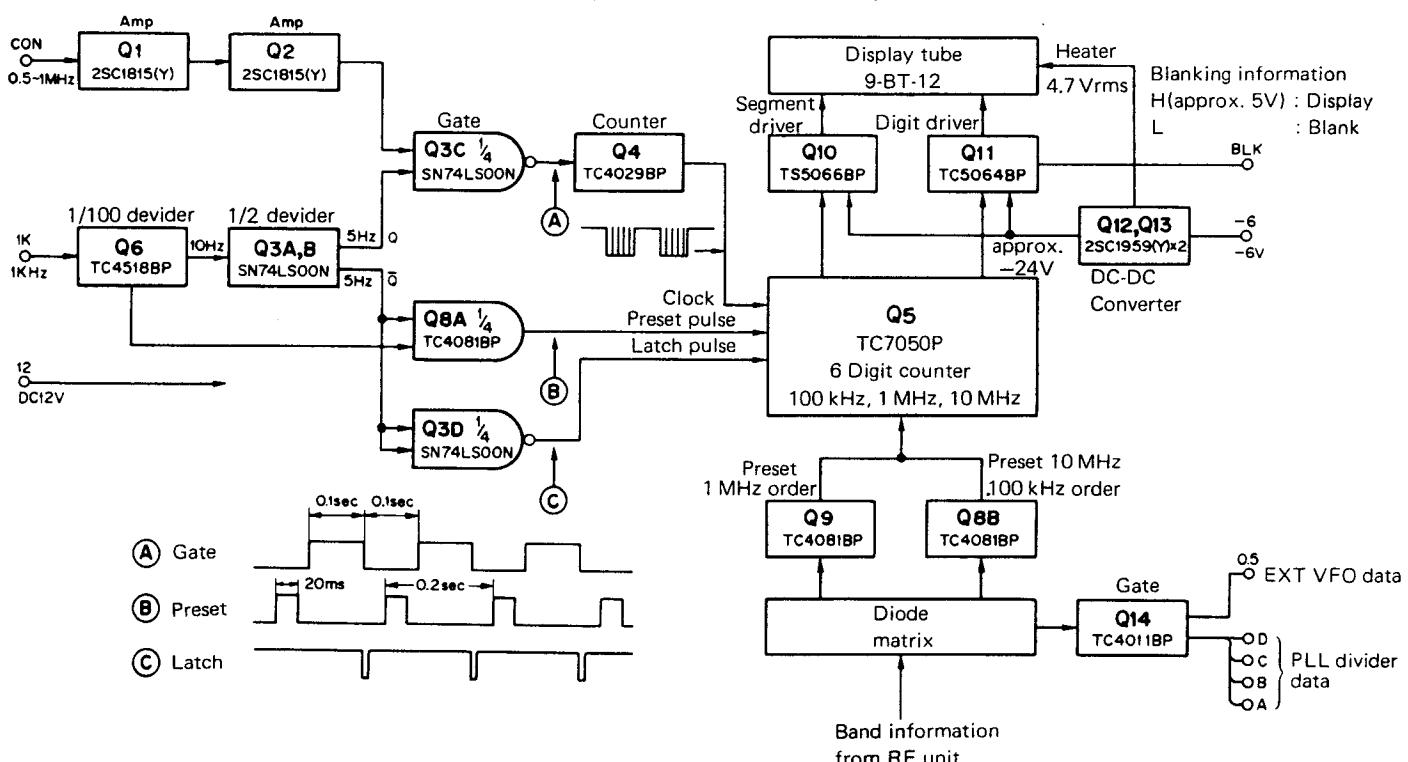


Fig. 3 Counter unit block diagram

CIRCUIT DESCRIPTION

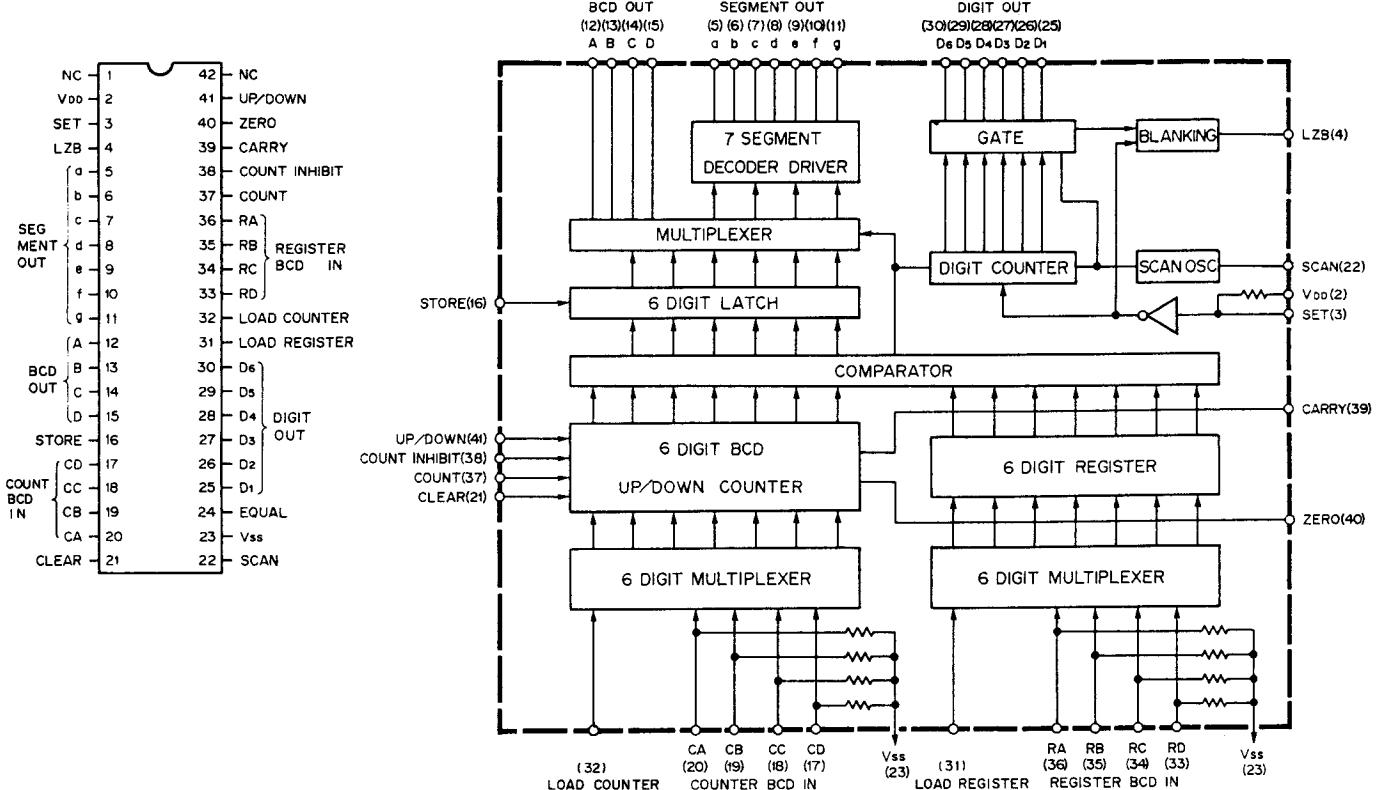


Fig. 4 TS5070P (Counter unit, Q5)

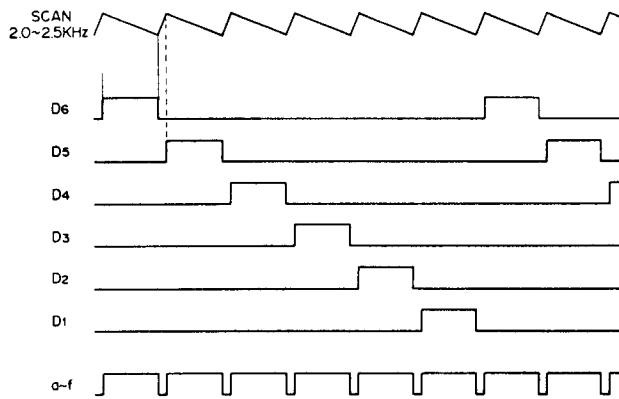


Fig. 5 TC5070P Timing chart

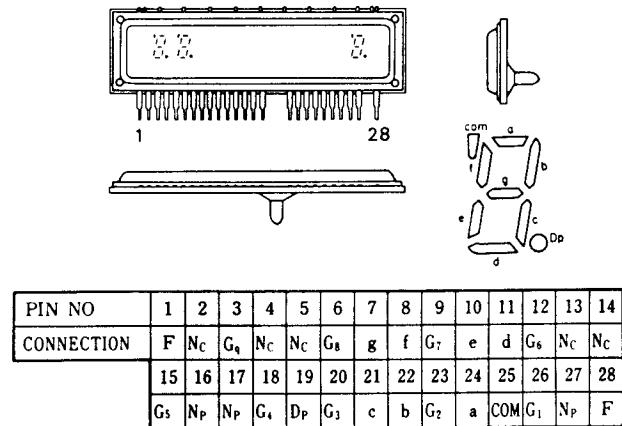


Fig. 6 Indicating tube 9-BT-12

Q5 (TC5070P) is a presetable, 6-digit BCD counter which incorporates a 6-digit latch, 6-digit dynamic drive digital counter, and 7-segment decoder/driver. Band information supplied from the RF unit is applied to a diode matrix to preset the 100 kHz, 1 MHz and 10 MHz digits. Preset values are given in **Fig. 3**. For instance, to preset 14.000 MHz, with a 500 kHz counter input signal, the 10 MHz value is preset to 1, 1 MHz to 3, and 100 kHz to 5, and the 500 kHz

counter input signal is subtracted from 14.000 MHz. (If no counter input signal were present, 13.500 MHz would be displayed). Q5 supplies the display tube drivers with 7-segment information and dynamic drive control signals to light the fluorescent display tube.

In the counter unit, a diode matrix generates frequency division information and supplies the PLL unit with this information. If the PLL unlocks, a BLK (Blanking Low) signal will be applied to the digit driver IC (Q11) to blank the fluorescent display tube.

CIRCUIT DESCRIPTION

CAR OSCILLATOR

The CAR oscillator consists of a crystal controlled oscillator which uses two crystals : one for LSB and the other for USB and CW. Frequencies generated are shown in **Fig. 1**. The oscillating frequency can be varied by the IF SHIFT control during reception.

VFO

The VFO range is 5.5~6.0 MHz. Its oscillating frequency is automatically shifted 800 Hz up during CW transmission so that the actual operating frequency is always displayed.

CIRCUIT FEATURES

1. Optional filters available

The TS-530 is equipped with an 8.83 MHz IF filter with a bandwidth of 2.4 kHz. Narrow filters are separately available.

Installation of optional filters

One or two of the YK88SN, YK88C and YK88CN optional filters can be installed in the TS-530. Jumpers A and B (for filter switching) on the IF unit must be repositioned as shown in the following table.

Install each optional filter in the specified position on the IF unit PC board. To install both a YK88C and YK88CN, install the YK88C in the SSB NARROW FILTER position and the YK88CN in the CW FILTER position.

Option filter YK-88OO	MODE		SSB		CW	
	Jumper destination		NAR SW		NAR SW	
	B	A	OFF	ON	OFF	ON
SN	SSB	SSN	2.4 kHz	1.8 kHz	2.4 kHz	1.8 kHz
C	SSB	CW	2.4 kHz	Reception impossible	2.4 kHz	500 Hz
CN	SSB	CW	2.4 kHz	Reception impossible	2.4 kHz	270 Hz
SN + C	SSB	CW	2.4 kHz	1.8 kHz	2.4 kHz	500 Hz
	SSN	CW	2.4 kHz	1.8 kHz	1.8 kHz	500 Hz
SN + CN	SSB	CW	2.4 kHz	1.8 kHz	2.4 kHz	270 Hz
	SSN	CW	2.4 kHz	1.8 kHz	1.8 kHz	270 Hz
C + CN	SSN	CW	2.4 kHz	500 Hz	500 Hz	270 Hz

Table 4 Installation of optional filters

Item	Rating
Center frequency f_0	8830 kHz
Center frequency deviation	$8830 \text{ kHz} \pm 150 \text{ Hz}$ at 6 dB
6 dB bandwidth	$\pm 900 \text{ Hz}$ or more
60 dB bandwidth	$\pm 1800 \text{ Hz}$ or less
Guaranteed attenuation	80 dB or more within $f_0 \pm 2.5 \text{ kHz}$ to $\pm 1 \text{ MHz}$
Ripple	2 dB or less
Loss	$3 \text{ dB} \pm 2 \text{ dB}$
Input and output impedance	$600\Omega // 15 \text{ pF}$

Table 5 SSB crystal filter (L71-0220-05)
YK-88SN (option)

Item	Rating
Center frequency f_0	8830.7 kHz
Center frequency deviation	$f_0 \pm 150 \text{ Hz}$ at 6 dB
6 dB bandwidth	$\pm 250 \text{ Hz}$ or more
60 dB bandwidth	$\pm 900 \text{ Hz}$ or less
Ripple	2 dB or less
Loss	$6 \text{ dB} \pm 2 \text{ dB}$
Guaranteed attenuation	80 dB or more within $f_0 \pm 2 \text{ kHz}$ to $\pm 1 \text{ MHz}$
Input and output impedance	$600\Omega // 15 \text{ pF}$

Table 6 CW crystal filter (L71-0211-05)
YK-88C (Option)

Item	Rating
Center frequency f_0	8830.7 kHz
Center frequency deviation	$f_0 \pm 50 \text{ Hz}$ at 6 dB
6 dB bandwidth	$\pm 125 \text{ Hz}$ or more
60 dB bandwidth	$\pm 600 \text{ Hz}$ or less
Ripple	2 dB or less
Loss	$8 \text{ dB} \pm 2 \text{ dB}$
Guaranteed attenuation	80 dB or more within $f_0 \pm 2 \text{ kHz}$ to $\pm 1 \text{ MHz}$
Input and output impedance	$600\Omega // 15 \text{ pF}$

Table 7 CW crystal filter (L71-0221-05)
YK-88CN (Option)

CIRCUIT DESCRIPTION

2. IF SHIFT operation

The IF SHIFT circuit shifts the passband of the IF circuit without changing the receiving frequency. The relative position of the passband of the IF filter to the received signal is shifted when the IF SHIFT control is turned as shown in **Fig. 7**. The IF SHIFT circuit block diagram is shown in **Fig. 8**.

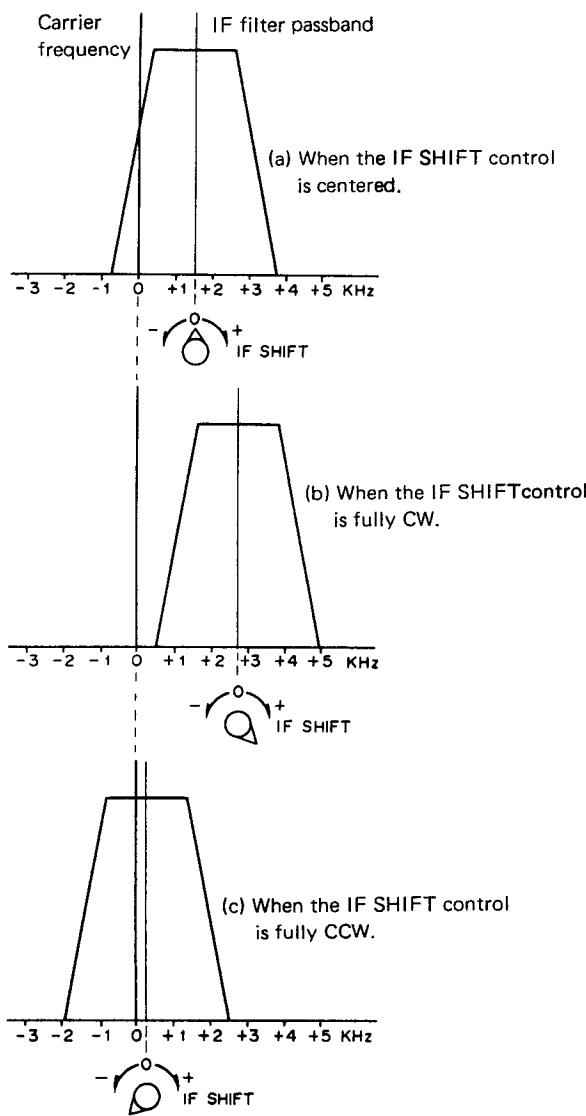


Fig. 7 IF SHIFT operation (for USB mode)

Frequencies within the PLL loop satisfy the following relationship.

$$N \cdot 500 \text{ kHz} = f_{\text{BPF}1} - f_{\text{VCO}} \quad (1)$$

where N : divisor of programmable divider

500 kHz : phase reference frequency

$f_{\text{BPF}1}$: input frequency to MIX (1)

f_{VCO} : VCO frequency

For example, in the case of 14 MHz reception, $f_{\text{BPF}1}$ is given by eq. (1) as

$$f_{\text{BPF}1} = 10 \text{ MHz} + f_{\text{BPF}2} \quad (2)$$

where 10 MHz : band setting frequency

$$f_{\text{BPF}2} = f_{\text{VFO}} + f_{\text{CAR}} \quad (3)$$

where f_{VFO} : VFO frequency

f_{CAR} : carrier frequency

By substituting eq. (3) into eq.(2) and eq.(2) into eq.(1)

$$f_{\text{VCO}} = 10 \text{ MHz} + f_{\text{VFO}} + f_{\text{CAR}} - N \cdot 500 \text{ kHz}$$

$$\therefore f_{\text{CAR}} = f_{\text{VCO}} + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{\text{VFO}})$$

Assuming that f_{VFO} is constant, when f_{CAR} is varied by $\pm \Delta f$,

$$\begin{aligned} f_{\text{CAR}} \pm \Delta f &= [f_{\text{VCO}} + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{\text{VFO}})] \pm \Delta f \\ &= (f_{\text{VCO}} \pm \Delta f) + (N \cdot 500 \text{ kHz} - 10 \text{ MHz} - f_{\text{VFO}}) \end{aligned}$$

Thus, f_{VCO} varies by $\pm \Delta f$ as f_{CAR} is varied by $\pm \Delta f$.

The receiving frequency, f_R is given by

$$f_R = f_{\text{VCO}} - f_{\text{CAR}} \quad (4)$$

Therefore, when f_{CAR} is shifted by $+ \Delta f$, receiving frequency f'_R is given by

$$\begin{aligned} f'_R &= (f_{\text{VCO}} + \Delta f) - (f_{\text{CAR}} + \Delta f) \\ &= f_{\text{VCO}} - f_{\text{CAR}} \end{aligned} \quad (5)$$

From equations (4) and (5),

$$f_R = f'_R$$

Thus the receiving frequency does not vary even if f_{CAR} is varied. However,

$$f_R = f_{\text{VCO}} - \text{IF frequency}$$

so the IF frequency varies as f_{VCO} varies.

This means that the relative position of the IF filter passband to the carrier position (of the received signal) is shifted by the same amount as the f_{VCO} variation.

CIRCUIT DESCRIPTION/AC VOLTAGE CONVERSION

3. Speech processor [Part of IF unit (X48-1310-00)]

This is an audio compression speech processor. When the processor switch is OFF, the audio signal amplified by Q11 (on the IF unit) passes through buffer amplifier Q12 (2SC1815Y) and is then applied to the MIC pot via diode switch D24 (1S1555).

When the processor switch is ON, the audio signal amplified by Q12 is applied to the AGC-type speech processor consisting of Q13 (μ PC1158H2), Q14 (2SC1815Y) and D26 (1N60). The speech processor effectively increases the "talk power" of the audio signal and feeds it to MIC pot via diode switch D25 (1S1555).

When the processor is ON, the ALC time constant is shortened by turning Q30 (2SK30A) in the AF unit OFF to heighten processor effect.

4. RIT/XIT operation

Conventional RIT function is provided by the RIT/XIT control. By also turning the XIT switch ON, the transmission frequency is shifted to the same frequency as received under RIT control.

TS-530(K) AC VOLTAGE CONVERSION

To operate the TS-530S (K) on 240V AC, the power transformer split primaries must be rewired from parallel to series connection.

1. Unplug the AC power cable.
2. Remove the bottom cover.
3. Remove the jumper wires between the two ϕ terminals and two 120 terminals on the bottom of the power transformer.
4. Connect the adjacent 120 and ϕ terminals at the middle of the transformer. This will provide 240V AC operation. For 220V AC operation, change the wires from 120 to 100 winding.
5. Change the AC fuse from 6A to 4A. Tag the power cord at the back of the radio to indicate that the transformer is strapped for 240V AC, and the power fuse should be 4A, and not 6A.
6. Replace the bottom cover and reconnect power to verify your work.

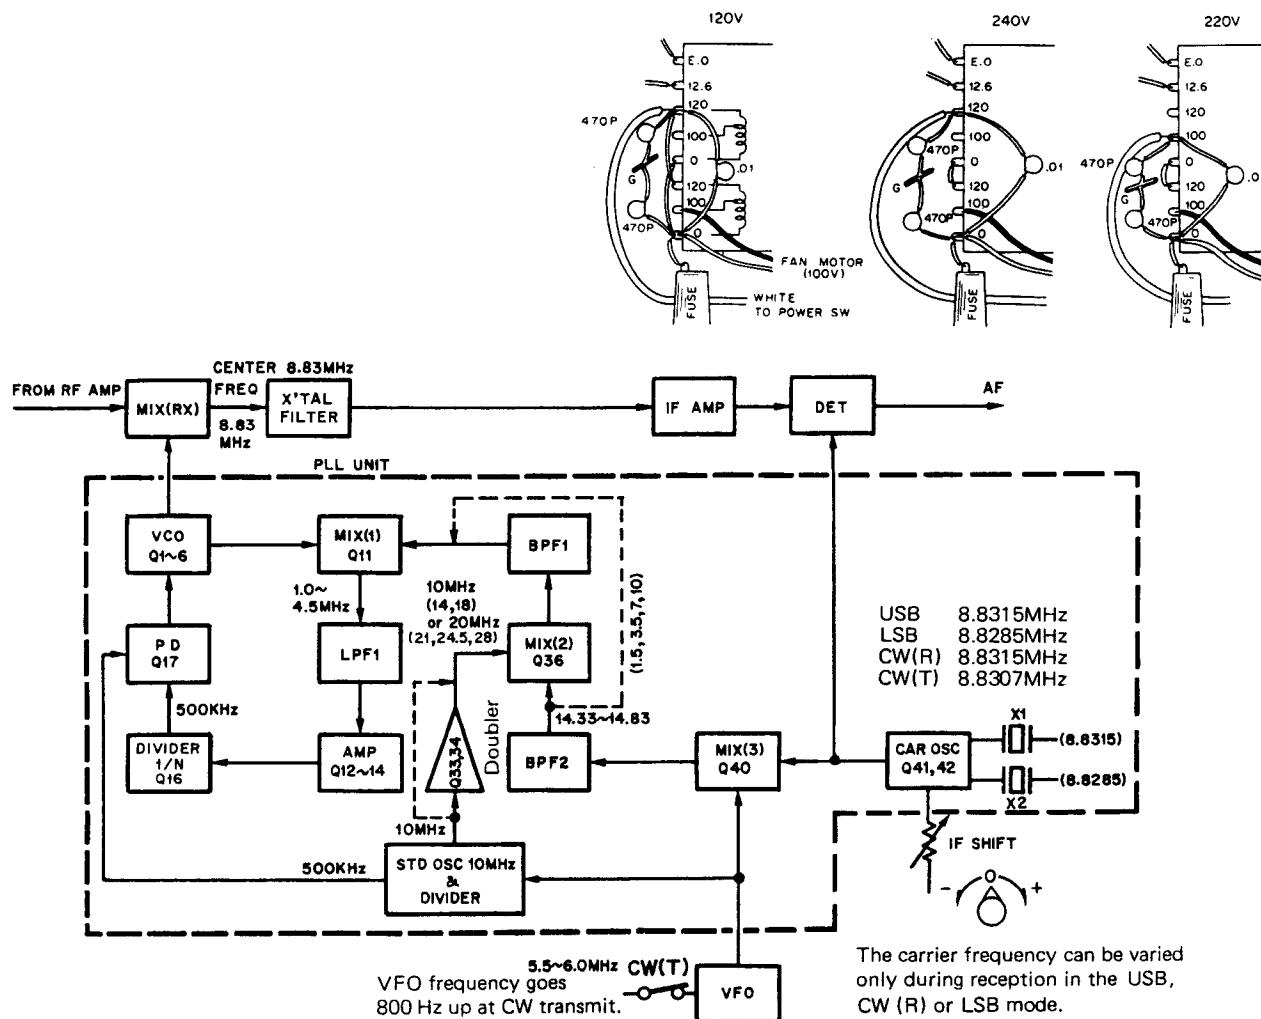



Fig. 8 IF SHIFT Block diagram

The carrier frequency can be varied only during reception in the USB, CW (R) or LSB mode.


TS-530S

INSIDE VIEWS

TOP VIEW

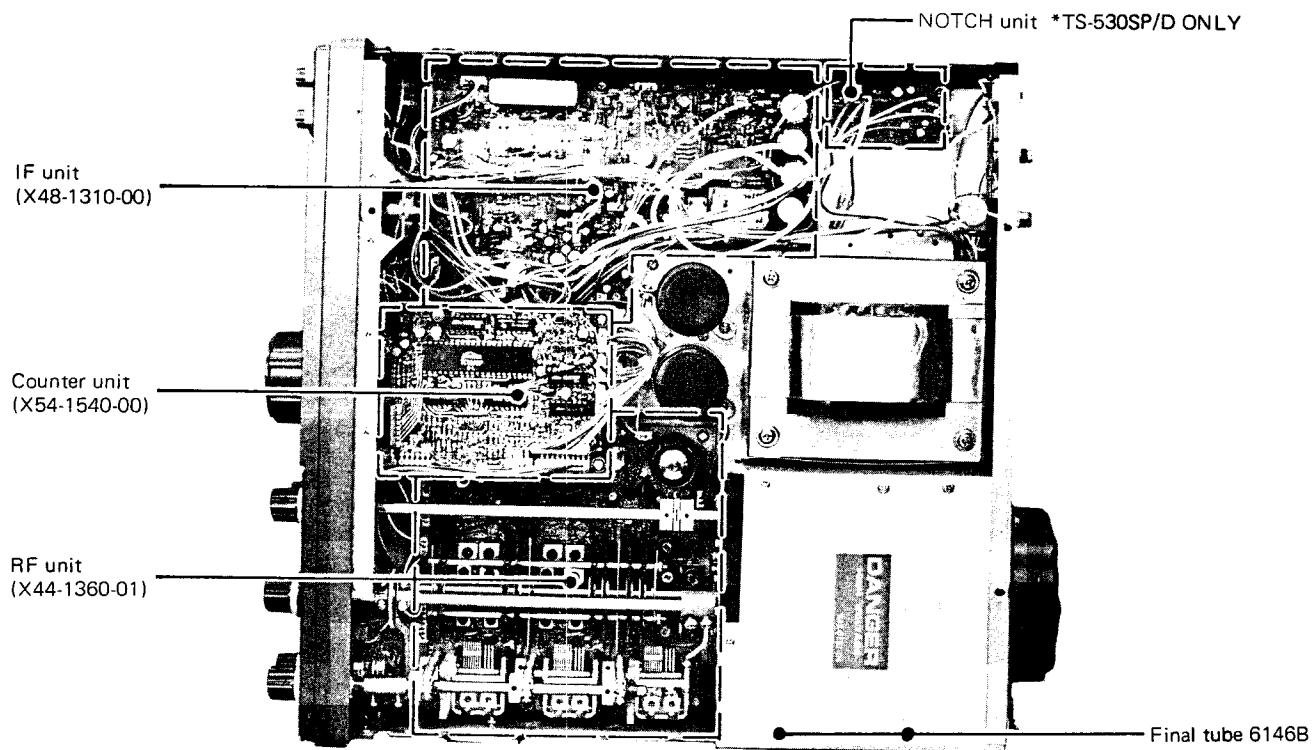


BOTTOM VIEW

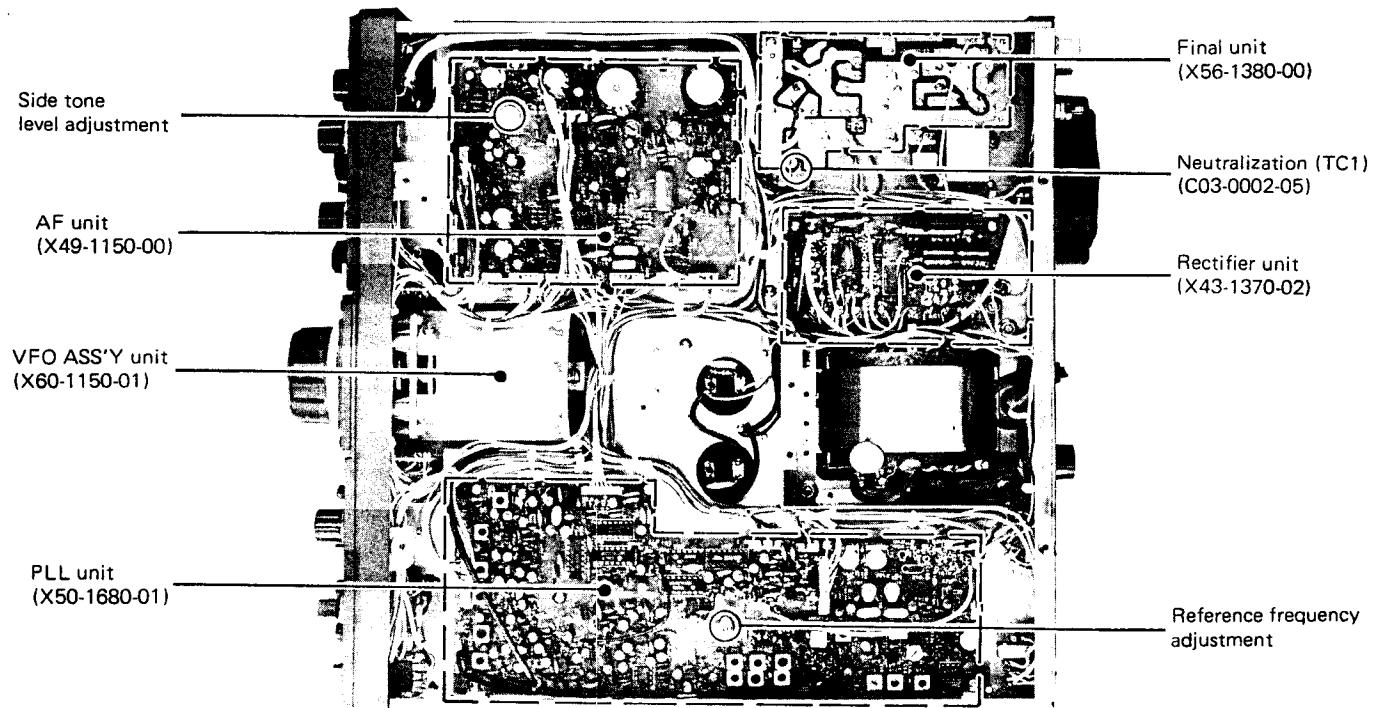

▼ RECTIFIER UNIT (X43-1370-02)


View from component side

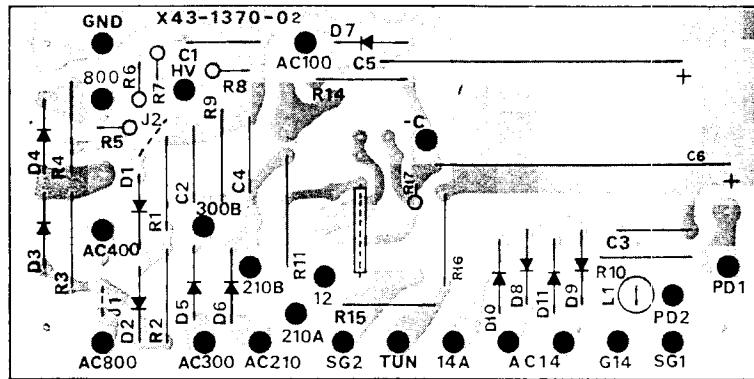



D1~6 : V08J D7 : V06E D8~11 : V03C

▼ ANT RELAY BOARD (J25-3015-04)


View from foil side

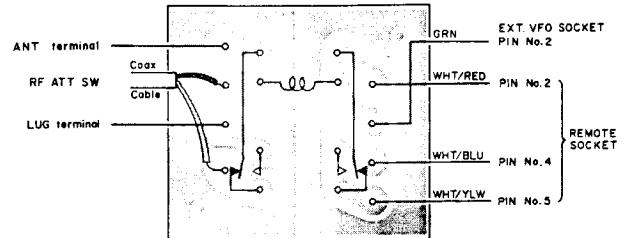



▼ SWITCH BOARD (J25-3016-03) View from component side

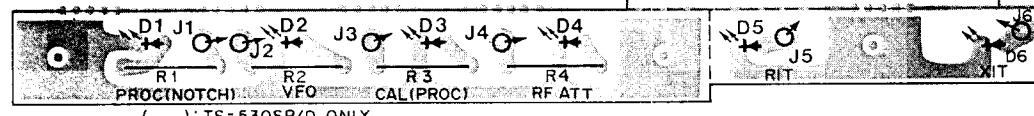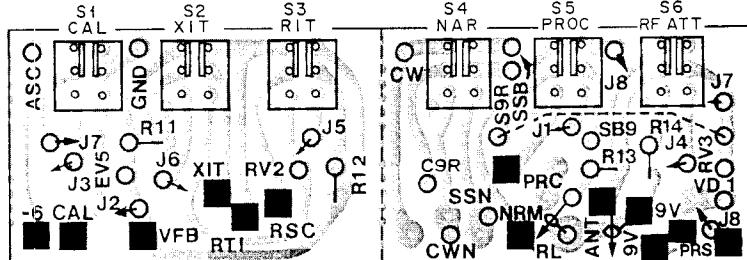

(): TS-530SP/D ONLY

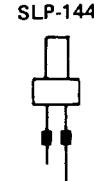


▼ FINAL UNIT (X56-1380-00) View from foil side

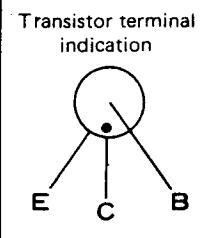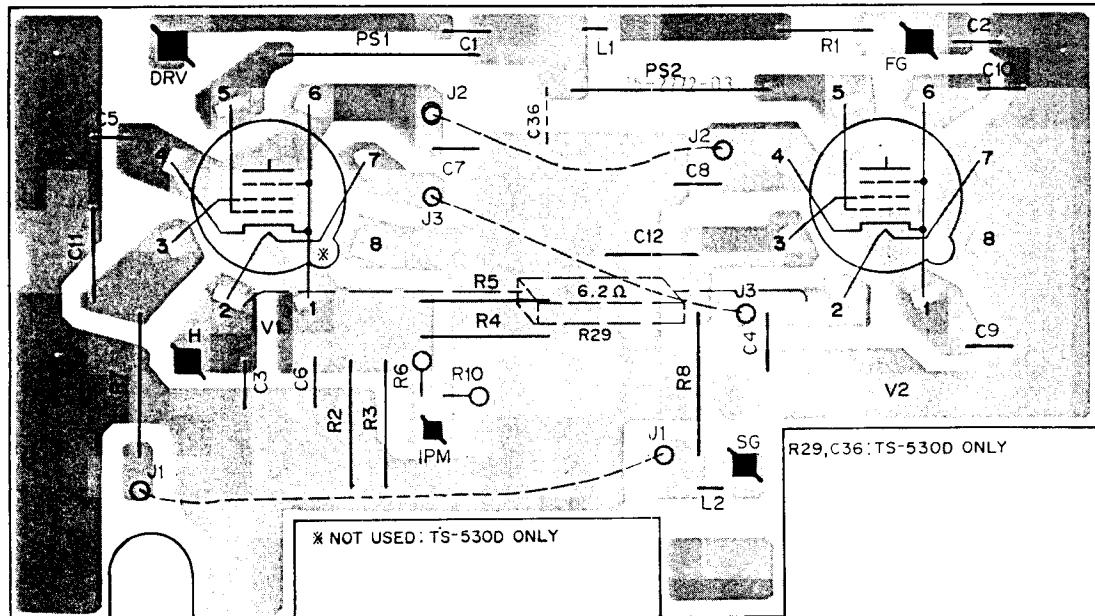

TS-530S PC BOARD VIEWS

▼ VFO UNIT (X40-1170-00)


View from component side

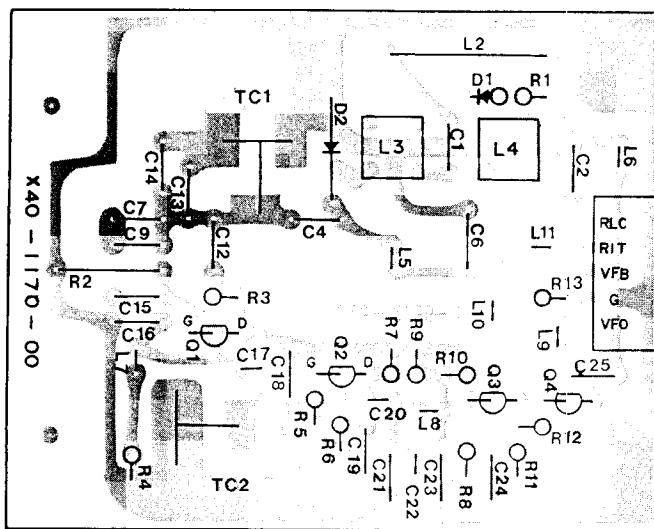

2SA473

2SA562

2SA778A 2SC1815
2SA1015 2SC1959
2SC945 2SC2240
2SC1515

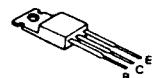


2SC460

2SK19

2SK30A

MB3712

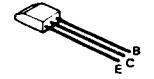

MV-13

V-203





GREEN

YELLOW

▼ AF UNIT (X49-1150-00)

View from component side

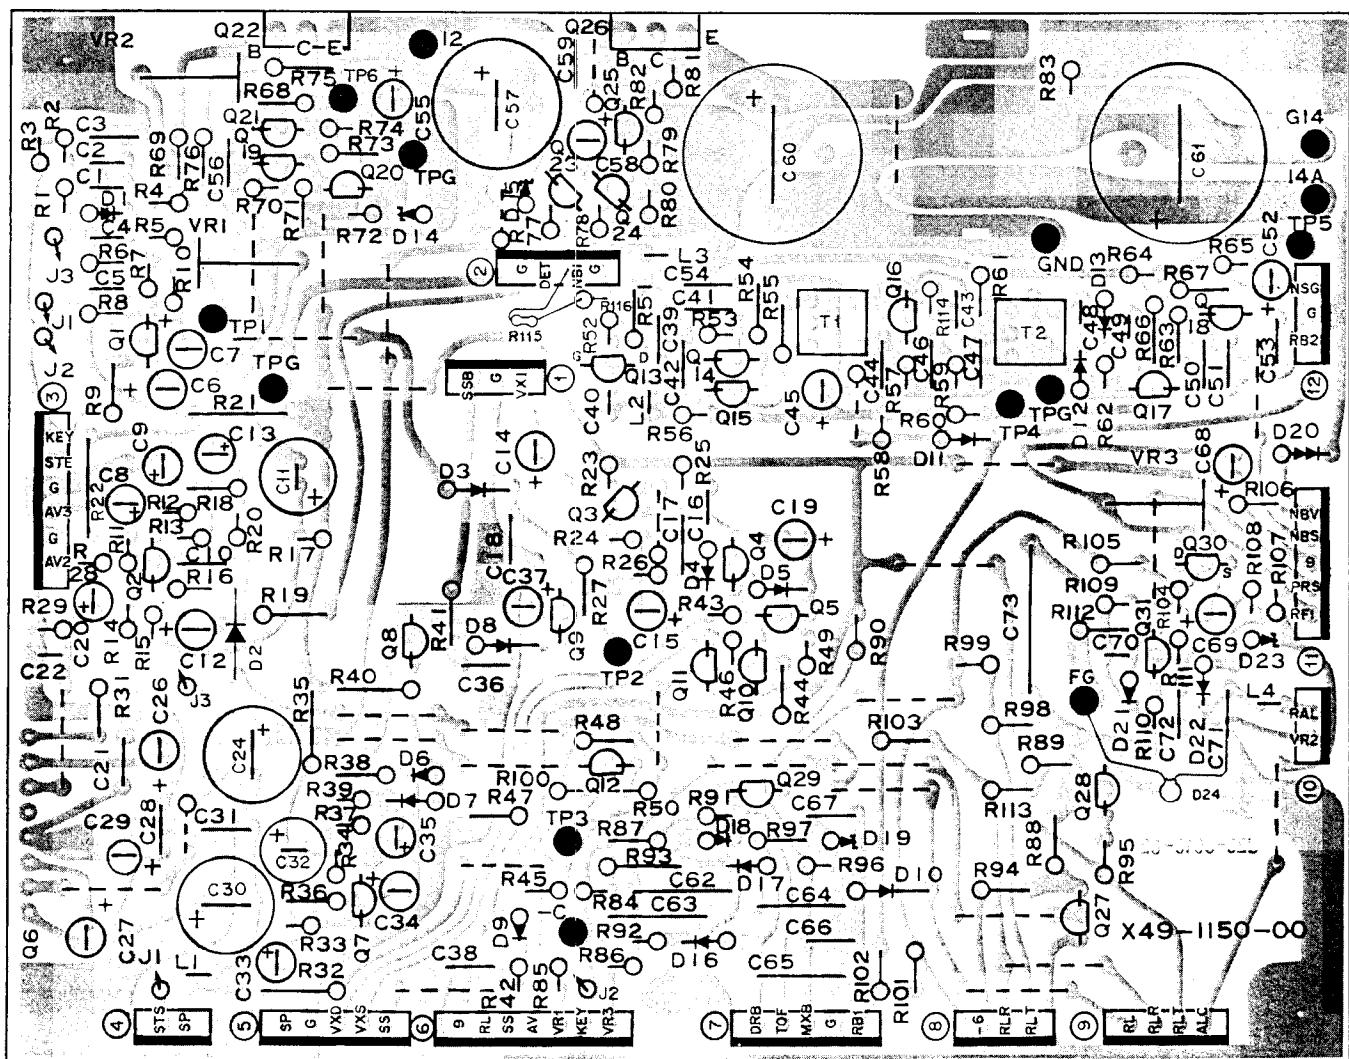


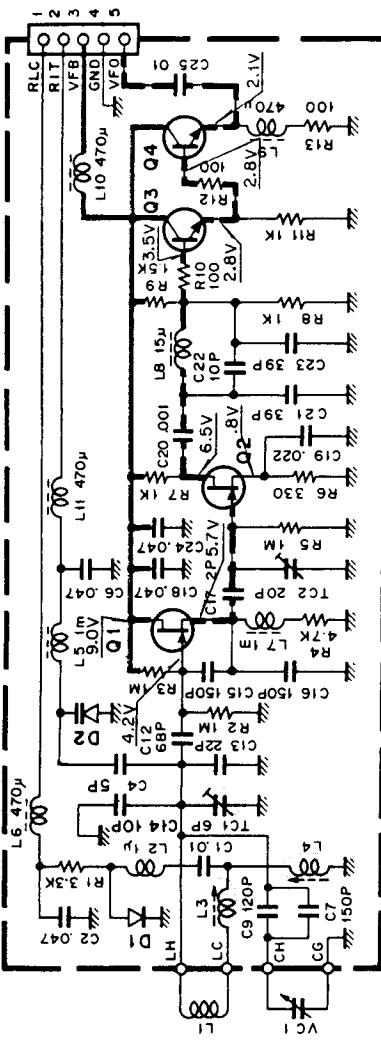

VFO UNIT (X40-1170-00)


Q1, 2 : 2SK19(Y)
Q3 : 2SC460(B)
Q4 : 2SC1959(Y)

▼ AF UNIT (X49-1150-00)

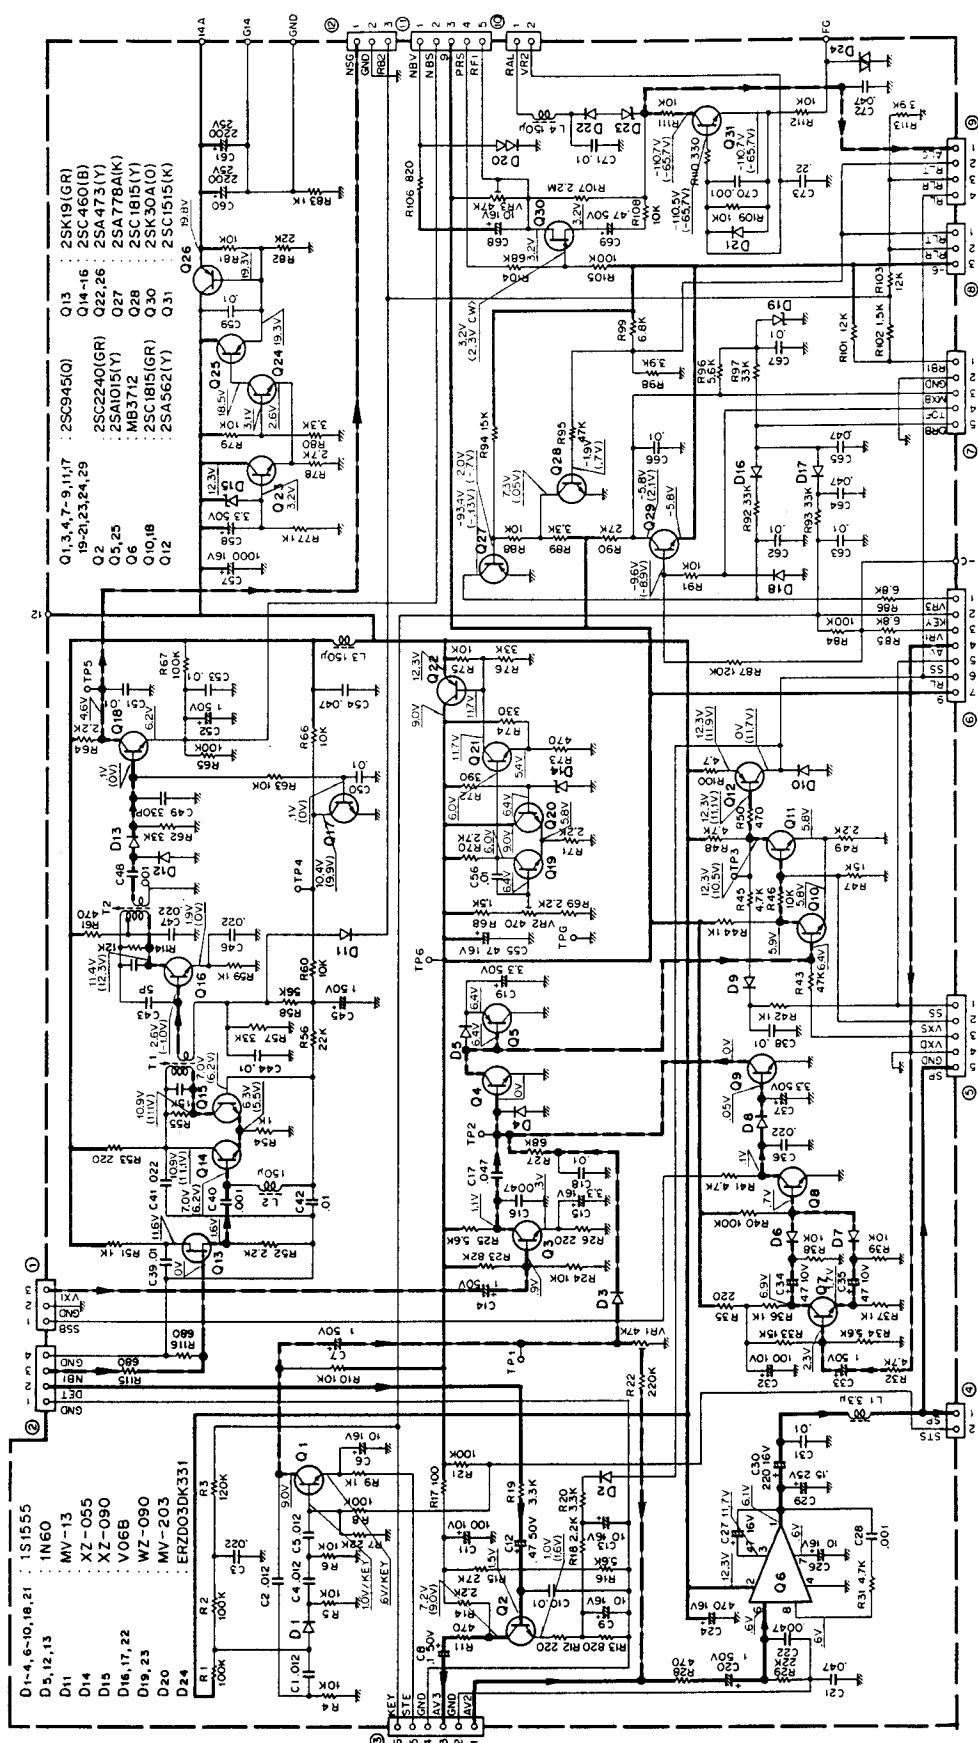


TS-530S PC BOARD VIEW

▼ IF UNIT (X48-1310-00) View from component side

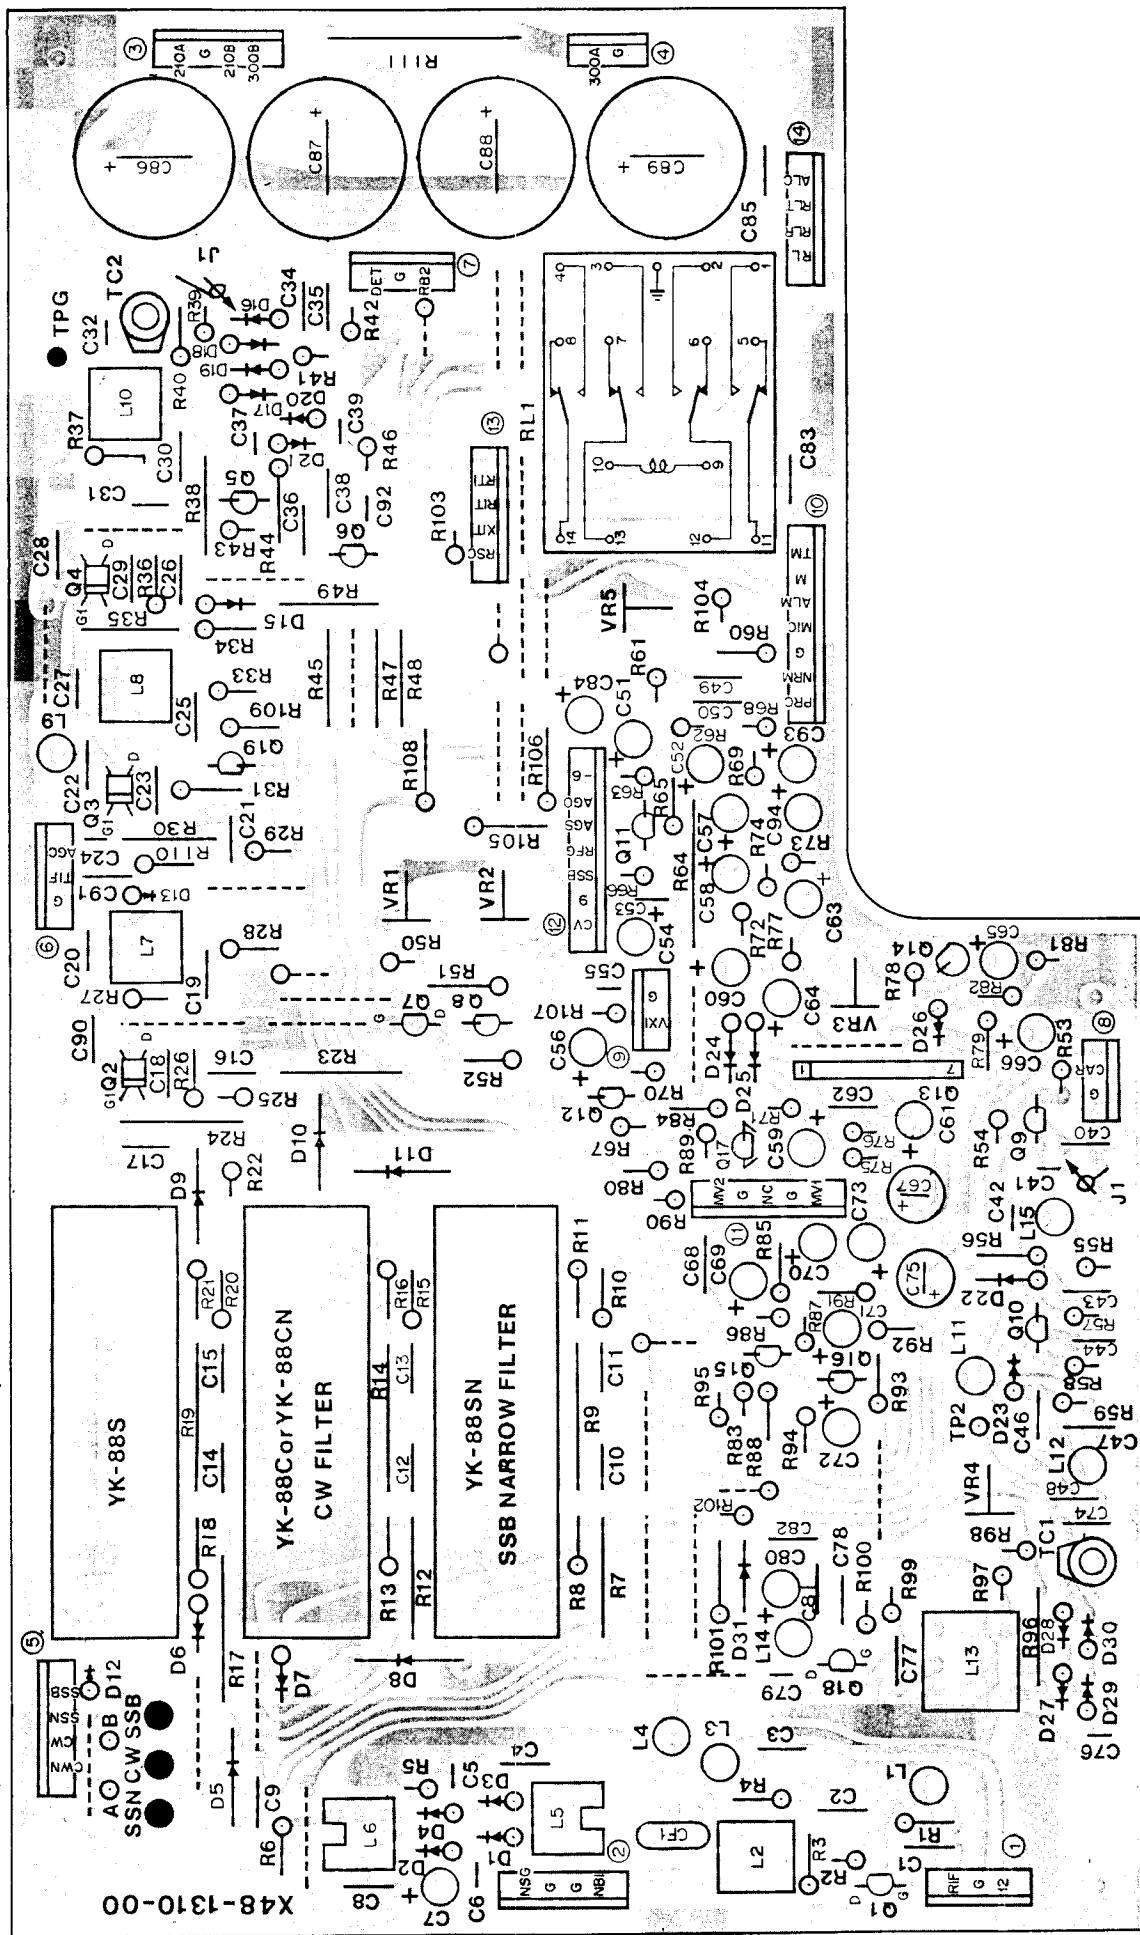

▼ IF UNIT (X48-1310-00)

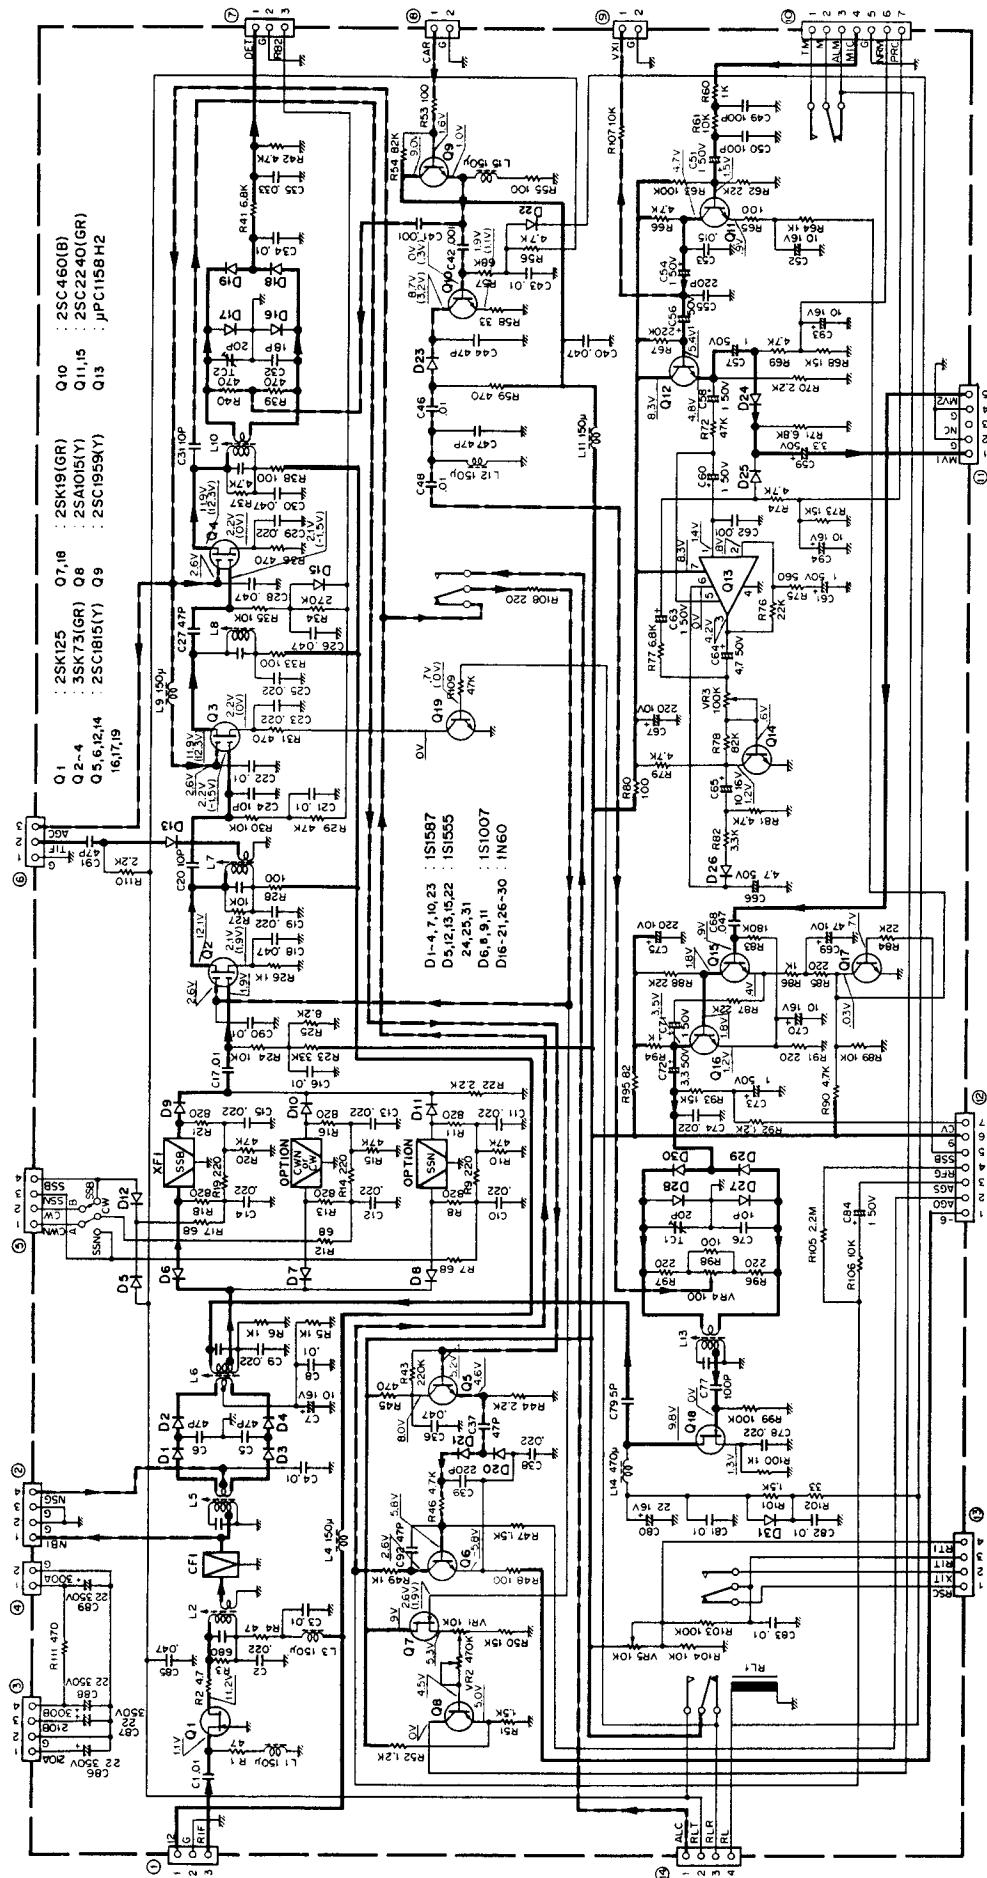


2SA1015
2SC1815
2SC1959
2SC2240

2SC460

2SK19

μ PC1158H2

3SK73

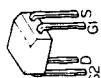


15

2SC1675
2SC1775
2SC1885
2SC1923
2SC1959




▼ PLL UNIT (X50-1680-01) View from component side

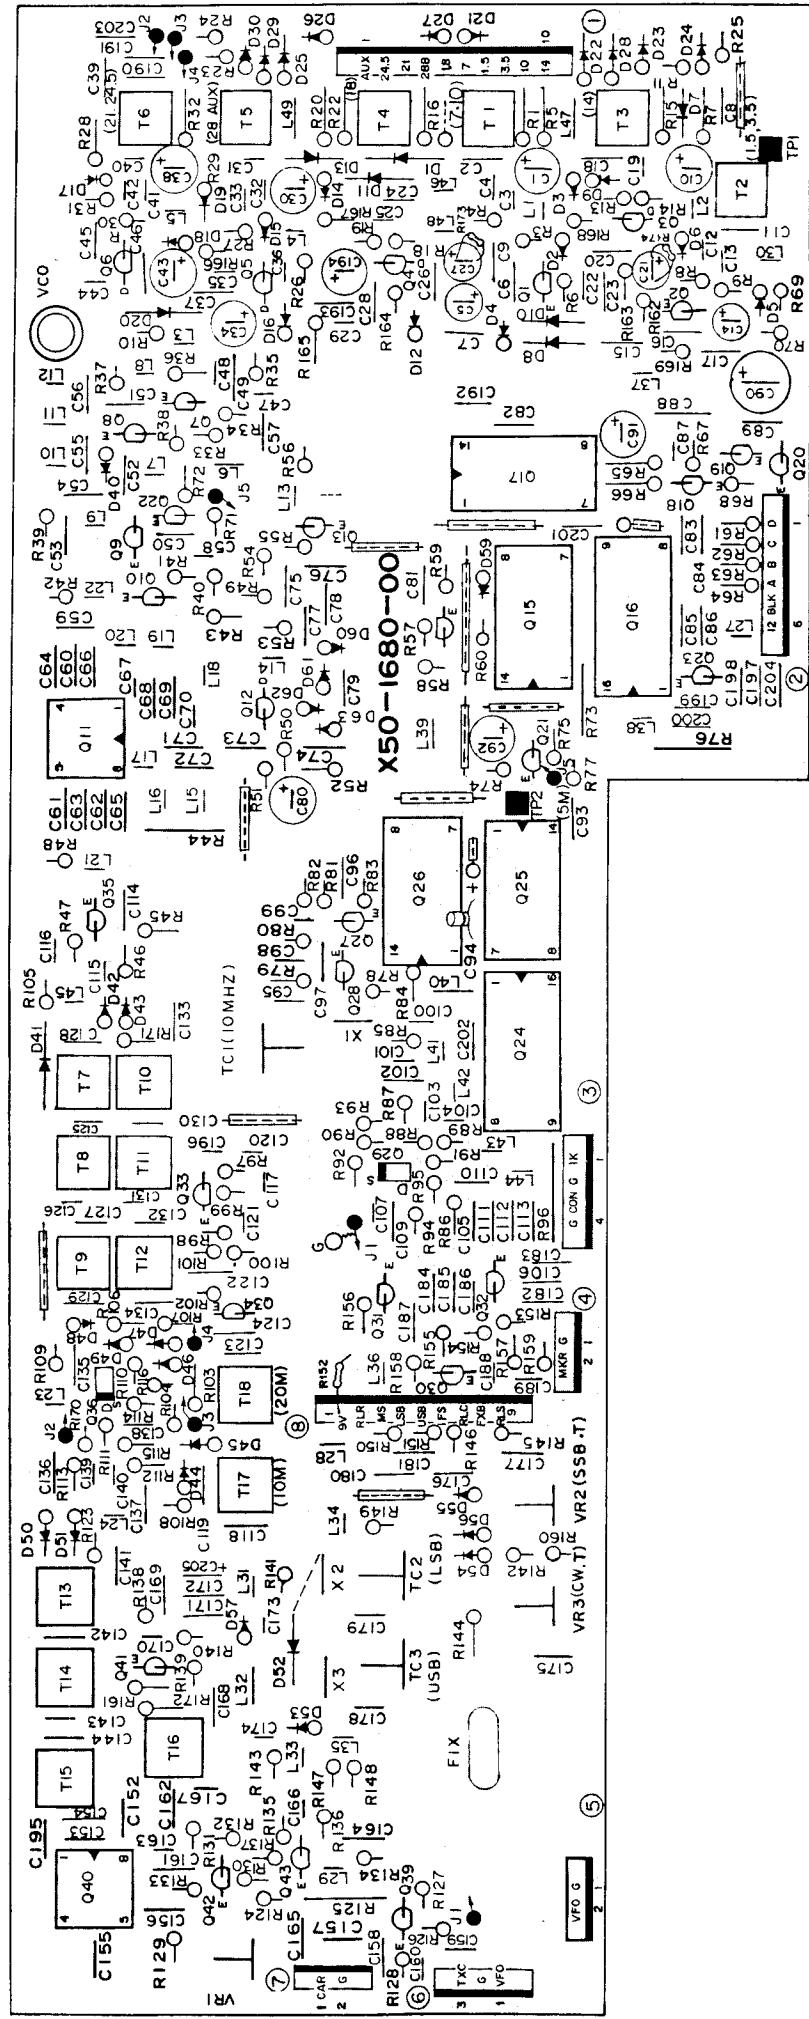


CIRCUIT DIAGRAM TS-530S

▼ PLL UNIT (X50-1680-01)

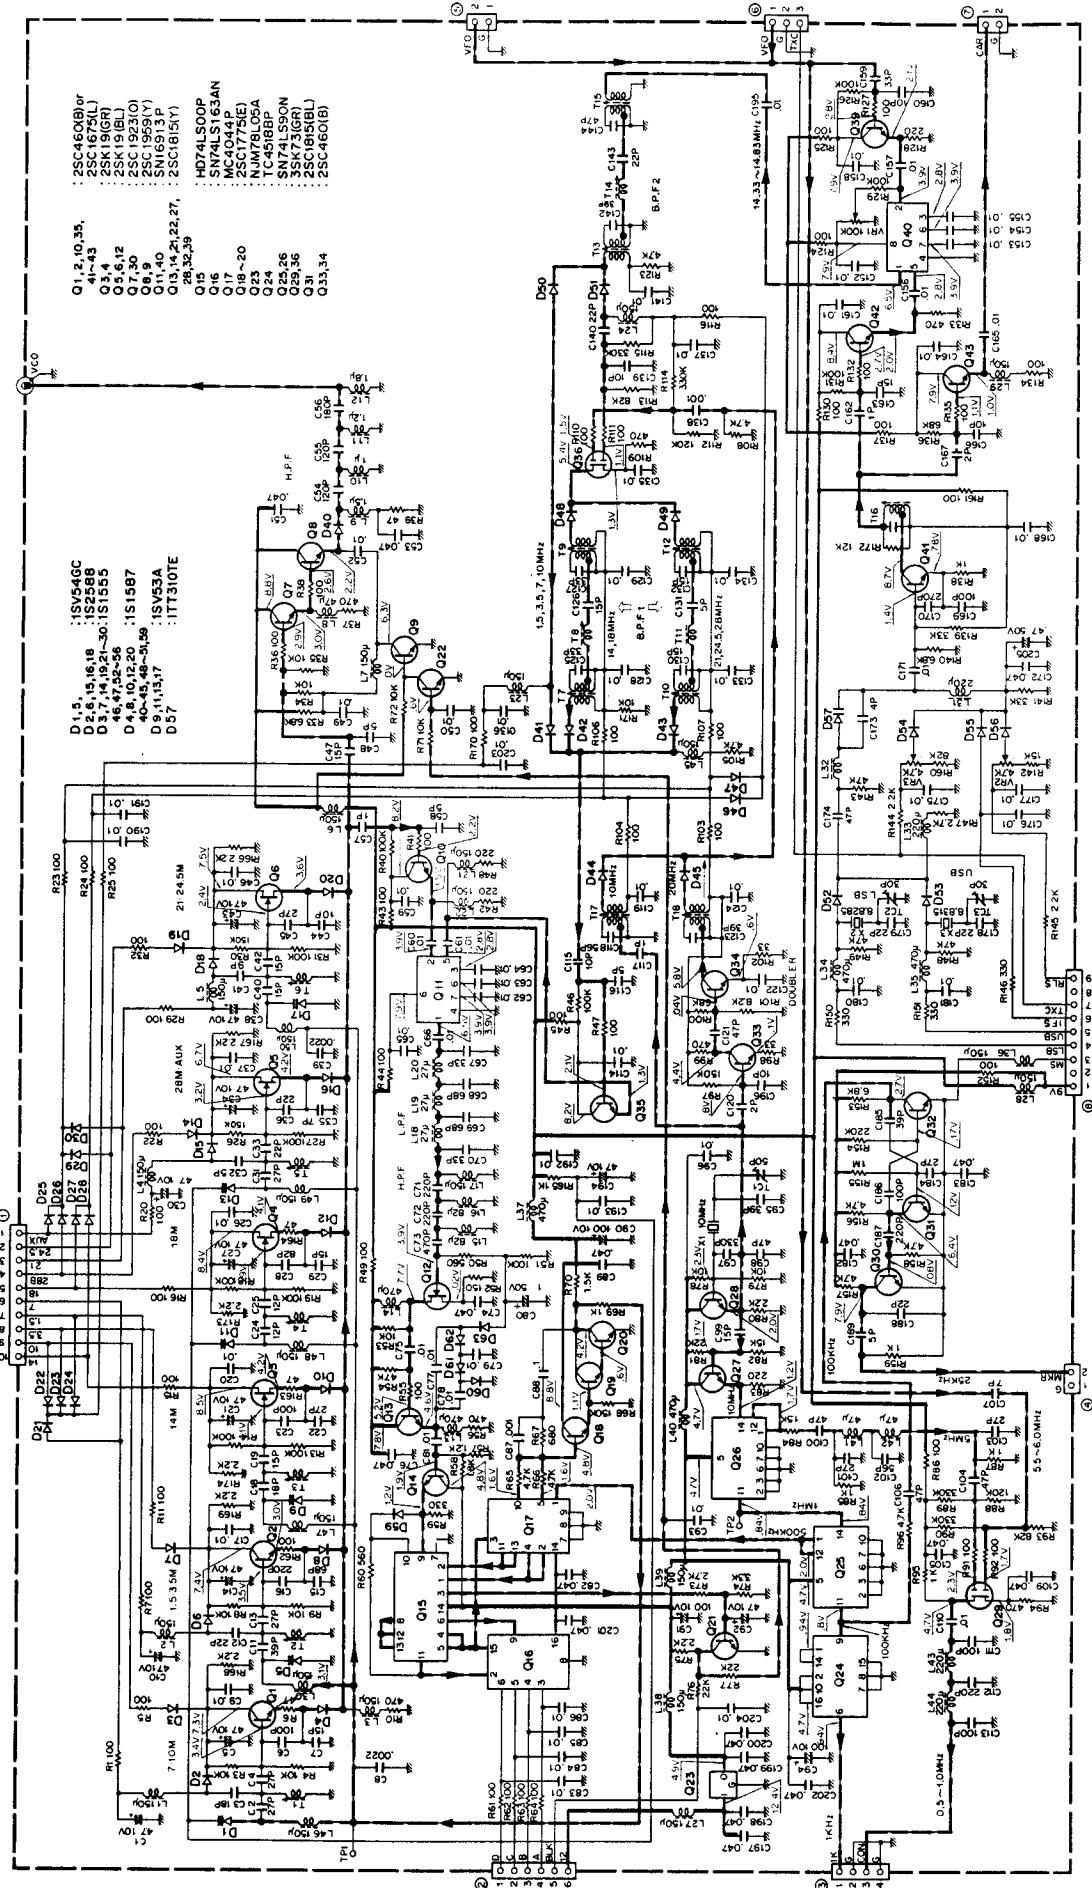


TS-530S PC BOARD VIEW

▼ RF UNIT (X44-1360-01) View from component side

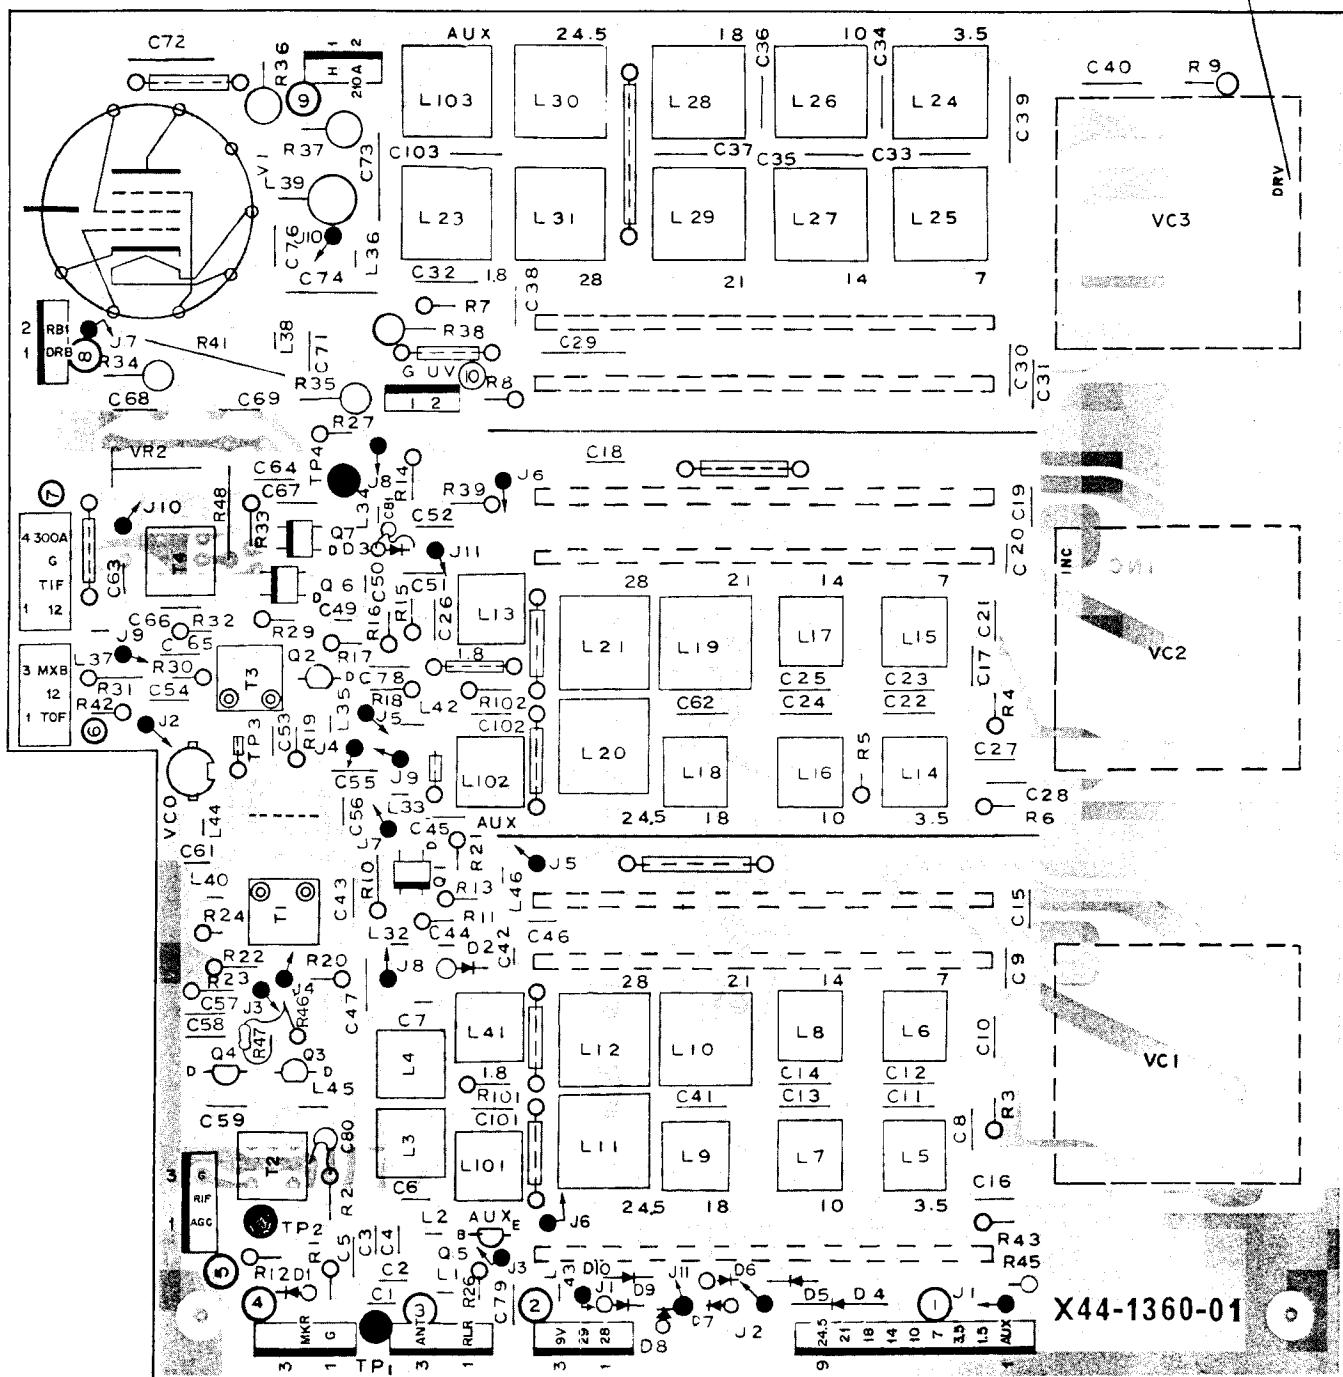


D1, 6, 7 : 3SK73(GR) Q2~4 : 2SK125 Q5 : 2SC1815(Y) D1 : 1S1587 D2, 3 1S2588 D4~10 : 1S1555 V1 : 12BY7A

2SC1815

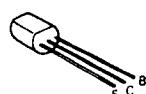


2SK125

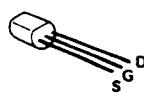

3SK73




Attachment method of T1, T2

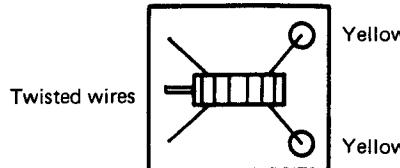


PC BOARD VIEW/CIRCUIT DIAGRAM TS-530S

▼ COUNTER UNIT (X54-1540-00) View from component side

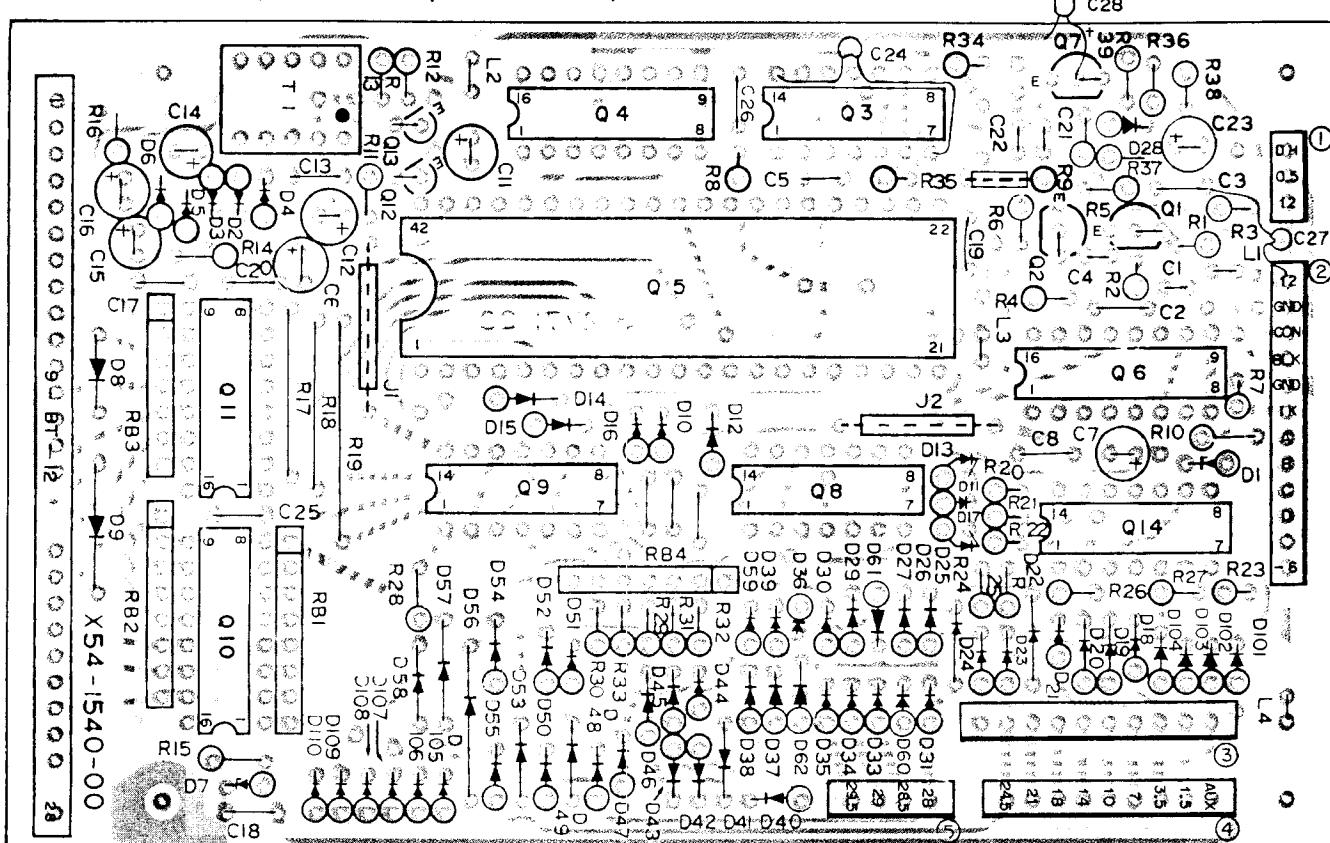

COUNTER UNIT (X54-1540-00)

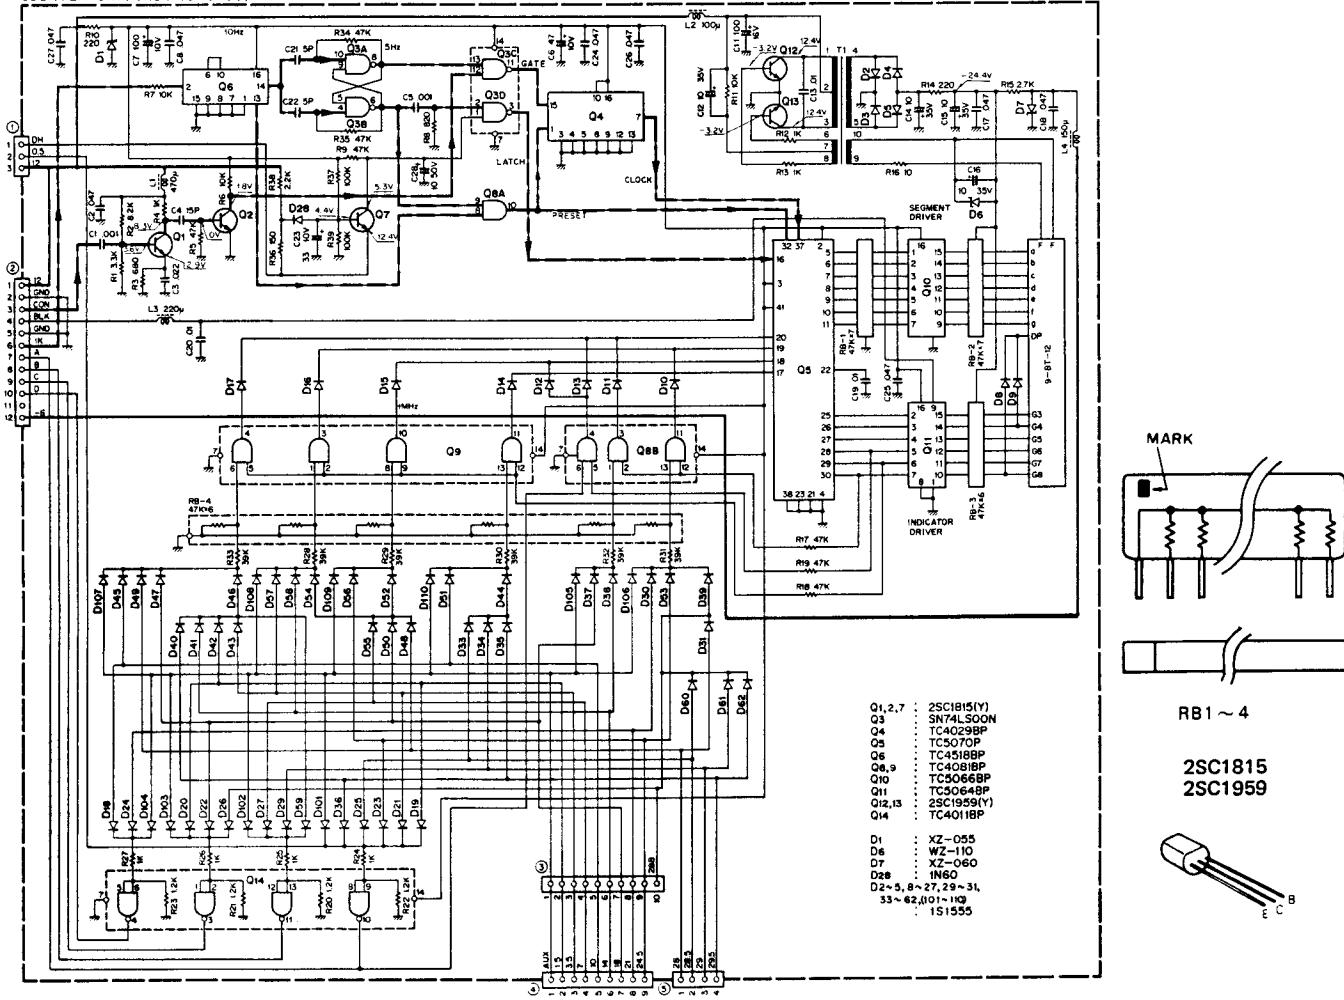

A

B

C

D

E

F

PARTS LIST

Note 1:

K: U.S.A. T: Britain W: Europe X: Australia

Note 2:


Only special type of resistors (example: cement, metal film, etc.) and capacitors (example: electrolytic, tantalum, mylar, temp. coeff. capacitors) are detailed in the PARTS LIST. For the value of all common type components, refer to the schematic diagram of the P.C. board illustration. Resistors not otherwise detailed are carbon type (1/4W or 1/8W). Order carbon resistors and capacitors according to the following example:

A carbon resistor's part number is RD14BY 2E222J.

A ceramic capacitor's number is CK45F1H103Z, CC45TH1H220J.

RESISTOR

1. Type of the carbon resistor

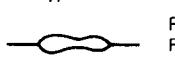

RD14BY

RD14BB (small size)



RD14CY

RD14CB (small size)

2. Wattage

1W → 3A	3W → 3F	5W → 3H
2W → 3D	4W → 3G	

3' = CC45 ○ ...

Ceramic capacitor (type I) temperature coeff. capacitor 1' 3'.

1st word (Color)	C (Black)	L (Red)	P (Orange)	R (Yellow)	S (Green)	T (Blue)	U (Violet)
ppm/°C	0	-80	-150	-220	-330	-470	-750

3 = CK45 ○

Ceramic capacitor (type II) 3

Cord	B	D	E	F
Operating temperature °C	-30 +85	-30 +85	-30 +85	-10 +70

6 = Tolerance

Cord	C	D	G	J	K	M	X	Z	P	No cord	
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10 μF -10 ~ +50	Less than 4.7 μF -10 ~ +75

Less than 10 pF

Cord	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

Abbreviation		Abbreviation	
Cap.	Capacitor	ML	Mylar
C	Ceramic	S	Styren
E	Electrolytic	T	Tantalum
MC	Mica		

3. Resistance value

② ② → means $22 \times 10^2 = 2200\Omega$ (2.2 kΩ)

Example: 221 → 220Ω 223 → 22 kΩ 225 → 2.2 MΩ
222 → 2.2 kΩ 224 → 220 kΩ

4. Tolerance

J = ±5% (Gold) K = ±10% (Silver)

CAPACITORS

Type I

CC	45	TH	1H	220	J	CK	45	F	1H	103	Z
1'	2	3'	4	5	6	1	2	3	4	5	6

1 = Type ceramic, electrolytic, etc. 4 = Voltage rating

2 = Shape round, square, etc. 5 = Value

3 = Temp range 6 = Tolerance

3' = Temp coefficient

Ex. CC45TH = -470 ± 60 ppm/°C

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

5 = Capacitor value

Example: 010 → 1 pF


100 → 10 pF

101 → 100 pF


102 → 1000 pF = 0.001 μF

103 → 0.01 μF

CC45

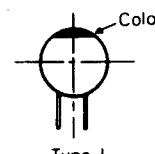

Type I

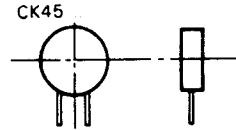

Type II

TS-530 SEMICONDUCTOR

☆: New parts

Item	Name	Parts No.	Re-marks
Diode	1N60	V11-0051-05	
	1S1007	V11-4160-66	
	1S1555	V11-0076-05	
	1S1587	V11-0370-05	
	1S2588	V11-0414-05	
	V03C	V11-0290-05 200V 1.3A	
	V06B	V11-0219-05 100V 1.1A	
	V06E	V11-0285-05 400V 1.1A	
	V08J	V11-0282-05 800V 1.1A	
Varistor	MV-13	V21-0004-05	
	MV-203		

Item	Name	Parts No.	Re-marks
Vari-cap diode	1SV53A	V11-4161-36	
	1SV54GC	V11-4173-46	☆
LED	SLP-144	V11-6172-76	
	TLR-205	V11-3162-96	
Zener diode	WZ-061	V11-0243-05	
	WZ-090	V11-0240-05	
	WZ-110	V11-4161-46	
	XZ-055	V11-4105-50	
	XZ-060	V11-4101-20	
	XZ-090	V11-4167-06	
Surge absorber	ERZD03DK331		

PARTS LIST

Item	Name	Parts No.	Remarks	Ref. No.	Parts No.	Description	Remarks
TS-530S GENERAL							
TR	2SA473(Y) 2SA562(Y) 2SA778A(K) 2SA1015(Y)	V01-0473-06 V01-0032-05 V01-0778-16 V01-1015-06	★	A01-0274-05 A01-0778-11 A01-0779-01 A20-2420-03		Fan case Case (upper) Case (lower) Panel	★
	2SC460(B) 2SC945(Q) 2SC1515(K) 2SC1775(E) 2SC1815(BL) 2SC1815(GR)	V03-0079-05 V03-0945-06 V03-0450-05 V03-1775-06 V03-1815-26 V03-1815-16		B03-0519-04 B03-0520-04 B05-0708-04 B09-0003-05		Switch mask Panel Switch mask Panel Speaker grill cloth Coupling Plate	★
	2SC1815(Y) 2SC1923(O) 2SC1959(Y) 2SC2240(GR)	V03-1815-06 V03-1923-06 V03-1959-06 V03-2240-06		B10-0631-04 B10-0639-04 B21-0501-04 B30-0817-15		Front glass (small) Front glass (large) Pointer Plate Pilot lamp Meter 12V, 80mA	★
FET	2SK19(BL) 2SK19(GR) 2SK19(Y) 2SK30A(O) 2SK125	V09-0111-05 V09-0012-05 V09-0011-05 V09-0056-05 V09-0136-10		B31-0630-05 B42-1702-04 B43-0651-04 B43-0653-04 B46-0058-10		Meter Adj. seal Name plate T Name plate K, W, X, M	★ ★ ★
	3SK73(GR)	V09-1002-46		B50-2791-00 B50-2792-00 B58-0625-00		Warranty card K Operating manual K, W, X, M Operating manual T	★ ★ ★
IC	74LS163N	V30-1037-06		B58-0631-00		Transmit warning paper Warning paper W, T, X, M	
	HD74LS00P HD74LS90P HD74LS163P	V30-0192-16 V30-1083-06 V30-1047-06	★	C7 C8 C9 C10 C12 C13 C14 C15 C16 C17 C18, 19 C20 C22, 24 C26 C30 C31	C90-0186-05 C91-0079-05 C91-0401-05 C91-0017-05 CC45SL2H101J CC45SL2H271J CC45SL2H681J CC45SL2H121J CC45SL2H821J CC45SL2H102J C90-0300-05 C91-0079-05 C90-0327-05 C91-0467-05 CC45SL1H030C CC45SL2H101J	C 0.001μF 3 kV C 0.01μF 2 kV C 100pF 3 kV C 390pF 3 kV C 100pF 500V C 270pF 500V S/SP C 680pF 500V S/SP C 120pF 500V C 820pF 500V C 0.001μF 500V C 470pF AC150V C 0.01μF 2 kV E 100μF 500V C 22pF 3 kV C 3pF ±0.25pF C 100pF 500V	
	MB3712 MC4044P	V30-1231-16 V30-0173-05	★	TC1	C03-0002-05	Trimmer	
	NJM78L05A	V30-1149-06		VC1 VC2	C03-0060-05 C01-0084-05	Variable cap. (A) FINAL Variable cap. (B) LOAD	
	SN74LS00N SN74LS90N SN74LS163AN SN16913P	V30-1005-66 V30-1005-26 V30-1154-06 V30-1048-06			D22-0402-05 D22-0405-04 D22-0407-04 D32-0051-04 D32-0075-04 D40-0613-05	Universal coupling BAND LOAD Coupling PLATE Shaft coupling ø6 Shaft stopper M3 x 10 Switch stopper W, T, X, M Vernier mechanism	
Tube	TC4011BP TC4029BP TC4081BP TC4518BP TC5064BP TC5066BP TC5070P μPC1158H2	V30-0301-70 V30-1051-06 V30-0299-10 V30-1039-06 V30-1056-06 V30-1057-06 V30-1172-06 V11-1177-26			E04-0152-05 E06-0451-15 E06-0751-05 E06-0851-05 E07-0403-05 E07-0751-05 E07-0851-05 E11-0404-05 E11-0410-05 E12-0001-05	UHF type receptacle ANT 4P male socket MIC 7P DIN socket REMOTE 8P DIN socket EXT. VFO 4P MIC plug (accessory) W, T, X, M 7P DIN plug (accessory) 8P DIN plug EXT. VFO 3P phone jack KEY, PHONE Phone jack EXT. SP Phone plug (accessory) EXT. SP	
	12BY7A 6146B S2001A	V40-0114-00 V40-0138-00 K W, T, X, M					

PARTS LIST

Ref. No.	Parts No.	Description	Re-marks	Ref. No.	Parts No.	Description	Re-marks	
	E22-0207-05	Lug plate			N14-0115-05	Flange nut	GND	
	E22-0472-05	Lug plate Final	☆		N14-0509-05	Wing nut	GND	
	E23-0046-04	Square terminal			N14-0517-05	Cap nut	BIAS	
	E30-0181-05	AC cord UL/CSA	K, M		N30-4012-46	Round screw	Foot (large)	
	E30-0185-05	AC cord SAA	X		N30-4016-46	Round screw	GND	
	E30-0585-05	AC cord CEE	W		N30-4025-46	Round screw	Foot (accessory)	
	E30-0602-05	AC cord 3P	T		N33-3006-41	Round flat screw	SP	
	E31-2086-05	Coax cable with plug			N35-3008-45	Bind screw	Foot (small)	
	E90-0004-15	Plate cap			N35-4006-41	Bind screw	Case	
	F05-4022-05	Fuse 4A	W, T, X, M		N87-4012-46	Self tapping screw	Foot (large)	
	F05-6021-05	Fuse 6A	K, M		N89-3006-46	Bind tapping screw	Final cover	
	F09-0041-05	Fan			N99-0306-04	Hex. head screw	VFO	
	G01-0801-04	Gnd spring		R22	RC05GF2H221J	Solid	220Ω 1/2W	
	G09-0410-05	D spring φ6		R24	RC05GF3A103K	Solid	10kΩ 1W	
	G13-0633-14	Cushion Meter		R25,26	RC05GF2H474J	Solid	470kΩ 1/2W	
	G13-0639-04	Cushion Indicating tube		R28	RC05GF2H330J	Solid	33Ω 1/2W	
	G53-0502-04	Packing Case side			VR1	R01-3414-05	Pot. 10kΩ(A) AF	☆
	G53-0512-04	Packing Panel			VR2	R01-3415-05	Pot. 10kΩ(B) RF	☆
	H01-2741-04	Carton case (inside)	K, W, X, M	☆	VR3	R01-3417-05	Pot. 10kΩ(F) IF SHIFT	☆
	H01-2742-04	Carton case (inside)	T	☆	VR4	R01-2405-05	Pot. 5kΩ(B) RIT/XIT	☆
	H03-1797-04	Carton case (outside)		☆	VR5	R01-3414-05	Pot. 10kΩ(A) MIC	☆
	H10-2539-02	Packing fixture (F)		☆	VR6	R01-3416-05	Pot. 10kΩ(B) CAR	☆
	H10-2540-02	Packing fixture (R)			VR7	R01-4408-05	Pot. 50kΩ(B) VOX GAIN	☆
	H20-0439-03	Protective cover			VR8	R01-0404-05	Pot. 300Ω(B) NB	
	H25-0120-04	Protective bag			VR9	R01-6401-05	Pot. 250kΩ(B) DELAY	
	J02-0022-05	Foot (small)			VR10	R01-0405-05	Pot. 300Ω(B) ANTI	
	J02-0049-14	Foot (large)			VR11,12	R01-3411-05	Pot. 10kΩ(B) RF OUT, BIAS	
	J13-0033-15	Fuse holder						
	J25-3015-04	PC board Relay		☆	S1~6	S40-2419-05	Push switch PC board type	
	J32-0029-04	Hex. boss Relay, PLL			S7	S40-2403-05	Push switch +0.5 SHIFT	
	J32-0159-04	Hex. boss Final		☆	S8,9	S36-1403-05	See saw switch HEATER, POWER	☆
	J41-0006-05	Cord bushing	K, M		S11	S01-1423-05	Rotary switch AGC	☆
	J41-0024-15	Cord bushing	W, T, X		S13	S01-1427-05	Rotary switch METER	☆
	J42-0409-04	Knob bushing +0.5 SHIFT		☆	S14,16	S40-2415-05	Push switch Lead type	
	J61-0019-05	Vinyle tie			S17	S33-2403-05	Paddle switch STBY	☆
	J61-0401-05	Nylon band			S18	S01-2429-05	Rotary switch MODE	☆
	J61-0402-05	Free up belt	W		S20	S31-2007-05	Slide switch SG	
	K01-0406-05	Handle		☆	S22	S01-3406-05	Rotary switch FINAL	
	K21-0723-04	Pointer knob BAND			S23	S31-2027-05	Slide switch AC volt W,T,X,M	
	K23-0738-04	Knob 1 METER, AGC						
	K23-0745-04	Knob VOX, NB, CAR		☆	RL1	S51-2407-05	Relay	
	K27-0414-04	Push knob				T07-0215-05	Speaker	
	K29-0713-04	Push knob +0.5 SHIFT				T40-0022-05	Motor FAN	☆
	K29-0715-04	Pointer knob MODE						
	K29-0737-04	Knob 5 PLATE				X43-1370-02	Rectifier unit	☆
	K29-0738-04	Knob 6				X44-1360-01	RF unit	☆
	K29-0744-04	Paddle knob STBY		☆		X48-1310-00	IF unit	☆
L1	L40-6891-13	Choke coil 6.8μH				X49-1150-00	AF unit	☆
L2	L33-0635-05	Final choke				X50-1680-01	PLL unit	☆
L3	L34-1004-05	Final coil B 28 MHz				X54-1540-00	Counter unit	☆
L4	L34-0560-25	Final coil A				X56-1380-00	Final unit	
L5	L33-0259-05	Choke coil 470μH				X60-1150-01	VFO ass'y unit	☆
T1	L01-8106-15	Power trans						
PS1,2	L39-0046-05	PS coil PLATE						
	N09-0256-05	Gnd screw						

PARTS LIST

Ref. No.	Parts No.	Description	Re-marks
RECTIFIER UNIT (X43-1370-02)			
C5,6	CE02W2C330	E 33μF 160V	
	E23-0047-04	Square terminal	
	J31-0502-04	PC board collar	
	J42-0404-05	PC board bushing	
L1	L40-1511-03	Ferri-inductor 150μH	
R1~4	RC05GF2H474J	Solid 470kΩ 1/2W	
R9	RC05GF2H334J	Solid 330kΩ 1/2W	
R10	RC05GF2H183J	Solid 18kΩ 1/2W	
R11	RS14AB3A471J	Metal film 470Ω 1W	
R14	RC05GF2H102J	Solid 1kΩ 1/2W	
R15	RC05GF2H563J	Solid 56kΩ 1/2W	
R16	RC05GF2H563J	Solid 56kΩ 1/2W	
	R92-0150-05	Short jumper	
RF UNIT (X44-1360-01)			
C1	CQ92M1H182K	ML 0.0018μF	
C4	CQ92M1H152K	ML 0.0015μF	
C6	CC45RH1H101J	C 100pF	
C7	CQ09S1H122J	S 0.0012μF	
C8	CC45RH1H221J	C 220pF	
C9	CC45RH1H330J	C 33pF	
C10	CC45RH1H121J	C 120pF	
C11	CC45RH1H560J	C 56pF	
C12	CC45RH1H330J	C 33pF	
C13	CC45RH1H101J	C 100pF	
C14,15	CC45RH1H330J	C 33pF	
C16	CC45SL1H561J	C 560pF	
C17	CC45RH1H221J	C 220pF	
C19	CC45RH1H150J	C 15pF	
C20	CC45RH1H330J	C 33pF	
C21	CC45RH1H121J	C 120pF	
C22	CC45RH1H560J	C 56pF	
C23	CC45RH1H330J	C 33pF	
C24	CC45RH1H101J	C 100pF	
C25	CC45RH1H330J	C 33pF	
C26	C91-0456-05	C 0.047μF	
C28	CC45SL1H561J	C 560pF	
C30	CC45RH2H330J	C 33pF 500V	
C31	CC45RH2H121J	C 120pF 500V	
C32	CC45RH2H181J	C 180pF 500V	
C33	CC45RH2H470J	C 47pF 500V	
C34	CC45RH2H270J	C 27pF 500V	
C35	CC45RH2H101J	C 100pF 500V	
C36	CC45RH2H390J	C 39pF 500V	
C37	CC45RH2H180J	C 18pF 500V	
C38	CC45SL2H100D	C 10pF ±0.5pF 500V	
C40	CC45SL2H561JTD	C 560pF 500V	
C41	CC45RH1H150J	C 15pF	
C42	CC45SL1H101J	C 100pF	
C45,46	C91-0456-05	C 0.047μF	
C49	CC45SL1H050C	C 5pF ±0.25pF	
C50	CC45SL1H220J	C 22pF	
C55,57,58	C91-0456-05	C 0.047μF	
C61	CC45SL1H470J	C 47pF	

Ref. No.	Parts No.	Description	Re-marks
C62	CC45RH1H150J	C 15pF	
C63	CC45SL1H151J	C 150pF	
C66,67	C91-0456-05	C 0.047μF	
C69	CC45SL2H151J	C 150pF 500V	
C78	C91-0456-05	C 0.047μF	
VC1~3	C01-0127-15	Variable capacitor	
	D13-0404-04	Sprocket large	
	D13-0405-04	Sprocket small	
	D16-0403-04	Chain ass'y	
	E04-0154-05	Coax connector	
	E10-1902-05	9P tube socket	
	E23-0047-04	Square terminal	
	E40-0273-05	Mini connect wafer 2P	
	E40-0373-05	Mini connect wafer 3P	
	E40-0374-05	Mini connect wafer 3P L type	
	E40-0474-05	Mini connect wafer 4P L type	
	E40-0973-05	Mini connect wafer 9P	
	F11-0249-05	Tube shield	
	J31-0502-04	PC board collar	
	J42-0404-05	PC board bushing	
L1	L40-2792-02	Ferri-inductor 2.7μH	
L2	L40-4791-02	Ferri-inductor 4.7μH	
L3	L34-0559-05	Trap coil	
L4	L34-0558-05	Trap coil	
L5	L34-0930-05	Tuning coil 3.5 MHz	
L6	L34-0931-05	Tuning coil 7 MHz	
L7	L34-0932-05	Tuning coil 10 MHz	
L8	L34-0933-05	Tuning coil 14 MHz	
L9	L34-0934-05	Tuning coil 18 MHz	
L10	L34-0990-05	Tuning coil 21 MHz	
L11	L34-0935-05	Tuning coil 24.5 MHz	
L12	L34-0995-05	Tuning coil 28 MHz	
L13	L34-0936-05	Tuning coil MIX 1.5 MHz	
L14	L34-0930-05	Tuning coil 3.5 MHz	
L15	L34-0931-05	Tuning coil 7 MHz	
L16	L34-0932-05	Tuning coil 10 MHz	
L17	L34-0933-05	Tuning coil 14 MHz	
L18	L34-0934-05	Tuning coil 18 MHz	
L19	L34-0990-05	Tuning coil 21 MHz	
L20	L34-0935-05	Tuning coil 24.5 MHz	
L21	L34-0995-05	Tuning coil 28 MHz	
L23	L34-0552-15	Tuning coil 1.5 MHz	
L24	L34-0553-15	Tuning coil 3.5 MHz	
L25	L34-0554-05	Tuning coil 7 MHz	
L26	L34-0937-05	Tuning coil 10 MHz	
L27	L34-0555-05	Tuning coil 14 MHz	
L28	L34-0938-05	Tuning coil 18 MHz	
L29	L34-0556-05	Tuning coil 21 MHz	
L30	L34-0939-05	Tuning coil 24.5 MHz	
L31	L34-0557-05	Tuning coil 28 MHz	
L32~34	L40-4711-03	Ferri-inductor 470μH	
L35	L40-1511-03	Ferri-inductor 150μH	
L36	L40-4711-03	Ferri-inductor 470μH	
L37	L40-1511-03	Ferri-inductor 150μH	
L39	L33-0074-05	Heater choke 0.3μH	
L40	L40-4782-02	Ferri-inductor 0.47μH	
L41	L34-2004-05	Tuning coil ANT 1.5 MHz	
L42	L40-4711-03	Ferri-inductor 470μH	
L43	L40-1511-03	Ferri-inductor 150μH	

PARTS LIST

Ref. No.	Parts No.	Description		Re-marks	Ref. No.	Parts No.	Description		Re-marks
L44	L40-2282-01	Ferri-inductor	0.22μH		C76	CC45UJ1H100D	C	10pF ±0.5pF	
L45,46	L40-1511-03	Ferri-inductor	150μH		C77	CC45SL1H101J	C	100pF	
T1	L19-0303-05	Wide bandwidth trans			C78	C91-0457-05	C	0.022μF	
T2	L30-0509-05	IFT			C79	CC45CH1H050C	C	5pF ±0.25pF	
T3	L19-0303-05	Wide bandwidth trans			C80	CE04W1C220M	E	22μF 16V	
T4	L30-0509-05	IFT			C84	CE04W1H010M	E	1μF 50V	
R34	RC05GF2H104J	Solid	100kΩ 1/2W		C85	C91-0456-05	C	0.047μF	
R35	RC05GF2H151J	Solid	150Ω 1/2W		C86~89	CE04W2V220	E	22μF 350V	
R36	RC05GF2H104J	Solid	100kΩ 1/2W		C91,92	CC45SL1H470J	C	47pF	
R37	RS14AB3A332J	Metal film	3.3kΩ 1W		C93,94	CE04W1C100M	E	10μF 16V	
R38	RC05GF2H474J	Solid	470kΩ 1/2W		TC1,2	C05-0030-15	Ceramic trimmer 20pF		
VR2	R12-6404-05	Trim. pot 470kΩ				E23-0401-05	Round terminal		
	R92-0150-05	Short jumper				E40-0273-05	Mini connect wafer 2P		
	S29-7401-05	Rotary wafer ass'y				E40-0373-05	Mini connect wafer 3P		
IF UNIT (X48-1310-00)						E40-0473-05	Mini connect wafer 4P		
						E40-0573-05	Mini connect wafer 5P		
						E40-0773-05	Mini connect wafer 7P		
						J31-0502-04	PC board collar		
						J42-0404-05	PC board bushing		
C2	C91-0457-05	C	0.022μF		L1	L40-1511-03	Ferri-inductor	150μH	
C5,6	CC45SL1H470J	C	47pF		L2	L34-0940-05	Tuning coil		
C7	CE04W1C100M	E	10μF 16V		L3,4	L40-1511-03	Ferri-inductor	150μH	
C9~15	C91-0457-05	C	0.022μF		L5	L34-0942-05	Tuning coil		
C18	C91-0456-05	C	0.047μF		L6	L34-0997-05	Tuning coil		
C19	C91-0457-05	C	0.022μF		L7,8	L34-0535-05	Tuning coil		
C20	CC45SL1H100D	C	10pF ±0.5pF		L9	L40-1511-03	Ferri-inductor	150μH	
C23	C91-0457-05	C	0.022μF		L10	L34-0536-05	Tuning coil		
C24	CC45SL1H100D	C	10pF ±0.5pF		L11,12	L40-1511-03	Ferri-inductor	150μH	
C25	C91-0457-05	C	0.022μF		L13	L34-0567-05	Tuning coil	BM	
C26	C91-0456-05	C	0.047μF		L14	L40-4711-03	Ferri-inductor	470μH	
C27	CC45SL1H470J	C	47pF		L15	L40-1511-03	Ferri-inductor	150μH	
C28	C91-0456-05	C	0.047μF		CF1	L72-0324-05	Ceramic filter 8.83 MHz NB		
C29	C91-0457-05	C	0.022μF		XF1	L71-0208-05	MCF YK-88S		
C30	C91-0456-05	C	0.047μF		R111	RS14GB3D471J	Metal film 470Ω 2W		
C31	CC45SL1H100D	C	10pF ±0.5pF		VR1	R12-3045-05	Trim. pot	10kΩ	
C32	CC45UJ1H070D	C	7pF ±0.5pF		VR2	R12-6401-05	Trim. pot	470kΩ	
C35	CQ92M1H333K	ML	0.033μF		VR3	R12-5030-05	Trim. pot	100kΩ	
C36	C91-0456-05	C	0.047μF		VR4	R12-0401-05	Trim. pot	100Ω	
C37	CC45SL1H470J	C	47pF		VR5	R12-3045-05	Trim. pot	10kΩ	
C38	C91-0457-05	C	0.022μF		R92-0150-05	Short jumper			
C40	C91-0456-05	C	0.047μF		RL1	S51-4401-05	Relay LZN-4		
C44,47	CC45SL1H470J	C	47pF		AF UNIT (X49-1150-00)				
C49,50	CC45SL1H101J	C	100pF		C1,2	CQ92M1H123K	ML	0.012μF	
C51	CE04W1H010M	E	1μF 50V		C3	CQ92M1H223K	ML	0.022μF	
C52	CE04W1C100M	E	10μF 16V		C4,5	CQ92M1H123K	ML	0.012μF	
C53	CQ92M1H153K	ML	0.015μF		C6	CE04W1C100M	E	10μF 16V	
C54,56~58	CE04W1H010M	E	1μF 50V		C7	CE04W1H010M	E	1μF 50V	
C59	CE04W1H3R3M	E	3.3μF 50V		C8	CE04W1HR10M	E	0.1μF 50V	
C60,61,63	CE04W1H010M	E	1μF 50V		C9	CE04W1C100M	E	10μF 16V	
C64	CE04W1H4R7M	E	4.7μF 50V		C10	CQ92M1H103K	ML	0.01μF	
C65	CE04W1C100M	E	10μF 16V		C11	CE04W1A101M	E	100μF 10V	
C66	CE04W1H4R7M	E	4.7μF 50V		C12	CE04W1HR47M	E	0.47μF 50V	
C67	CE04W1A221M	E	220μF 10V						
C68	CQ92M1H473K	ML	0.047μF						
C69	CE04W1A470M	E	47μF 10V						
C70	CE04W1C100M	E	10μF 16V						
C71	CE04W1H010M	E	1μF 50V						
C72	CE04W1H3R3M	E	3.3μF 50V						
C73	CE04W1H010M	E	1μF 50V						
C74	C91-0457-05	C	0.022μF						
C75	CE04W1A221M	E	220μF 10V						

PARTS LIST

Ref. No.	Parts No.	Description			Re-marks	Ref. No.	Parts No.	Description			Re-marks
C13	CE04W1C100M	E	10μF	16V		C10	CE04W1A470M	E	47μF	10V	
C14	CE04W1H010M	E	1μF	50V		C11	CC45TH1H390J	C	39pF		
C15	CE04W1C3R3M	E	3.3μF	16V		C12	CC45TH1H220J	C	22pF		
C16	CQ92M1H472K	ML	0.0047μF			C13	CC45TH1H270J	C	27pF		
C17	CQ92M1H473K	ML	0.047μF			C14	CE04W1A470M	E	47μF	10V	
C19	CE04W1H3R3M	E	3.3μF	50V		C15	CC45SH1H680J	C	68pF		
C20	CE04W1H010M	E	1μF	50V		C16	CC45RH1H221J	C	220pF		
C21	C91-0456-05	C	0.047μF	25V	★	C18	CC45TH1H180J	C	18pF		
C22	CQ92M1H223K	ML	0.022μF			C19	CC45TH1H150J	C	15pF		
C24	CE04W1C471M	E	470μF	16V		C21	CE04W1A470M	E	47μF	10V	
C26	CE04W1C100M	E	10μF	16V		C22	CC45UJ1H270J	C	27pF		
C27	CE04W1C470M	E	47μF	16V		C23	CC45TH1H101J	C	100pF		
C29	C90-0834-05	Cap.	0.15μF	25V	★	C24,25	CC45UJ1H120J	C	12pF		
C30	CE04W1C221M	E	220μF	16V		C27	CE04W1A470M	E	47μF	10V	
C32	CE04W1A101M	E	100μF	10V		C28	CC45UJ1H820J	C	82pF		
C33	CE04W1H010M	E	1μF	50V		C29	CC45UJ1H150J	C	15pF		
C34,35	CE04W1A470M	E	47μF	10V		C30	CE04W1A470M	E	47μF	10V	
C37	CE04W1H3R3M	E	3.3μF	50V		C31	CC45TH1H270J	C	27pF		
C43	CC45SL1H100D	C	10pF	±0.25pF		C32	CC45UJ1H050C	C	5pF	±0.25pF	
C45,52	CE04W1H010M	E	1μF	50V		C33	CC45UJ1H220J	C	22pF		
C55	CE04W1C470M	E	47μF	16V		C34	CE04W1A470M	E	47μF	10V	
C57	CE04W1C102M	E	0.001μF	16V		C35	CC45UJ1H070D	C	7pF	±0.5pF	
C58	CE04W1H3R3M	E	3.3μF	50V		C36	CC45UJ1H220J	C	22pF		
C60,61	C90-0807-05	E	2200μF	25V		C38	CE04W1A470M	E	47μF	10V	
C64,65	CQ93M2A473K	ML	0.047μF	100V		C40	CC45UJ1H150J	C	15pF		
C68	CE04W1C100M	E	10μF	16V		C41	CC45UJ1H090D	C	9pF	±0.5pF	
C69	CE04W1HR47M	E	0.47μF	50V		C42	CC45TH1H150J	C	15pF		
C73	CQ93M2A224M	ML	0.22μF	100V		C43	CE04W1A470M	E	47μF	10V	
	E23-0047-04	Square terminal				C44	CC45UJ1H100D	C	10pF	±0.5pF	
	E40-0273-05	Mini connect wafer 2P				C45	CC45UJ1H270J	C	27pF		
	E40-0373-05	Mini connect wafer 3P				C47	CC45TH1H150J	C	15pF		
	E40-0473-05	Mini connect wafer 4P				C48	CC45TH1H050C	C	5pF	±0.25pF	
	E40-0573-05	Mini connect wafer 5P				C51,53	C91-0456-05	C	0.047μF		
	E40-0673-05	Mini connect wafer 6P				C54,55	CC45SL1H121J	C	120pF		
	E40-0773-05	Mini connect wafer 7P				C56	CC45SL1H181J	C	180pF		
	F20-0516-05	Insulating sheet				C57	CC45CH1H010C	C	1pF	±0.25pF	
	F29-0014-05	Shoulder washer				C58	CC45SL1H050C	C	5pF	±0.25pF	
	J31-0502-04	PC board collar				C67	CC45SL1H330J	C	33pF		
	J42-0404-05	PC board bushing				C68,69	CC45SL1H680J	C	68pF		
L1	L40-3392-02	Ferri-inductor	3.3μH			C70	CC45SL1H330J	C	33pF		
L2~4	L40-1511-03	Ferri-inductor	150μH			C71,72	CC45SL1H221J	C	220pF		
T1	L34-0535-05	Tuning coil red NB				C74,76	C91-0456-05	C	0.047μF		
T2	L34-0536-05	Tuning coil blue NB				C80	CE04W1H010M	E	1μF	50V	
VR1	R12-3411-05	Trim. pot	47kΩ			C82	C91-0456-05	C	0.047μF		
VR2	R12-0413-05	Trim. pot	470Ω			C87	CQ92M1H102K	ML	0.001μF		
VR3	R12-3411-05	Trim. pot	47kΩ			C88	CQ92M1H104K	ML	0.1μF		
	R92-0150-05	Short jumper				C89	C91-0456-05	C	0.047μF		
PLL UNIT (X50-1680-01)						C90,91	CE04W1A101M	E	100μF	10V	
C1	CE04W1A470M	E	47μF	10V		C92	CE04W1A470M	E	47μF	10V	
C2	CC45TH1H270J	C	27pF			C94	CE04W1A101M	E	100μF	10V	
C3	CC45TH1H180J	C	18pF			C95	CC45SL1H390J	C	39pF		
C4	CC45TH1H270J	C	27pF			C97	CC45SL1H331J	C	330pF		
C5	CE04W1A470M	E	47μF	10V		C98	CC45SL1H470J	C	47pF		
C6	CC45UJ1H101J	C	100pF			C99	CC45SL1H150J	C	15pF		
C7	CC45UJ1H150J	C	15pF			C100	CC45SL1H470J	C	47pF		
						C101	CC45SL1H270J	C	27pF		
						C102	CC45SL1H560J	C	56pF		
						C103	CC45SL1H270J	C	27pF		
						C104	CC45SL1H470J	C	47pF		
						C105	C91-0456-05	C	0.047μF		
						C106	CC45SL1H470J	C	47pF		
						C107	CC45SL1H070D	C	7pF	±0.5pF	
						C109	C91-0456-05	C	0.047μF		
						C111	CC45SL1H101J	C	100pF		
						C112	CC45SL1H221J	C	220pF		

PARTS LIST


Ref. No.	Parts No.	Description	Re-marks	Ref. No.	Parts No.	Description	Re-marks
C113	CC45SL1H101J	C 100pF		L31	L40-2211-03	Ferri-inductor 220μH	
C115	CC45RH1H100D	C 10pF ±0.5pF		L32	L33-0636-05	Choke coil 20μH	
C116	CC45TH1H050C	C 5pF ±0.25pF		L33~36	L40-1511-03	Ferri-inductor 150μH	
C117	CC45CH1H010C	C 1pF ±0.25pF		L37	L40-4711-03	Ferri-inductor 470μH	
C118	CC45RH1H560J	C 56pF		L38,39	L40-1511-03	Ferri-inductor 150μH	
C120	CC45CH1H020C	C 2pF ±0.25pF		L40	L40-4711-03	Ferri-inductor 470μH	
C121	CC45SL1H470J	C 47pF		L41,42	L40-4701-03	Ferri-inductor 47μH	
C123	CC45RH1H390J	C 39pF		L43,44	L40-2211-03	Ferri-inductor 220μH	
C125	CC45TH1H330J	C 33pF		L45~50	L40-1511-03	Ferri-inductor 150μH	
C126	CC45TH1H150J	C 15pF		T1	L32-0195-05	OSC coil 7, 10 MHz	
C127	CC45TH1H330J	C 33pF		T2	L32-0193-05	OSC coil 1.5, 3.5 MHz	
C130	CC45UJ1H150J	C 15pF		T3	L32-0196-05	OSC coil 14 MHz	
C131	CC45UJ1H050C	C 5pF ±0.25pF		T4	L32-0199-05	OSC coil 18 MHz	
C132	CC45UJ1H150J	C 15pF		T5	L32-0198-05	OSC coil 28 MHz	
C139	CC45SL1H100D	C 10pF ±0.5pF		T6	L32-0197-05	OSC coil 21, 24.5 MHz	
C140	CC45RH1H220J	C 22pF		T7	L34-0714-05	Tuning coil	
C142	CC45RH1H470J	C 47pF		T8	L34-0715-05	Tuning coil	
C143	CC45RH1H220J	C 22pF		T9	L34-0716-05	Tuning coil	
C144	CC45RH1H470J	C 47pF		T10	L34-0717-05	Tuning coil	
C159	CC45SL1H330J	C 33pF		T11	L34-0718-05	Tuning coil	
C160	CC45SL1H100D	C 10pF ±0.5pF		T12	L34-0757-05	Tuning coil	
C162	CC45CH1H010C	C 1pF ±0.25pF		T13	L34-0711-05	Tuning coil	
C163	CC45SL1H150J	C 15pF		T14	L34-0713-15	Tuning coil	
C166	CC45SL1H100D	C 10pF ±0.5pF		T15	L34-0712-05	Tuning coil	
C167	CC45CH1H020C	C 2pF ±0.25pF		T16	L32-0201-05	OSC coil 8.83 MHz	
C169	CC45SL1H101J	C 100pF		T17	L34-0709-05	Tuning coil 10 MHz	
C172	C91-0456-05	C 0.047μF		T18	L34-0710-05	Tuning coil 20 MHz	
C173	CC45RH1H040C	C 4pF ±0.25pF		X1	L77-0482-05	Crystal 10 MHz	
C174	CC45RH1H470J	C 47pF		X2	L77-0486-05	Crystal 8.8285 MHz	
C178,179	CC45RH1H220J	C 22pF		X3	L77-0485-05	Crystal 8.8315 MHz	
C182,183	C91-0456-05	C 0.047μF		VR1	R12-5030-05	Trim. pot 100kΩ	
C184	CC45CH1H270J	C 27pF		VR2,3	R12-1040-05	Trim. pot 4.7kΩ	
C185	CC45CH1H390J	C 39pF			R92-0150-05	Short jumper	
C186	CC45CH1H101J	C 100pF					
C187	CC45SL1H221J	C 220pF					
C188	CC45SL1H220J	C 22pF					
C189	CC45SL1H050C	C 5pF ±0.25pF					
C194	CE04W1A470M	E 47μF 10V					
C196	CC45SL1H100D	C 10pF ±0.5pF					
C197~202	C91-0456-05	C 0.047μF					
C205	CE04W1HR47M	E 0.47μF 50V					
TC1	C05-0029-15	Ceramic trimmer 50pF					
TC2,3	C05-0056-05	Ceramic trimmer 30pF					
	E04-0154-05	Coax connector					
	E23-0046-04	Square terminal					
	E40-0273-05	Mini connect wafer 2P					
	E40-0373-05	Mini connect wafer 3P					
	E40-0473-05	Mini connect wafer 4P					
	E40-0673-05	Mini connect wafer 6P					
	E40-0973-05	Mini connect wafer 9P					
	E40-1073-05	Mini connect wafer 10P					
L1~7	L40-1511-03	Ferri-inductor 150μH					
L8	L40-4701-03	Ferri-inductor 47μH					
L9	L40-1592-02	Ferri-inductor 1.5μH					
L10	L40-1092-02	Ferri-inductor 1μH					
L11	L40-1292-02	Ferri-inductor 1.2μH					
L12	L40-1892-02	Ferri-inductor 1.8μH					
L13,14	L40-4711-03	Ferri-inductor 470μH					
L15,16	L40-8201-03	Ferri-inductor 82μH					
L17	L40-1511-03	Ferri-inductor 150μH					
L18~20	L40-2701-03	Ferri-inductor 27μH					
L21~24,27~30	L40-1511-03	Ferri-inductor 150μH					
COUNTER UNIT (X54-1540-00)							
	C2	C91-0456-05	C 0.047μF				
	C3	C91-0457-05	C 0.022μF				
	C4	CC45SL1H150J	C 15pF				
	C6	CE04W1A470Q	E 47μF 10V				
	C7	CE04W1A101Q	E 100μF 10V				
	C8,9	C91-0456-05	C 0.047μF				
	C11	CE04W1C101M	E 100μF 16V				
	C12	CE04W1V100Q	E 10μF 35V				
	C13	CQ92M1H103K	ML 0.01μF 50V				
	C14~16	CE04W1V100Q	E 10μF 35V				
	C17,18	C91-0456-05	C 0.047μF				
	C19	CQ92M1H103K	ML 0.01μF 50V				
	C21,22	CC45SL1H050C	C 5pF ±0.25pF				
	C23	CE04W1A330Q	E 33μF 10V				
	C24~26	C91-0456-05	C 0.047μF				
	C28	CE04W1H100M	E 10μF 50V				
		J31-0502-04	PC board collar				
		J42-0404-05	PC board bushing				
	L1	L40-4711-03	Ferri-inductor 470μH				
	L2	L40-1011-04	Ferri-inductor 100μH				
	L3	L40-2211-03	Ferri-inductor 220μH				
	L4	L40-1511-03	Ferri-inductor 150μH				

PARTS LIST/PACKING


Ref. No.	Parts No.	Description	Re-marks
T1	L19-0323-05	OSC trans	☆
R10	RC05GF2H221J	Solid 220Ω 1/2W	
RB1,2	R90-0521-05	Resistor block 47kΩ X7	
RB3,4	R90-0522-05	Resistor block 47kΩ X6	
	R92-0150-05	Short jumper	
FINAL UNIT (X56-1380-00)			
C1 C36	CC45SL2H101J CC45CH2H150J	C 100pF 500V C 15pF 500V D	
	E01-0002-05 E23-0046-04	8P (octal) socket Square terminal	
L1 L2	L40-1511-03 L40-4711-03	Ferr-inductor 150μH Ferri-inductor 470μH	
PS1,2	L33-0010-05	Parastic suppressor GRID	
R2~5 R7 R8 R29	RC05GF2H200J RC05GF2H101J RC05GF2H101J R92-0615-05	Solid 20Ω 1/2W Solid 100Ω 1/2W Solid 100Ω 1/2W Cement 6.2Ω 7W D	
VFO ASS'Y UNIT (X60-1150-01)			
	B07-0630-05 B10-0632-04 B20-0816-04 B20-0818-04 B30-0819-05 B42-1645-04 B42-1671-04	Dial escutcheon Escutcheon glass Dial scale (B) Dial scale (A) Pilot lamp Seal Bottom Seal Top	☆
	G01-0804-04	Coil spring	
	K21-0753-04	Main knob	
	X40-1170-00	VFO unit	

Ref. No.	Parts No.	Description	Re-marks
VFO UNIT (X40-1170-00)			
C2	C91-0456-05	C 0.047μF 25V	
C4	CC45CG1H050C	C 5pF ±0.25pF	
C6	C91-0456-05	C 0.047μF 25V	
C7	CC45LG1H151J	C 150pF	
C9	CC45LG1H121J	C 120pF	
C12	CC45LG1H680J	C 68pF	
C13	CC45CG1H220J	C 22pF	
C14	CC45PG1H100D	C 10pF ±0.5pF	
C15,16	CC45LG1H151J	C 150pF	
C17	CC45CH1H020C	C 2pF ±0.25pF	
C18	C91-0456-05	C 0.047μF 25V	
C21	CC45SL1H390J	C 39pF	
C22	CC45CH1H100D	C 10pF ±0.5pF	
C23	CC45SL1H390J	C 39pF	
C24	C91-0456-05	C 0.047μF 25V	
TC1	C05-0009-15	Ceramic trimmer 6pF	
TC2	C05-0013-15	Ceramic trimmer 20pF	
VC1	C02-0019-05	Variable cap.	
	D40-0614-05	Dial mechanism ass'y	
	E40-0574-05	Mini connect wafer 5P	
	F29-0014-05	Insulating washer	
L1	L32-0628-05	OSC coil	
L2	L33-0025-05	Choke coil 1μH	
L3	L32-0629-05	OSC coil	
L4	L32-0609-05	OSC coil	
L5	L40-1021-03	Ferri-inductor 1mH	
L6	L40-4711-03	Ferri-inductor 470μH	
L7	L40-1021-03	Ferri-inductor 1mH	
L8	L40-1501-03	Ferri-inductor 15μH	
L9~11	L40-4711-03	Ferri-inductor 470μH	
	R92-0150-05	Short jumper	


PACKING

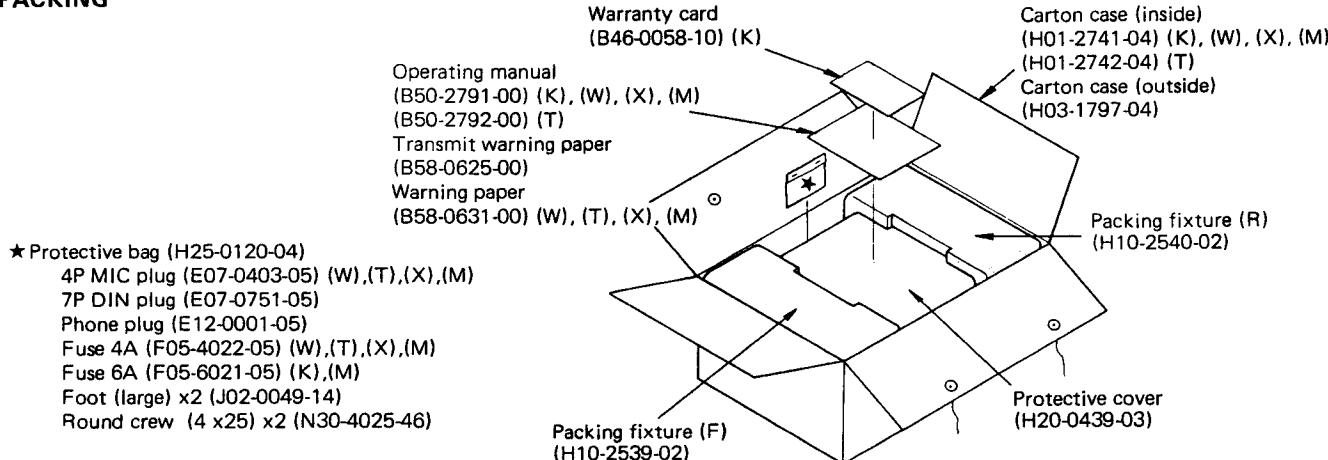


DISASSEMBLY

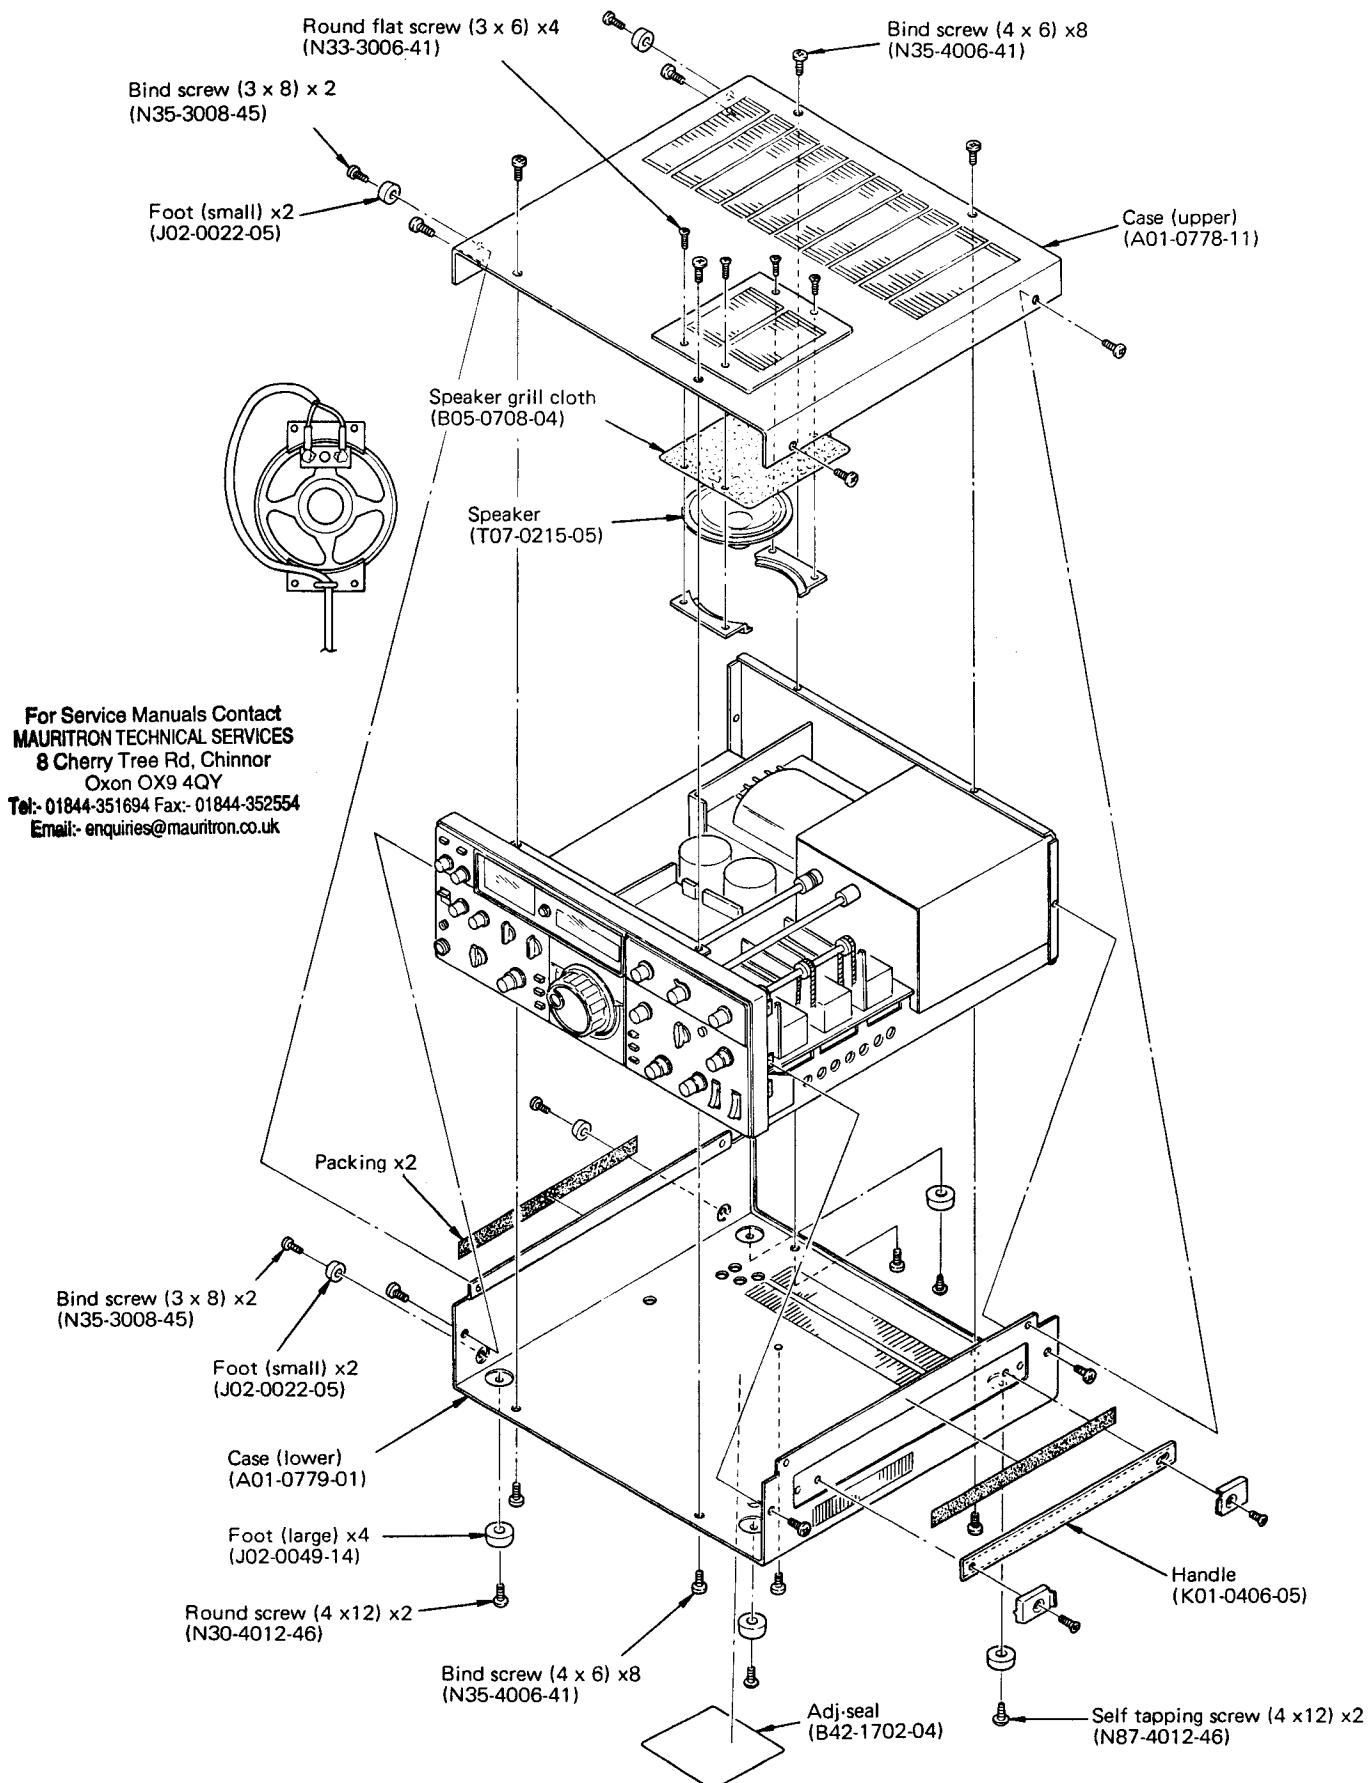


DISASSEMBLY

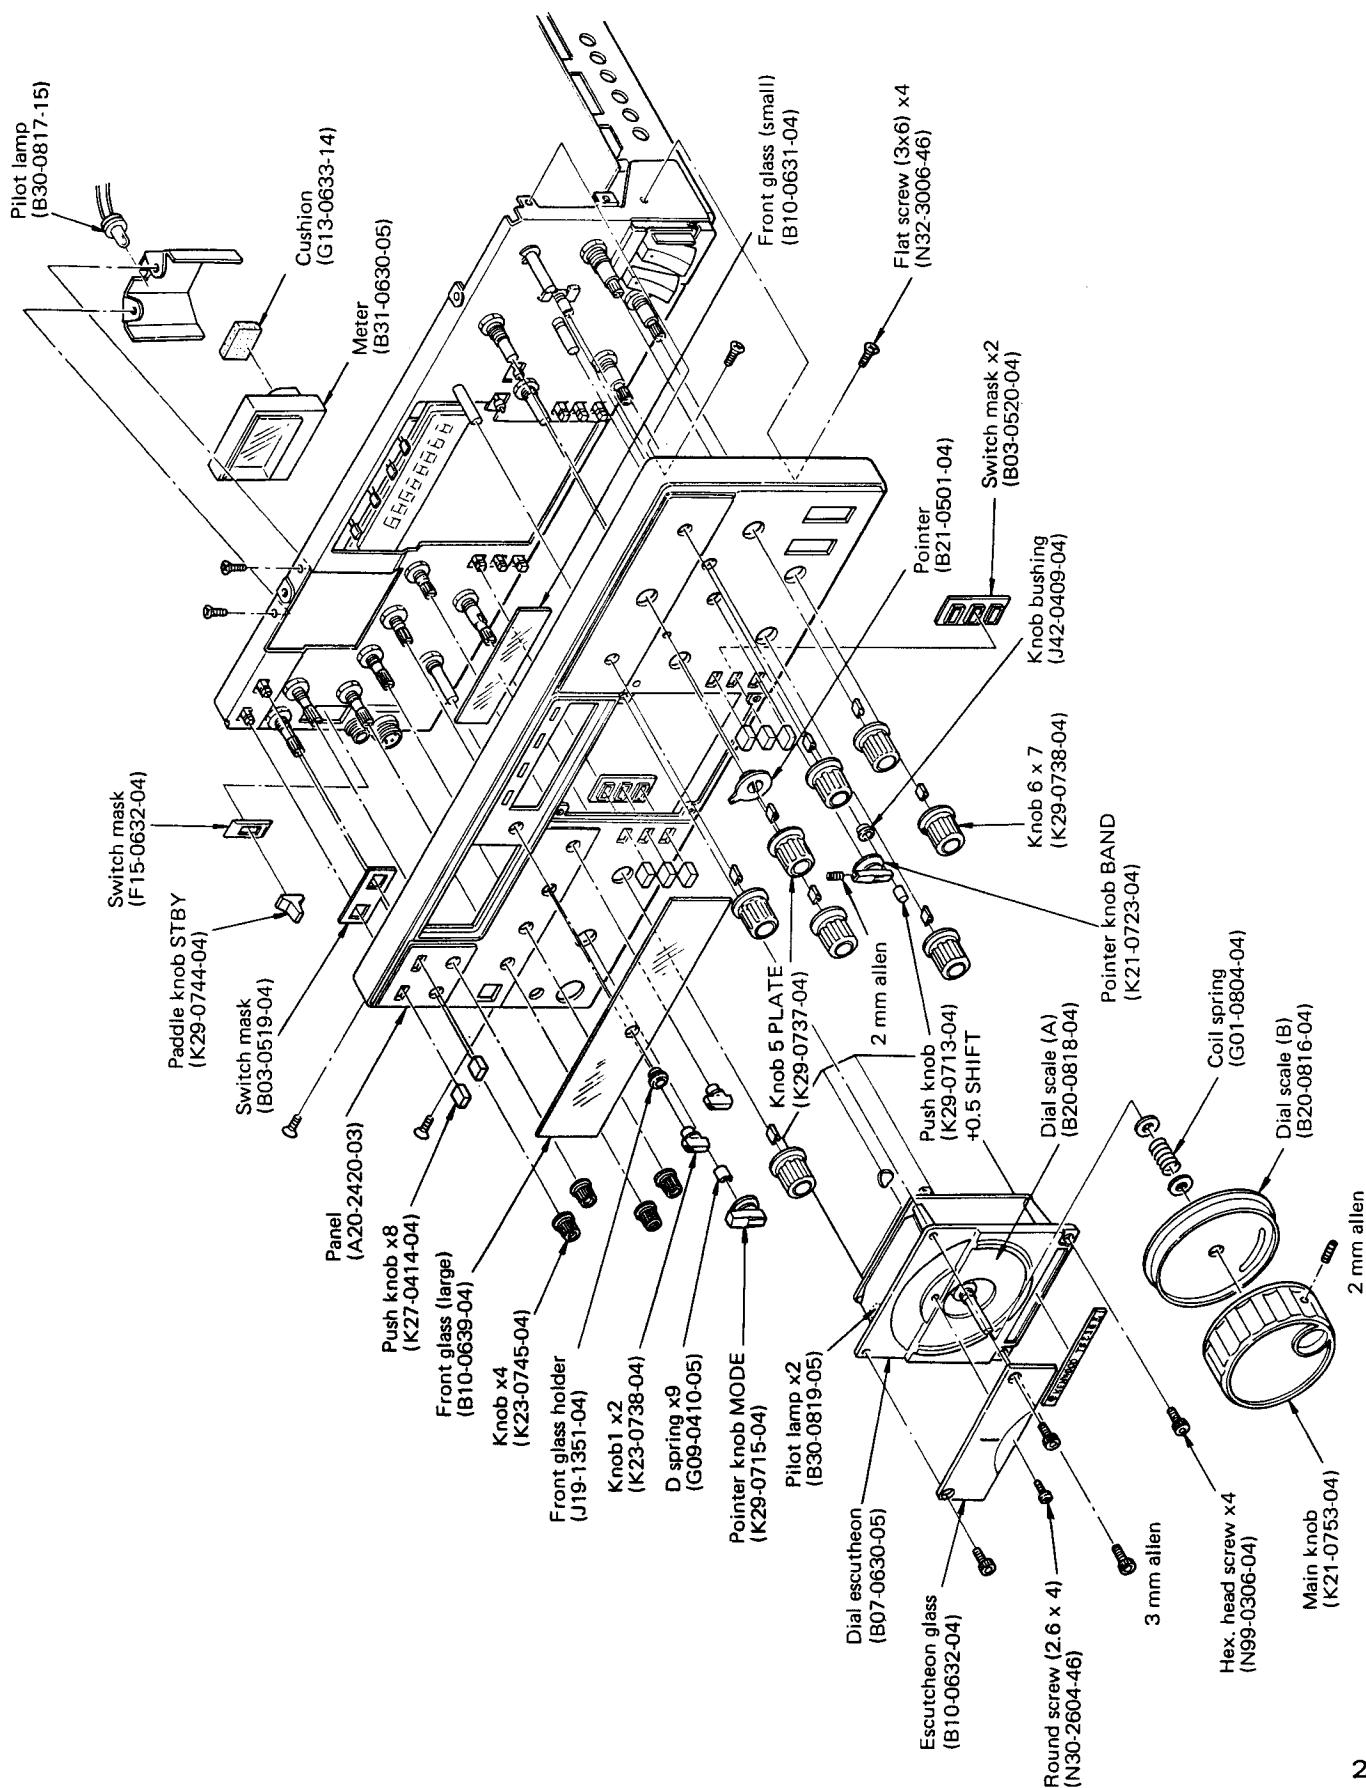



DISASSEMBLY

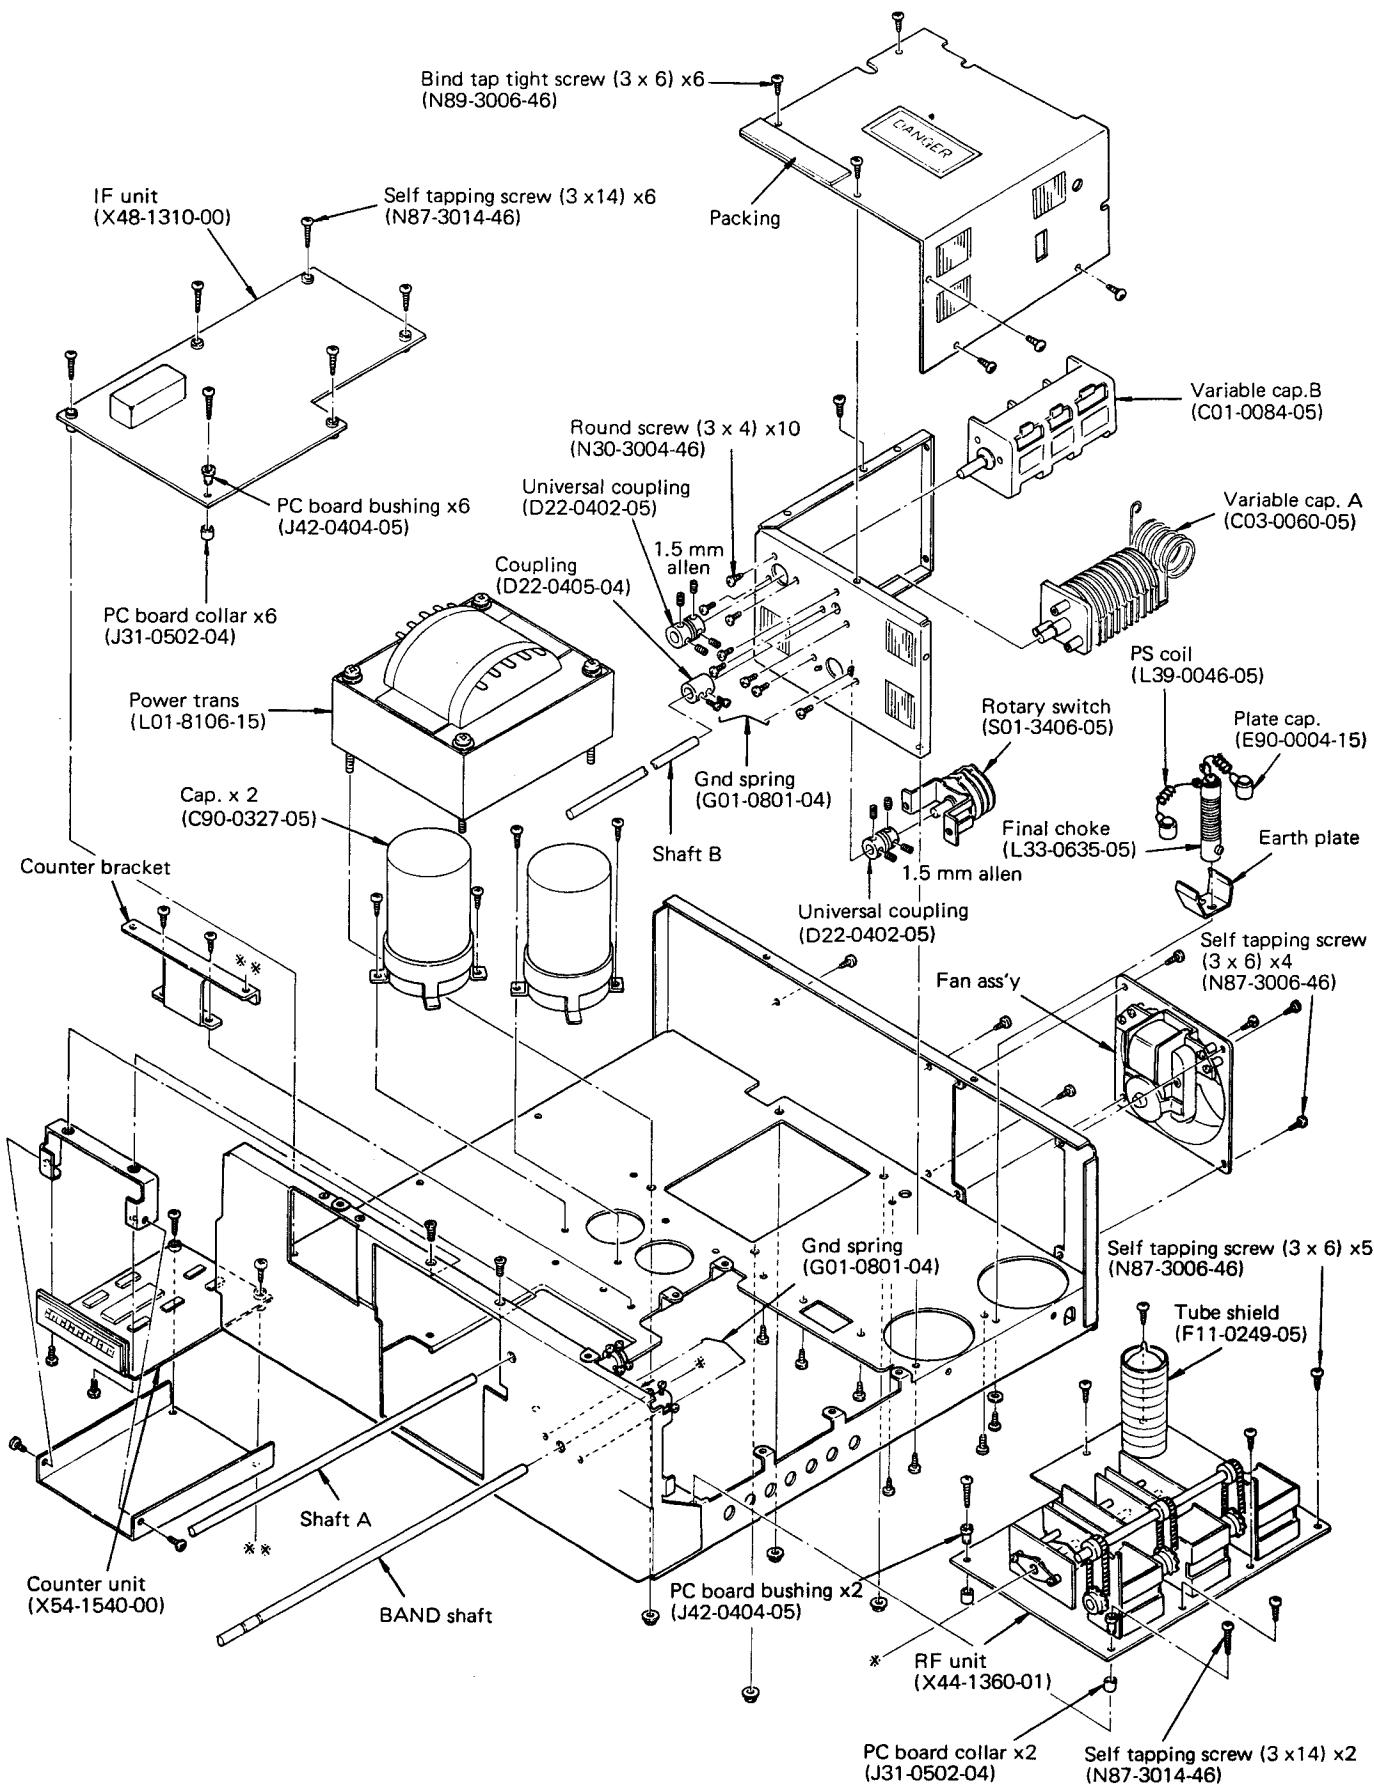

DISASSEMBLY

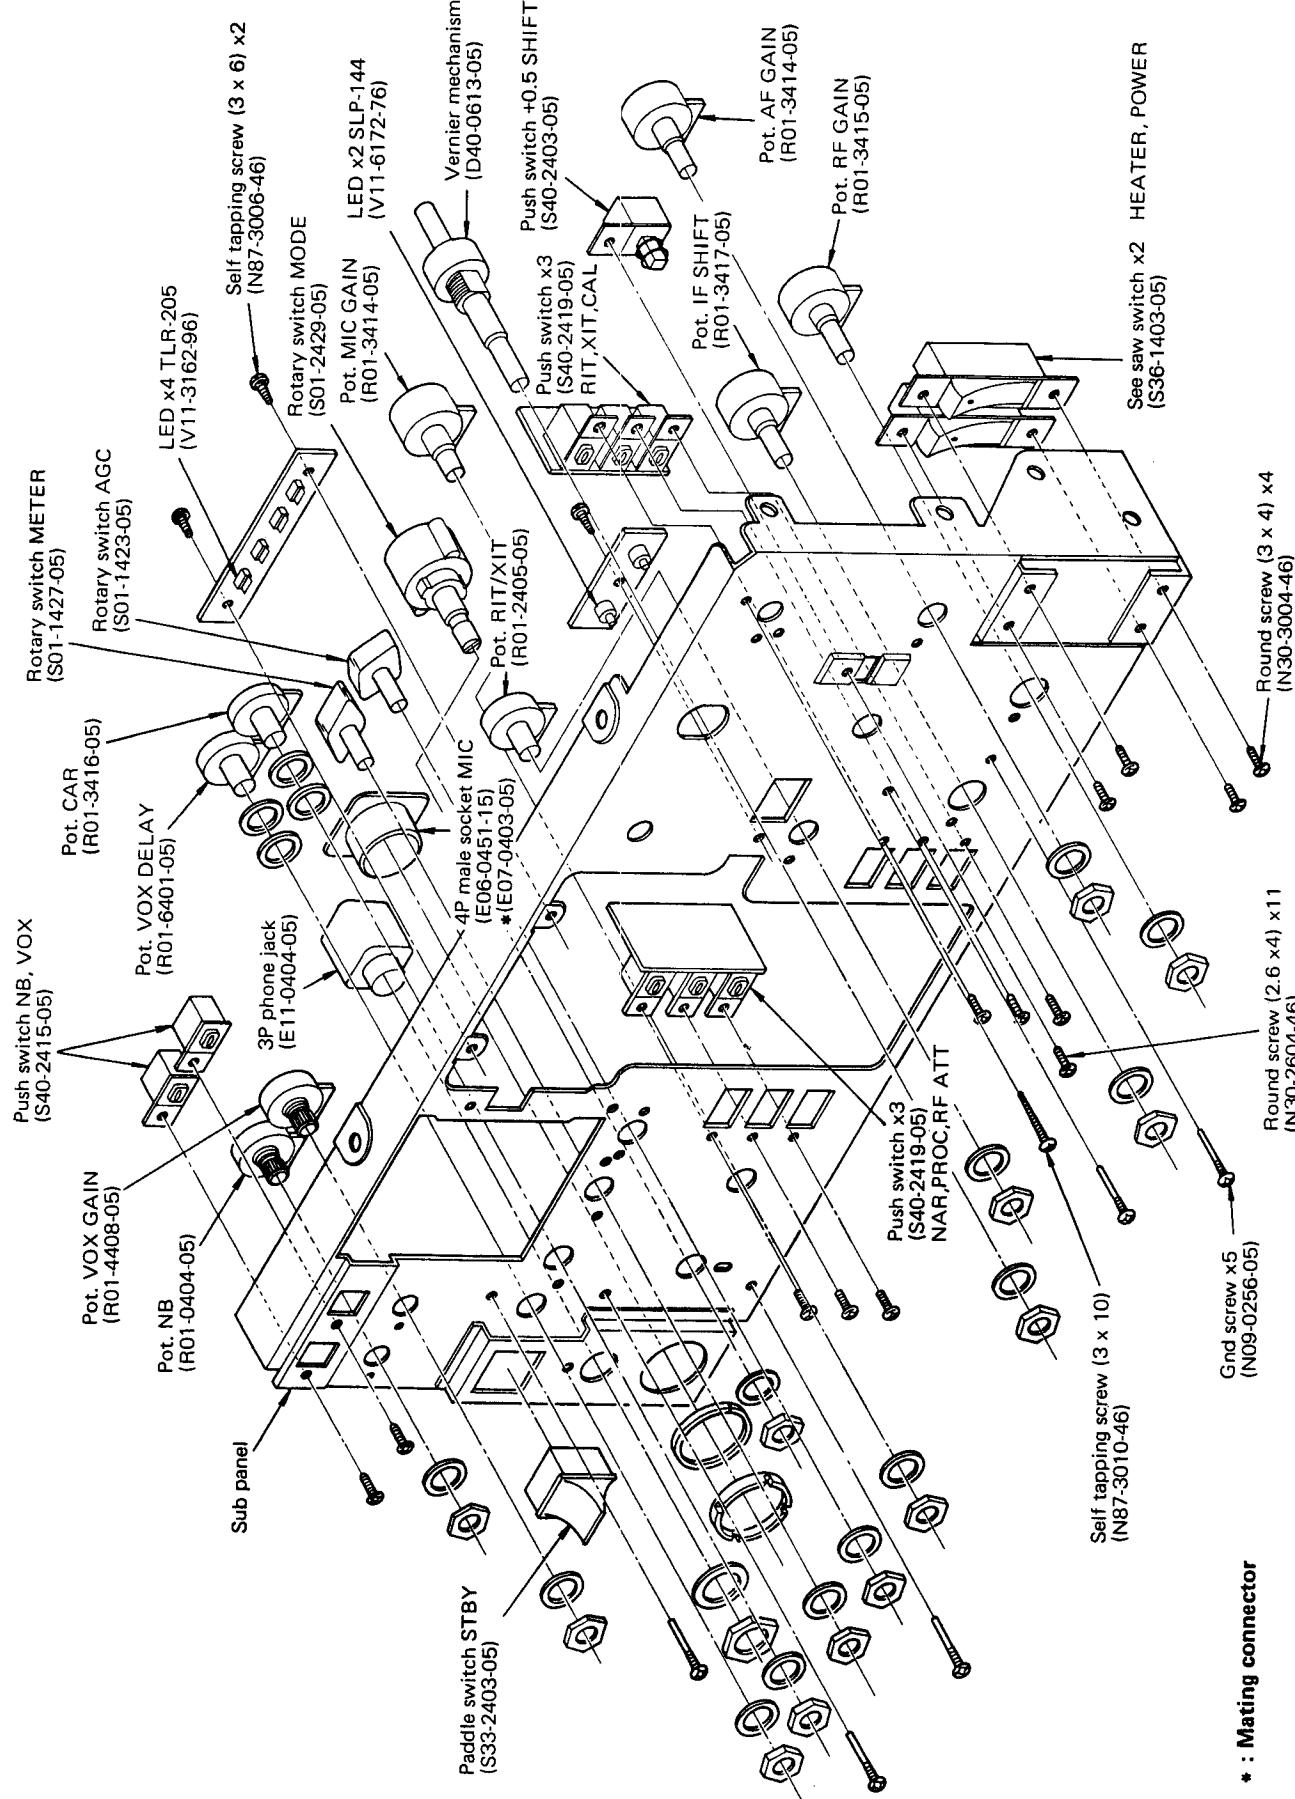

DISASSEMBLY

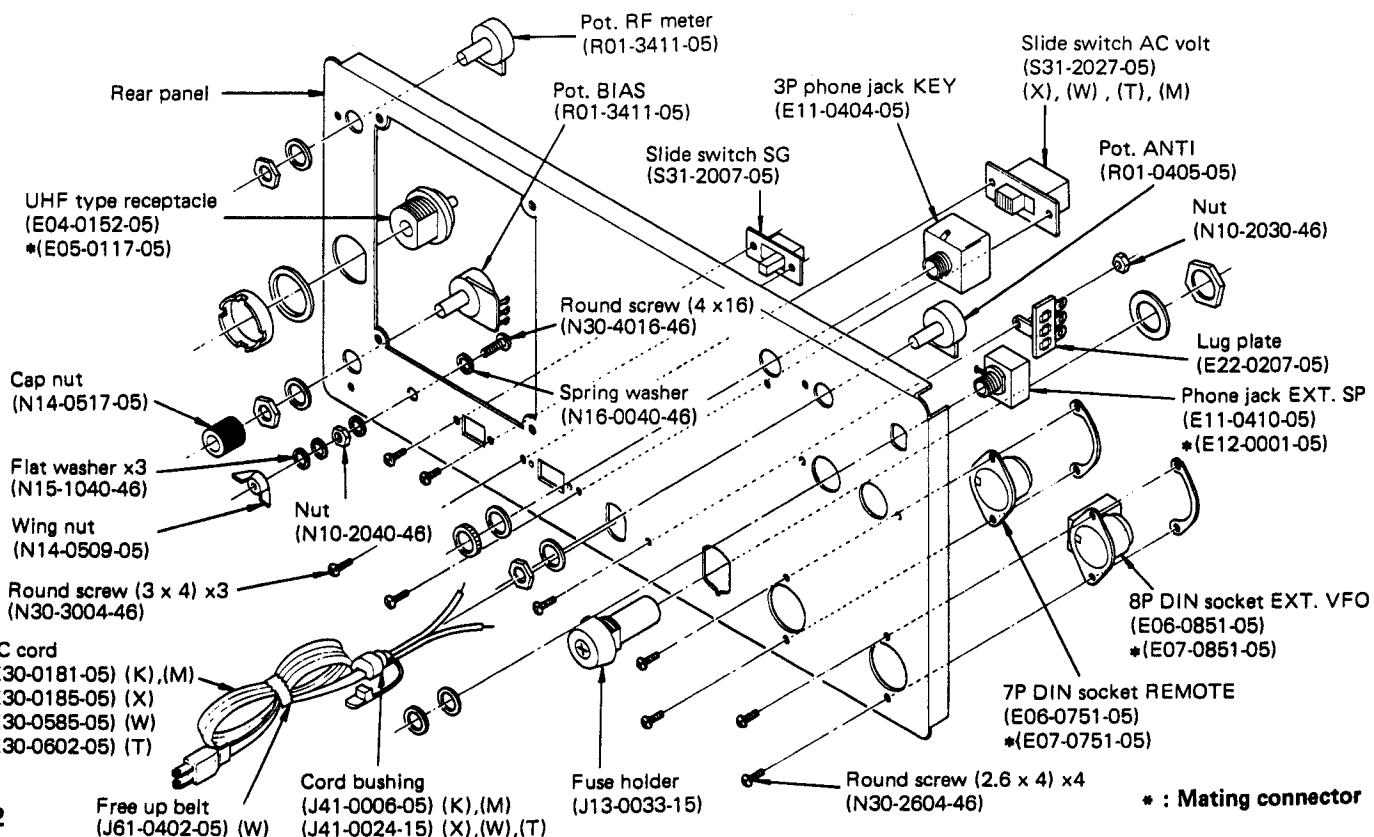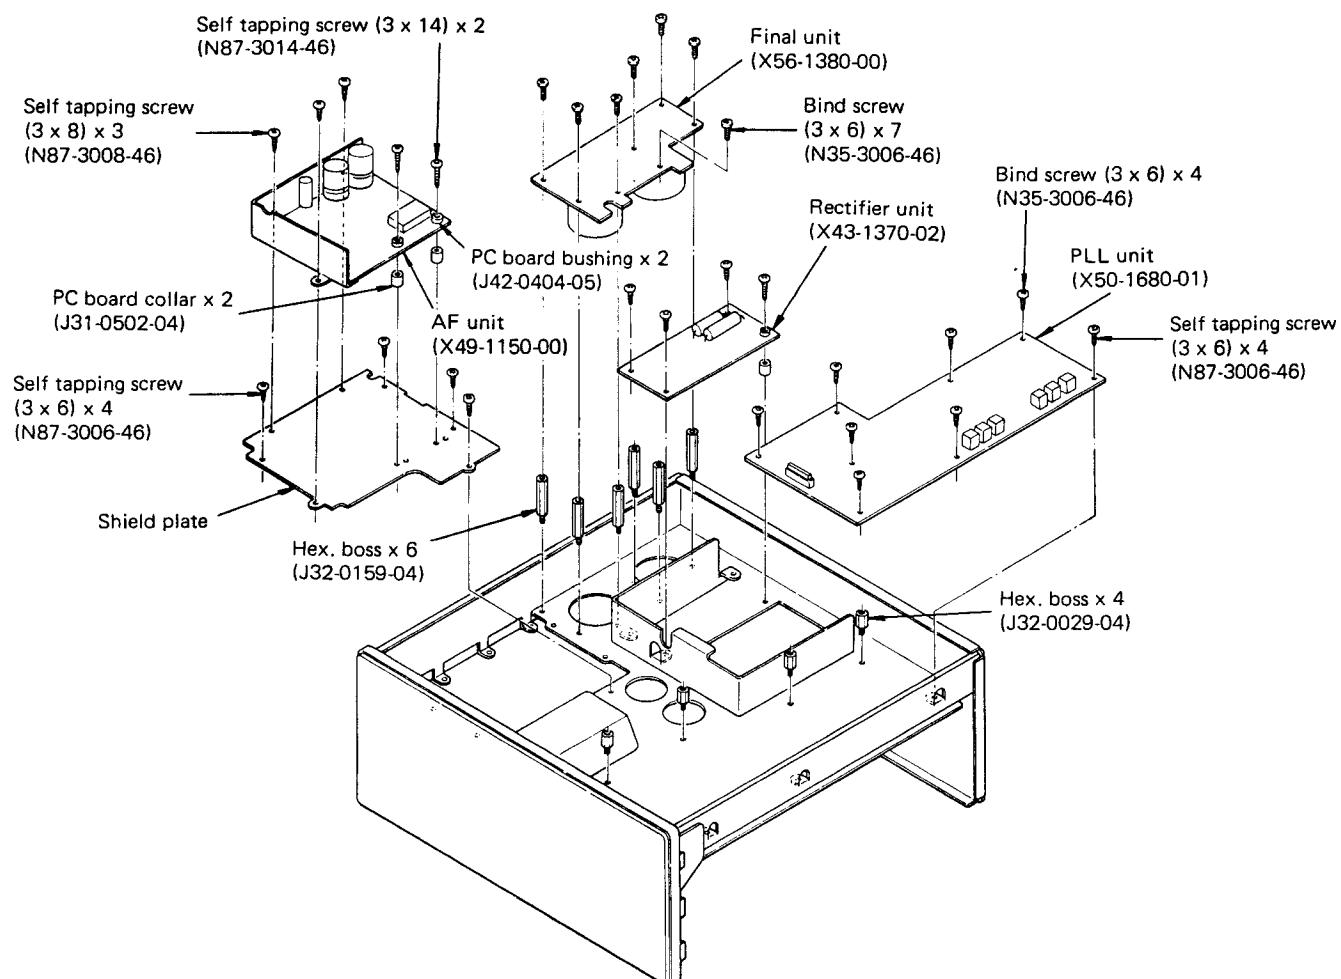

ADJUSTMENTS

TEST EQUIPMENT REQUIRED

1. VTVM or DVM

- 1) Input resistance: More than $1\text{ M}\Omega$
- 2) Voltage range: 1.5 to 1000V AC/DC

NOTE:

A high-precision voltmeter may be used.
However, accurate readings can not be obtained for high-impedance circuits.

2. RF VTVM

- 1) Input impedance: $1\text{ M}\Omega$ and less than 3 pF
- 2) Voltage range: 10 mV to 300V
- 3) Frequency range: 50 MHz or greater

3. AF VTVM

- 1) Frequency range: 50 Hz to 10 kHz
- 2) Input impedance: $1\text{ M}\Omega$ or greater
- 3) Voltage range: 10 mV to 30V

4. AF GENERATOR (AG)

- 1) Frequency range: 200 Hz to 5 kHz
- 2) Output: $2\text{ mV} \sim 1\text{ V}$, low distortion

5. AF DUMMY LOAD

- 1) Impedance: 8Ω
- 2) Dissipation: 3W or greater

6. RF DUMMY LOAD

- 1) Impedance: 50Ω
- 2) Dissipation: 100W continuous or greater
- 3) Frequency limits: 1.8 to 30 MHz

7. OSCILLOSCOPE

Requires high sensitivity and external synchronization capability.

8. SWEEP GENERATOR

- 1) Center frequency: 8 to 40 MHz
- 2) Sweep bandwidth: Maximum ± 16 MHz
- 3) Output voltage: More than 0.1V

9. STANDARD SIGNAL GENERATOR (SSG)

- 1) Frequency range: 1.8 to 30 MHz
- 2) Output: $-20\text{ dB}/0.1\text{ }\mu\text{V} \sim 120\text{ dB}/1\text{ V}$
- 3) Output Z = 50Ω
Generator must be frequency stable.

10. FREQUENCY COUNTER

- 1) Minimum input voltage: 50 mV
- 2) Frequency range: Greater than 50 MHz

11. NOISE GENERATOR

Must generate ignition-like noise containing harmonics beyond 30 MHz.

12. Spectrum analyzer


- 1) Frequency range: 100 kHz to 110 MHz
- 2) Bandwidth: 1 kHz to 3 MHz

NOTE:

R-1000 receiver may be used.

13. Detector

For adjustment of PLL unit BPF.

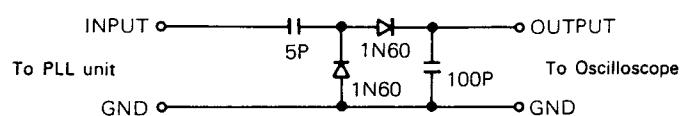

14. Directional coupler

15. 8P DIN connector

Refer to Fig. 9 on page 43.

PREPARATION

Unless otherwise specified, set the controls as follows.

Rear panel

SG SW	OFF
-------	-----



Front panel

MODE	TUNE	MIC GAIN	MIN
CAR	MIN	RF GAIN	MAX
VOX	OFF	PROC	OFF
METER	IP	BAND	1.5
RIT/XIT	CENTERED	AGC	OFF
HEATER	OFF	VOX GAIN	MIN
NB	OFF	RIT	OFF
RF ATT	OFF	CAL	OFF
XIT	OFF	VOX DELAY	MIN
IF SHIFT	CENTERED	AF GAIN	MIN
		NB LEVEL	MIN


ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
1. 9V AVR and 3.2V adjustment		DVM	AF	TP-6 Pin-5, connector ⑪	AF	VR2 VR3	9V 3.2V	9V±0.05V 3.2V±0.05V	RF1 (FET bias)
2. Base current adjustment	SG SW : ON MODE : USB METER : IP HEATER : ON DRIVE : Fully clockwise STBY : SEND BIAS pot. : Adjust	1P meter			Rear panel	Bias pot.			
	STBY REC, SG SW OFF							Set to 60mA	Set to 30mA (TS-530D)
3. Carrier adjustment①	IF SHIFT : Centered MODE : USB	RF VTVM	IF	Pin1, connector ⑧	PLL	NOTE : T16	0.3V	0.3V±1 dB	NOTE : The slug of T16 should be turned counter clockwise for this adjustment after the peak point is determined.
	MODE : LSB STBY : REC ↓ SEND	F. counter				VR2	Obtain the same frequency for both transmission and reception	±20 Hz	
	STBY : REC					TC2	8828.50 kHz		
	MODE : USB					TC3	8831.50 kHz		
	MODE : CW STBY : SEND					VR3	8830.70 kHz		
	STBY : REC								
4. IF SHIFT check	MODE : LSB Rotate the IF SHIFT and check the variation	F. counter	IF	Pin 1, connector ⑧				Set IF SHIFT to center. More than + 1.1 kHz, Less than -1.1 kHz.	
	MODE : USB Same as above								
	STBY : SEND Regardless of the IF SHIFT setting							8831.50 kHz	USB
	STBY : REC							8828.50 kHz	LSB
5. VFO, RIT check and adjustment	Scale 0~500							Should rotate smoothly and have no abnormal noise.	
	Rear panel SG SW OFF	RF VTVM	PLL	Pin 1, connector ⑧ 2P(GND)	Adjust if the voltage is out of specification.	VFO	TC2	200mV	200 mV±1 dB
	VFO : 250								
	MODE : CW STBY : SEND	F. counter	Rear panel	EXT VFO 1P, 7P (GND)	Adjust if the frequency is out of specification.		800 Hz UP	800±50 Hz	CW SHIFT



ADJUSTMENTS

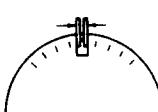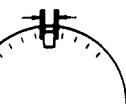Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
STBY : REC	STBY : REC	F.counter	Rear panel	EXT VFO 1P 7P (GND)	VFO	L3		5550.00 kHz ± 200 Hz	Repeat the adjustment several times until the frequency is within specification.
	Set the VFO dial to 50. At this time set the CAL control to the index.				TC1			5950.00 kHz ± 200 Hz	
	Set the VFO dial to approx. 450. Set the CAL control dial calibrated under this VFO setting exactly to the index.								
	Tune to 5550.00 kHz with the main tuning knob.							The 50 kHz point on the dial scale must be aligned to the index.	
Dial calibration, electrical.	Tune to the CAL signal in order : 0, 100, 200, 300, 400, and 500 to check dial calibration at each 100 kHz point.				0 100 200 300 400 500	5.5 MHz 5.6 5.7 5.8 5.9 6.0		Within ± 2.5 kHz	Check the dial scale (Electrically)
Backlash	Calibrate the dial at 0 kHz. Tune to 250kHz, then reverse direction and tune back to 0kHz without rocking the dial, and stop.							Less than 400Hz Backlash	Backlash
Dial calibration, mechanical	Repeat electrical dial scale check procedure (for mechanical spec).							Calibration should come in contact with the dial pointer.	Check the dial scale (mechanically).
RIT : Centered RIT SW : ON Set the VFO main control to 5750.000 kHz	RIT : Centered RIT SW : ON Set the VFO main control to 5750.000 kHz				IF	VR5	5750.000 kHz		
	Check that the same frequency is obtained when the RIT switch is turned ON and OFF.							Within ± 50 Hz	
	RIT SW : ON VFO : 250 RIT control : fully counter-clockwise (⊖ position) RIT control : fully clockwise (+ position).							-1.5kHz or less +1.5kHz or more Reference to the center (φ position of the RIT control).	

ADJUSTMENTS

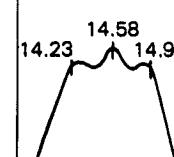Item	Condition	Measurement			Adjustment			Specification	Remarks																																																																																																																
		Test equipment	Unit	Ter-minal	Unit	Parts	Method																																																																																																																		
	RIT OFF																																																																																																																								
6. Reference oscillator adjustment		F. counter	PLL	TP2	PLL	TC1	1000.000 kHz																																																																																																																		
7. VCO adjustment and check	Check the frequencies at the following points and adjust coils until those given in brackets are obtained.	F. counter DVM	PLL PLL	D40 TP1																																																																																																																					
		<table border="1"> <thead> <tr> <th rowspan="2">VFO BAND</th><th>0</th><th colspan="2">250</th><th colspan="2">500</th><th colspan="2">Adjusting point</th></tr> <tr> <th></th><th></th><th></th><th></th><th></th><th>Unit</th><th>Part</th></tr> </thead> <tbody> <tr><td>1.5</td><td>10.33 MHz</td><td>10.58 MHz (4.0V)</td><td></td><td>10.83 MHz</td><td></td><td>PLL</td><td>T2</td></tr> <tr><td>3.5</td><td>12.33</td><td>12.58</td><td></td><td>12.83</td><td></td><td></td><td></td></tr> <tr><td>7</td><td>15.83</td><td>16.08 (4.75V)</td><td></td><td>16.33</td><td></td><td></td><td>T1</td></tr> <tr><td>10</td><td>18.83</td><td>19.08</td><td></td><td>19.33</td><td></td><td></td><td></td></tr> <tr><td>14</td><td>22.83</td><td>23.08 (4.5V)</td><td></td><td>23.33</td><td></td><td></td><td>T3</td></tr> <tr><td>18</td><td>26.83</td><td>27.08 (5.0V)</td><td></td><td>27.33</td><td></td><td></td><td>T4</td></tr> <tr><td>21</td><td>29.83</td><td>30.08 (3.5V)</td><td></td><td>30.33</td><td></td><td></td><td></td></tr> <tr><td>24.5</td><td>33.33</td><td>33.58</td><td></td><td>33.83</td><td></td><td></td><td>T6</td></tr> <tr><td>28</td><td>36.83</td><td>37.08</td><td></td><td>37.33</td><td></td><td></td><td></td></tr> <tr><td>28.5</td><td>37.33</td><td>37.58</td><td></td><td>37.83 (4.75V)</td><td></td><td></td><td></td></tr> <tr><td>29</td><td>37.83</td><td>38.08</td><td></td><td>38.33</td><td></td><td></td><td></td></tr> <tr><td>29.5</td><td>38.33</td><td>38.58</td><td></td><td>38.83</td><td></td><td></td><td>T5</td></tr> </tbody> </table>	VFO BAND	0	250		500		Adjusting point							Unit	Part	1.5	10.33 MHz	10.58 MHz (4.0V)		10.83 MHz		PLL	T2	3.5	12.33	12.58		12.83				7	15.83	16.08 (4.75V)		16.33			T1	10	18.83	19.08		19.33				14	22.83	23.08 (4.5V)		23.33			T3	18	26.83	27.08 (5.0V)		27.33			T4	21	29.83	30.08 (3.5V)		30.33				24.5	33.33	33.58		33.83			T6	28	36.83	37.08		37.33				28.5	37.33	37.58		37.83 (4.75V)				29	37.83	38.08		38.33				29.5	38.33	38.58		38.83			T5								
VFO BAND	0	250		500		Adjusting point																																																																																																																			
						Unit	Part																																																																																																																		
1.5	10.33 MHz	10.58 MHz (4.0V)		10.83 MHz		PLL	T2																																																																																																																		
3.5	12.33	12.58		12.83																																																																																																																					
7	15.83	16.08 (4.75V)		16.33			T1																																																																																																																		
10	18.83	19.08		19.33																																																																																																																					
14	22.83	23.08 (4.5V)		23.33			T3																																																																																																																		
18	26.83	27.08 (5.0V)		27.33			T4																																																																																																																		
21	29.83	30.08 (3.5V)		30.33																																																																																																																					
24.5	33.33	33.58		33.83			T6																																																																																																																		
28	36.83	37.08		37.33																																																																																																																					
28.5	37.33	37.58		37.83 (4.75V)																																																																																																																					
29	37.83	38.08		38.33																																																																																																																					
29.5	38.33	38.58		38.83			T5																																																																																																																		
		Check the level at each of the above points.	RF VTVM	RF	TP3			1V +3 dB -2																																																																																																																	
PLL lock range	Both edges of the VFO frequency in each band.							Display should indicate.																																																																																																																	
8. BPF-A	Disconnect connectors ① and ③ on the PLL unit. Connect the cathode of D24 (1S1555) to the jumper wire next to R44 with a clip lead. Connect the sweep generator RF output to the EXT-VFO connector.	Sweep generator Oscillo-scope	PLL	Q35 ⑤	PLL	T13 T14 T15	Adjust until the response shown to the right is obtained.																																																																																																																		

ADJUSTMENTS

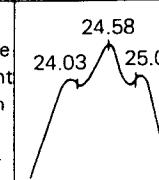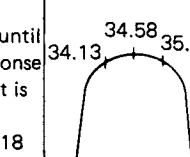Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
9. BPF-B adjustment	Disconnect connectors ① and ⑤ on the PLL unit. Connect the cathode of D27 (1S1555) to the jumper wire next to R44 with a clip lead. Connect the cathode of D50 (1S1587) to the jumper wire next to TC1 with a clip lead. Connect the RF output of the sweep generator to R111(100Ω) via a 15pF capacitor.	Sweep generator Oscilloscope	PLL	Q35 ④	PLL	T7 T8 T9 T17	Adjust T7~T9 until the response shown at the right is obtained. Then adjust T17 for maximum amplitude.		
10. BPF-C adjustment	Disconnect connectors ① and ⑤ on the PLL unit. Connect the cathode of D26 (1S1555) to the jumper wire next to R44 with a clip lead. Connect the cathode of D50 (1S1587) to the jumper wire next to TC1 with a clip lead.					T10 T11 T12 T18	Adjust T10 through T12 until the band response shown at right is obtained. Then adjust T18 for maximum amplitude.		
11. Carrier balance adjustment	IF SHIFT : Centered RF GAIN : Fully counter-clockwise	RF VTVM	IF	Drain of Q4	IF	TC2	Minimum		Reference approx. 5mV
12. IF AMP adjustment	BAND : 1.5 VFO : 400 DRIVE : 12 : 00 RF GAIN : fully clockwise IF SHIFT : Centered RF ATT : OFF MODE : USB AGC : OFF NB SW : OFF	AF VTVM Oscilloscope	Rear panel	EXT. SP	RF	ANT coil 1.8 ----- RF coil 1.8 ----- T2	Max. audio output		
	SG SW : OFF Connect the SSG output (1.9MHz, 40dB) to the antenna terminal. While adjusting, gradually decrease the SSG output level down to -6dB.				IF	L2 L5 L6 L7 L8 L10			

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
13. Coil pack adjustment	Connect the SSG (40dB) to the ANT terminal DRIVE : 12:00 While adjusting, gradually decrease the SSG output level down to -6 dB. Adjust at the following points:	AF VTVM Oscillo-scope	Rear panel	EXT. SP	RF	ANT coil RF coil	Max. audio output		
	No. BAND VFO f								
	1 1.5 400	1.9 MHz				1.8			
	2 3.5 250	3.75				3.5			
	3 7 150	7.15				7			
	4 10 125	10.125				10			
	5 14 175	14.175				14			
	6 18 125	18.125				18			
	7 21 225	21.225				21			
	8 24.5 450	24.950				24.5			
	9 28.5 300	28.800				28			
14. Drive coil adjustment	CAL : ON CAR VR : optimum level METER : ALC HEATER : ON MODE : CW SG SW : OFF ANT : 50Ω dummy should be connected. Connect pin 2 to pin 4, connector ⑦ on the AF unit with a clip lead. Receive the marker frequency in the following bands and obtain the peak level by adjusting the DRIVE control. Set the STBY switch to SEND and adjust each drive coil.	50Ω dummy			RF	DRIVE coil	Max. ALC meter reading		NOTE: The 50Ω dummy should be connected to the ANT terminal. Otherwise drive tuning will be incorrect.
	() : See note BEFORE adjustment Note :								
									TRANSMITTING ON WARC BANDS
									As supplied, the TS-530S will receive but not transmit on the 3 new WARC bands. If transmit capability is desired, a minor wiring change is required.
									1. For all 3 bands : Break the line between the RF unit X44-1360-01, connector #6, Pin #1 (TOF terminal) and AF unit X49-1150-00, connector #7, Pin #4 (TOF terminal).
									2. Or, for individual Bands : On the RF unit X44-1360-01 :
									Band Remove (or Cut) Part
									10 MHz D4
									18 MHz D5
									24.5 MHz D6
	STBY : REC								

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Terminal	Unit	Parts	Method		
	BAND : 14 VFO : 175 STBY : SEND Adjust the CAR control until the ALC meter reads maximum.				IF RF	L13 T4	Max. ALC meter reading		
	STBY : REC Disconnect clip lead from connector⑦.								
15. IF TRAP adjustment	BAND : Between 1.5 and AUX. Connect the SSG (8.83 MHz, 80dB) to the ANT terminal.	Oscillo-scope AF VTVM	Rear panel	EXT. SP	RF	L3 L4	Adjust alternately for minimum		Preset the slugs of L3 and L4 fully clockwise.
16. VFO MIX spurious adjustment	BAND : 3.5 VFO : 388 MODE : LSB Connect the SSG output (3.888 MHz, 60dB) to the ANT terminal. 1) Adjust the SSG frequency to obtain zero beat. 2) Turn the VFO tuning to dial 384 to obtain a spurious beat.	Oscillo-scope AF VTVM	Rear panel	EXT. SP	PLL	VR1	minimum beat output		The position of VR1 after adjustment should be approximately centered.
17. S meter adjustment	AGC : OFF				IF	VR1	Set to the deflection starting point.		
	BAND : 14 VFO : 175 AGC : FAST Connect the SSG (14.174 MHz, 8dB) to the ANT terminal.	Oscillo-scope AF VTVM	Rear panel	EXT. SP			Adjust the DRIVE control for maximum AF output.		
	SSG output : 40dB				IF	L8	Turn the coil slug counterclockwise until S-1 is obtained.		
18. NB adjustment	NB LEVEL : fully counter-clockwise BAND : 14 VFO : 175 Connect the SSG output (14.175 MHz 60dB) to the ANT terminal. SSG output : 20dB Adjust as described above.	DVM	AF	TP4	AF	T1 T2	Minimum		Repeat S-1,9 adjustment several times.

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Ter-minal	Unit	Parts	Method		
NB adjustment	AGC : FAST Disconnect the SSG output from the ANT terminal, and connect the noise generator output in it's place. Set the noise generator output level to S5~7.	Speaker	Rear panel	EXT. SP					
	NB : ON							The NB must provide adequate effect.	
					If adequate effect is not obtained, repeat the adjustment several times.				
	Reduce the noise generator output level to below the threshold of sensitivity. Turn the NB LEVEL control fully clockwise.							Noise must be blanked.	
19. Neutralization trimmer adjustment	NB : OFF								
	BAND : 28, +0.5 SHIFT : ON VFO : 300 SG SW : ON STBY : SEND Tune the DRIVE, PLATE and LOAD	Power meter Sync'ed scope	Rear panel	ANT					Tune-up for MAX RF output.
	SG SW : OFF							RF output must be 0.	
	METER : ALC Set the ALC to maximum with the DRIVE control. Increase oscilloscope sensitivity.				Neutralization trimmer TC1	Minimum			
	Reduce oscilloscope sensitivity (5V/div.). SG SW : ON							The normal power must be obtained. The signal waveform must be normal.	
20. Side tone, semi-break-in function adjustment	Connect a power meter to the ANT terminal. Plug key into the rear Key jack to transmit in any band.	Oscillo-scope AF VTVM	Rear panel	EXT. SP	AF	VR1	0.63V/8Ω		
	Operate the key.							The key must control RF output.	
	STBY : REC VOX : ON Operate the key							Semi-break-in operation should be available.	

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks
		Test equipment	Unit	Ter-minal	Unit	Parts	Method		
21. Transmission spurious adjustment	Connect pin2 and 4 of connector ⑦ on the AF unit with a clip lead. Set the BAND switch to 18, and VFO to 125. Connect a power meter to the ANT terminal. Set the STBY switch to SEND and tune up.	Spectrum analyzer (receive 17.66MHz with a monitor receiver.)	Rear panel	ANT	RF	VR2	Minimum (Monitor level)	Less than -40dB	
	STBY : REC Disconnect clip lead from connector ⑦								
22. RF meter adjustment	BAND : 14 VFO : 175 METER : RF Connect a power meter to the ANT terminal. Tune up. STBY : REC				Rear panel	RF Meter Pot.	Set the meter to read 250 on the IP scale.		
23. Carrier suppression adjustment	BAND : 14 VFO : 175 MODE : CW Connect power meter to ANT. STBY : SEND	Sync'ro scope	Rear panel	ANT				Tune-up for max RF output.	
	MODE : USB				IF	VR4 TC1	Adjust alternately until minimum output is obtained.		
	MODE : LSB ↓ USB						Adjust until no level difference exists between LSB and USB.		
	MODE : CW Sync'ed scope level calibration						Note scope deflection level.		
	MODE : USB, LSB							Less than -50dB	Compared with CW.
	STBY : REC								
24. SSB frequency response adjustment	BAND : 14 VFO : 175 MODE : USB Connect the AG (1500 Hz, 7mV) to the MIC input connector. STBY : SEND Tune up. Set to 50W output with MIC GAIN control.	Power meter Sync'ed scope	Rear panel	ANT					

ADJUSTMENTS

Item	Condition	Measurement			Adjustment			Specification	Remarks		
		Test equipment	Unit	Ter-minal	Unit	Parts	Method				
	AG : 300Hz ↓ 2700Hz				PLL	TC3	Adjust until the same level is obtained for both 300Hz and 2700Hz (equal audio rolloff).				
	MODE : LSB same as above					TC2					
	AG : 400Hz AG : 2600Hz						More than 1/2 with respect to the 1500Hz signal level observed on the scope.				
25. Speech processor adjustment	After completing the above adjustment, readjust carrier suppression (see item 23.)				IF	VR4 TC1	Minimum	Less than -50dB			
	STBY : REC										
	SG SW : OFF MODE : USB PROC : OFF METER : ALC Connect the AG (1500 Hz, 10mV) to the MIC input connector. STBY : SEND Adjust the MIC gain control until the meter indicates the maximum on-scale ALC reading.										
	PROC : ON				IF	VR3	Adjust until the same meter reading is obtained (max on-scale ALC).				
	STBY : REC PROC : OFF										

ADJUSTMENTS

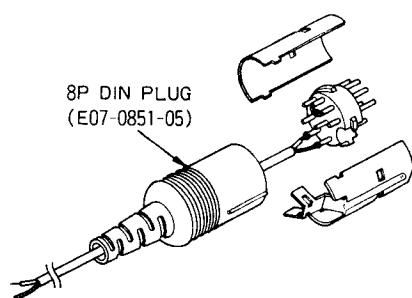


Fig. 9 8P DIN connector

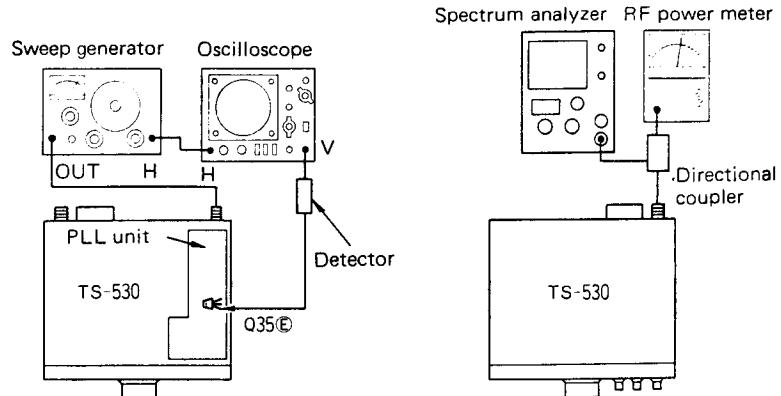


Fig. 10 (8) BPF-A, (9) BPF-B, (10)BPF-C


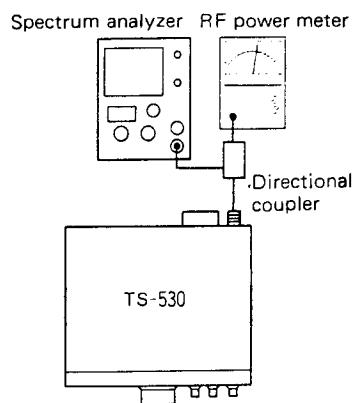


Fig. 11 (21) TX SPURIOUS

▼ TOP VIEW

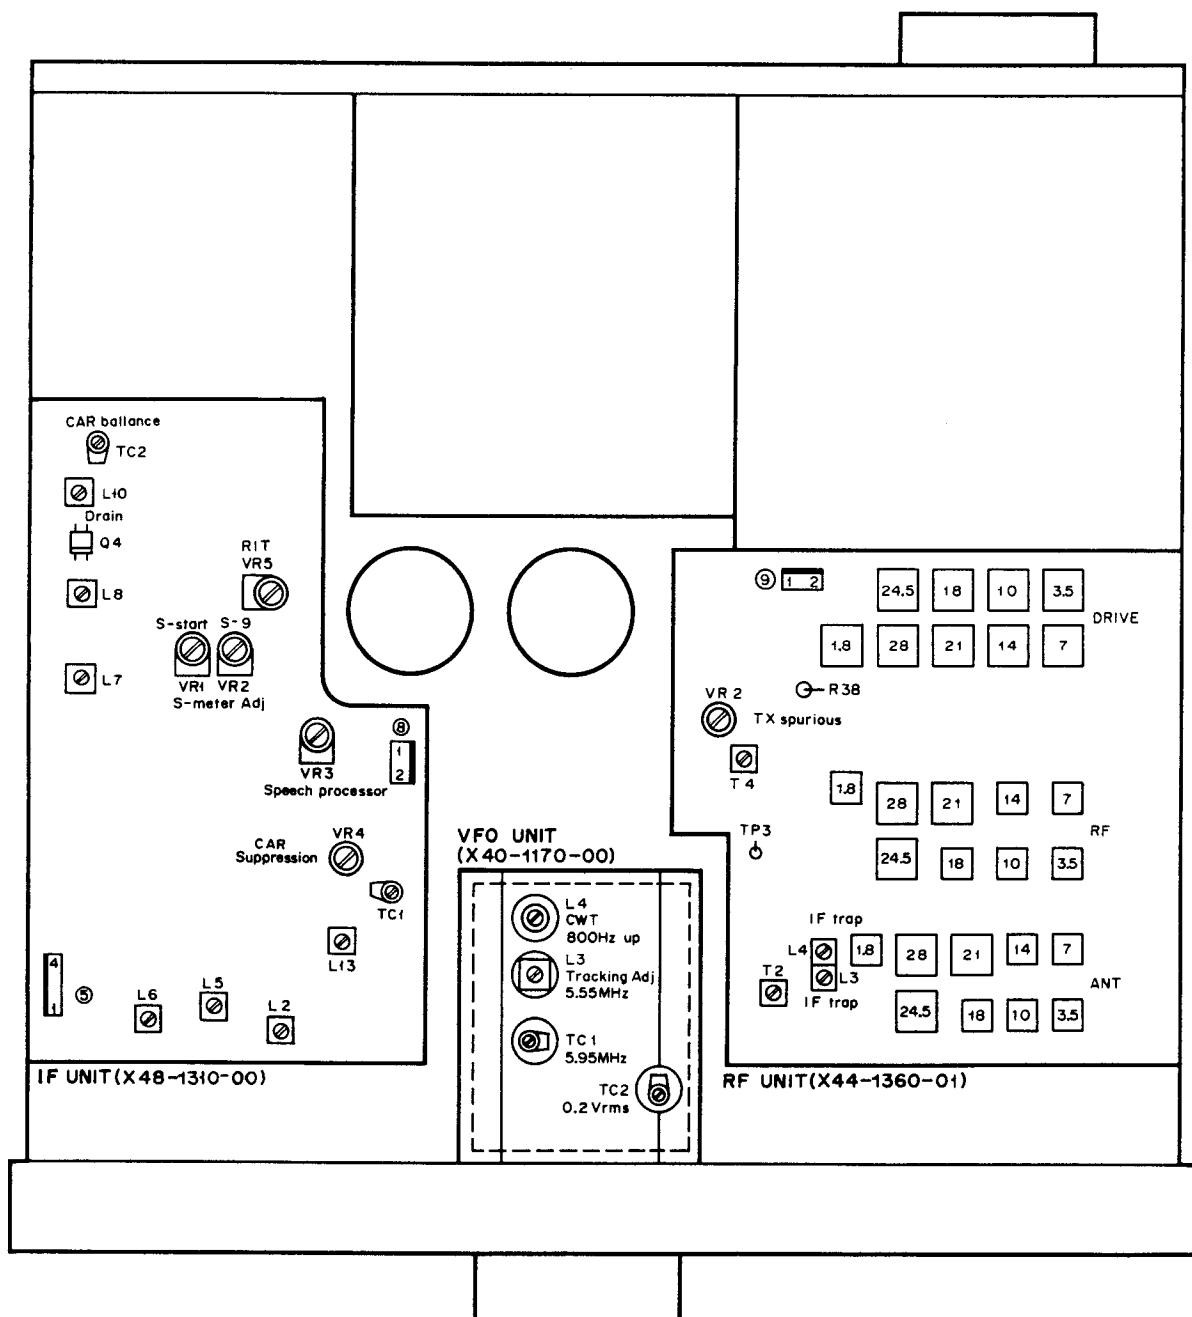

ADJUSTMENTS



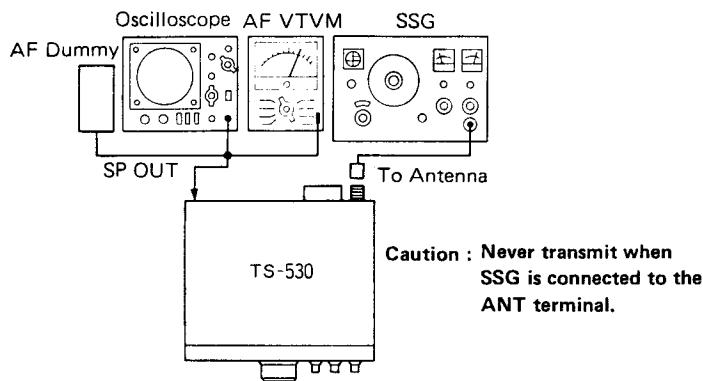


Fig. 12 (12) IF AMP, (13) COIL PACK, (15) IF TRAP

▼ BOTTOM VIEW


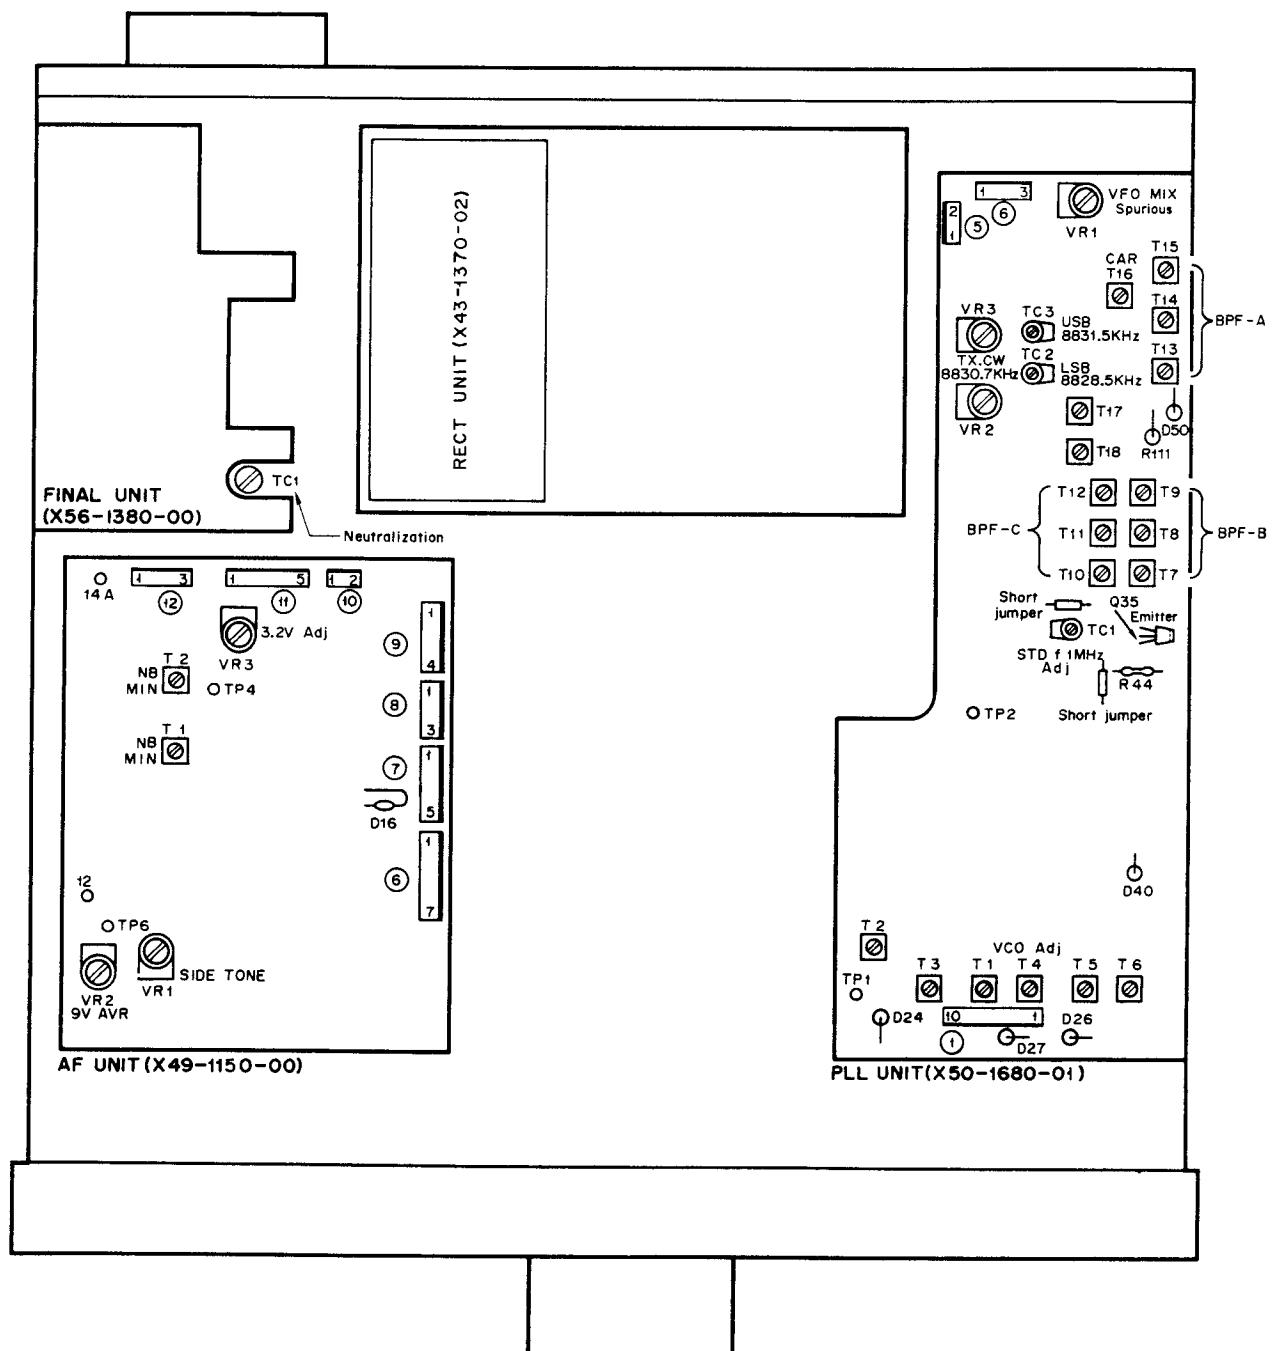


LEVEL DIAGRAM

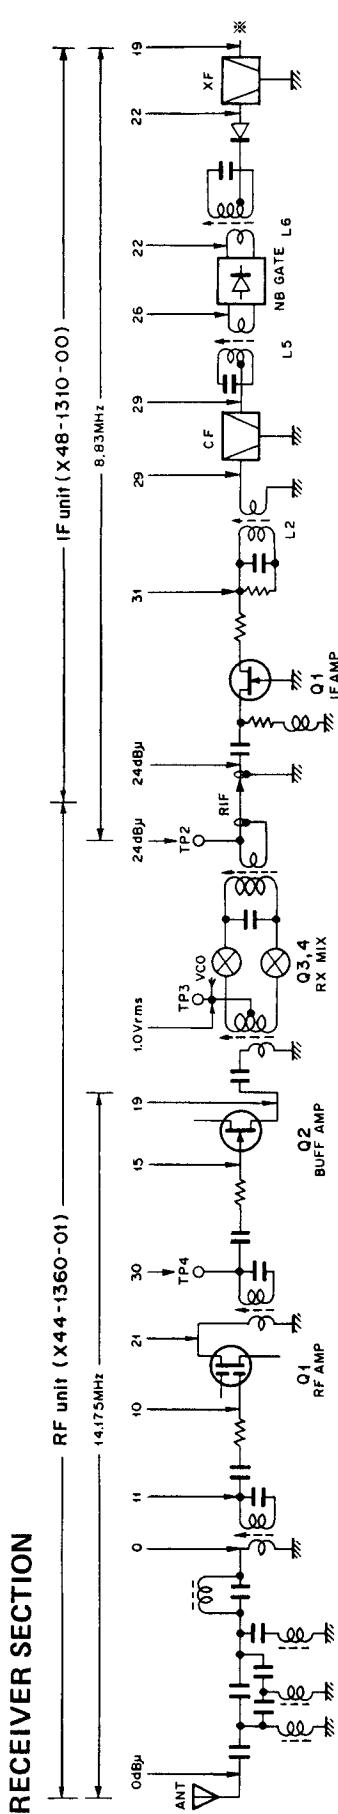

NOTES:

1. The figures shown are signal generator output required for a constant audio output with a constant AF gain control setting. Set the AF gain control for 0.63V/ 8Ω (50 mW) audio output 0dBu signal generator input at 14.175 MHz.
2. To inject signal generator output connect a 0.04μF 50V capacitor between the signal generator and the check point.

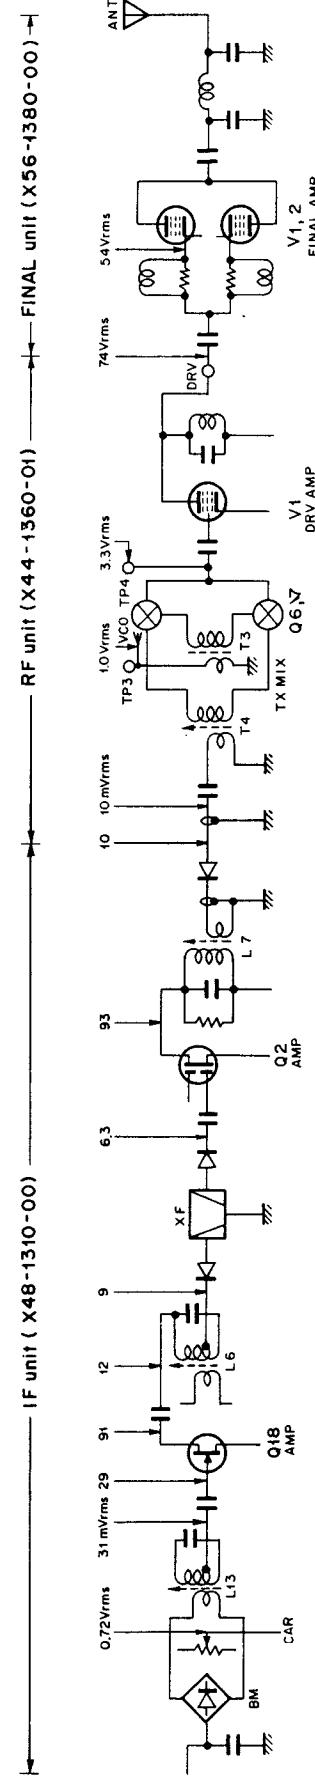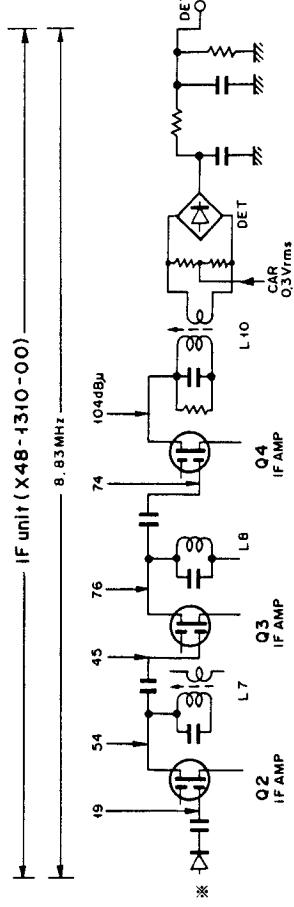

NOTES:

1. Levels are measured at 14.175 MHz in the CW MODE and SG SW OFF. Carrier level is adjusted until the meter indicates the maximum on-scale ALC reading.
2. All voltage measurements are read from an RF VVTM.
3. A probe with a capacitance of less than 3PF should be used and the ground should be made near the point of measurement.


VFO-240

SPECIFICATIONS


Oscillator frequency	5.50~6.00 MHz
Oscillator circuit.....	Clapp
Output voltage.....	0.2V ±1dB (across 470 ohm load)
Frequency stability.....	Within 100 Hz per 30 minutes after 3 minutes warm-up (at room temperature)
Solid-state complement....	FET: 2 Transistor: 2 Diode: 6
Power source.....	From TS-530S or TS-830S
Dimensions	180 (7-1/8") W x 133 (5-1/4") H x 288 (11-5/16") D mm (inch)
Weight	2.9 kg (6.4 lbs)

* Specifications are subject to change for improvement without notice.


OUTSIDE VIEW

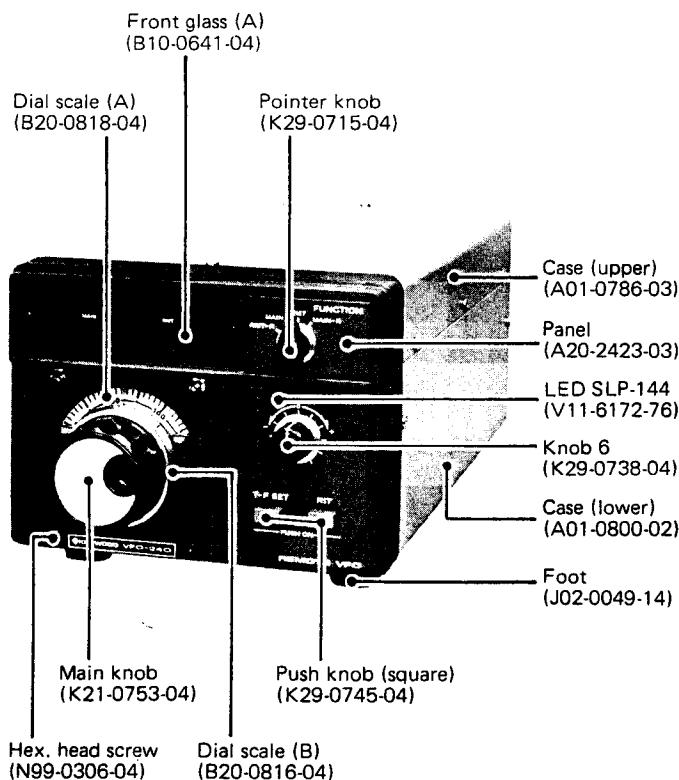

BLOCK DIAGRAM

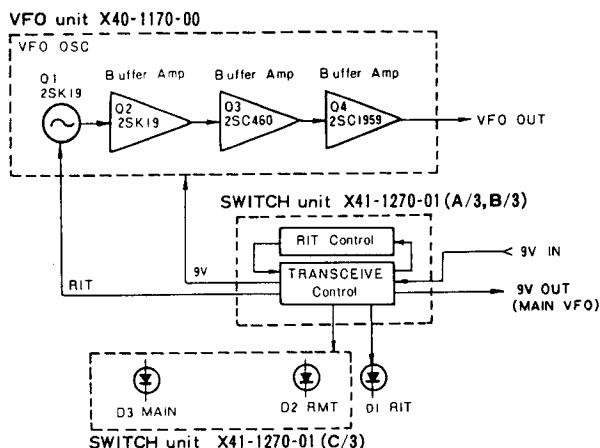

PACKING

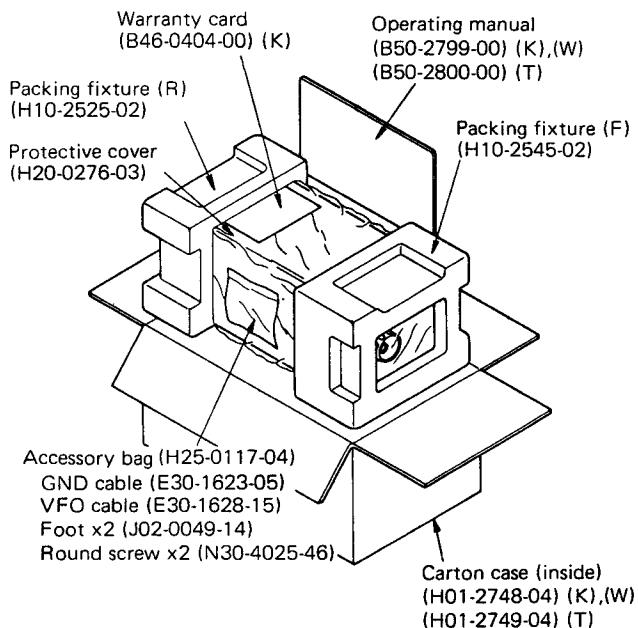

PARTS LIST


☆: New parts

Ref. No.	Parts No.	Description	Re-marks
VFO-240 GENERAL			
	A01-0786-03	Case (upper)	☆
	A01-0800-02	Case (lower)	☆
	A20-2423-03	Panel	
	B10-0641-04	Front glass (A)	☆
	B43-0658-04	Name plate	T ☆
	B43-0659-04	Name plate	K,W ☆
	B46-0404-00	Warranty card	K
	B50-2799-00	Operating manual	K,W
	B50-2800-00	Operating manual	T ☆


Ref. No.	Parts No.	Description	Re-marks	Ref. No.	Parts No.	Description	Re-marks
VFO ASS'Y UNIT (X60-1150-01)							
	E06-0852-05	8P DIN socket VFO OUT		B07-0630-05	Dial escutcheon		
	E30-1623-05	GND cable (accessory)		B10-0632-04	Escutcheon glass		
	E30-1628-15	VFO cable (accessory)		B20-0816-04	Dial scale (B)		
	E31-2091-05	Connector with lead (A)	☆	B20-0818-04	Dial scale (A)		
	E31-2092-05	Connector with lead (B)	☆	B30-0819-05	Pilot lamp		
	G09-0410-05	D spring φ6 RIT,FUNCTION		B42-1645-04	Seal Bottom		
	H01-2748-04	Carton case (inside) K,W	☆	B42-1671-04	Seal Top		
	H01-2749-04	Carton case (inside) T	☆	G01-0804-04	Coil spring		
	H10-2525-02	Packing fixture (R)		K21-0753-04	Main knob		
	H10-2545-02	Packing fixture (F)		X40-1170-00	VFO unit		
	H20-0276-03	Protective cover					
	H25-0117-04	Accessory bag					
	J02-0049-14	Foot (large)					
	J61-0019-05	Vinyle tie					
	K29-0715-04	Pointer knob FUNCTION					
	K29-0738-04	Knob 6 RIT					
	K29-0745-04	Push knob (square) RIT, T-F SET	☆				
	N14-0115-05	Flange nut GND		C2	C91-0456-05	C 0.047μF 25V	
	N14-0509-05	Wing nut GND		C4	CC45CG1H050C	C 5pF ±0.25pF	
	N15-1040-46	Washer GND		C6	C91-0456-05	C 0.047μF 25V	
	N16-0040-46	Spring washer GND		C7	CC45LG1H151J	C 150pF	
	N30-4012-46	Round screw Foot		C9	CC45LG1H121J	C 120pF	
	N30-4016-46	Round screw GND		C12	CC45LG1H680J	C 68pF	
	N30-4025-46	Round screw Foot (accessory)		C13	CC45CG1H220J	C 22pF	
	N35-3006-41	Bind screw Case		C14	CC45PG1H100D	C 10pF ±0.5pF	
	N87-4012-46	Self tapping screw Foot		C15,16	CC45LG1H151J	C 150pF	
	N99-0306-04	Hex. head screw VFO		C17	CC45CH1H020C	C 2pF ±0.25pF	
	N99-0308-04	Hex. head screw Front glass	☆	C18	C91-0456-05	C 0.047μF 25V	
D1	V11-6172-76	LED SLP-144		C21	CC45SL1H390J	C 39pF	
	X41-1270-01	Switch unit	☆	C22	CC45CH1H100D	C 10pF ±0.5pF	
	X60-1150-01	VFO ass'y unit		C23	CC45SL1H390J	C 39pF	
				C24	C91-0456-05	C 0.047μF 25V	
				TC1	C05-0009-15	Ceramic trimmer 6pF	
				TC2	C05-0013-15	Ceramic trimmer 20pF	
				VC1	C02-0019-05	Variable cap.	
					D40-0614-05	Dial mechanism ass'y	
					E40-0574-05	Mini connect wafer 5P	
					F29-0014-05	Insulating washer	
SWITCH UNIT (X41-1270-01)							
	E23-0047-04	Square terminal		L1	L32-0628-05	OSC coil	
	E23-0401-05	Round terminal		L2	L33-0025-05	Choke coil 1μH	
	E40-0216-05	Mini connect wafer 2P		L3	L32-0629-05	OSC coil	
	E40-0474-05	Mini connect wafer 4P L type		L4	L32-0609-05	OSC coil	
	E40-0774-05	Mini connect wafer 7P L type		L5	L40-1021-03	Ferri-inductor 1mH	
VR1	R01-2407-05	Pot. 5kΩ (B) RIT	☆	L6	L40-4711-03	Ferri-inductor 470μH	
VR2	R12-3025-05	Trim. pot 10kΩ (B)		L7	L40-1021-03	Ferri-inductor 1mH	
	R92-0150-05	Short jumper		L8	L40-1501-03	Ferri-inductor 15μH	
S1	S29-1418-05	Slide rotary switch	☆	L9~11	L40-4711-03	Ferri-inductor 470μH	
S2	S40-2424-05	Push switch T-F SET	☆		R92-0150-05	Short jumper	
S3	S40-2425-05	Push switch RIT	☆				
RL1	S51-2408-05	Relay G2V-2		Q1,2	V09-0011-05	FET 2SK19(Y)	
D1	V11-0076-05	Diode 1S1555		Q3	V03-0079-05	TR 2SC460(B)	
D2	V11-3162-86	LED TLG-205		Q4	V03-1959-06	TR 2SC1959(Y)	
D3	V11-3163-16	LED TLY-205		D1	V11-0414-05	Diode 1S2588	
				D2	V11-4161-36	Vari-cap. 1SV53A	

VFO-240/AT-230

VFO-240
SCHEMATIC DIAGRAM

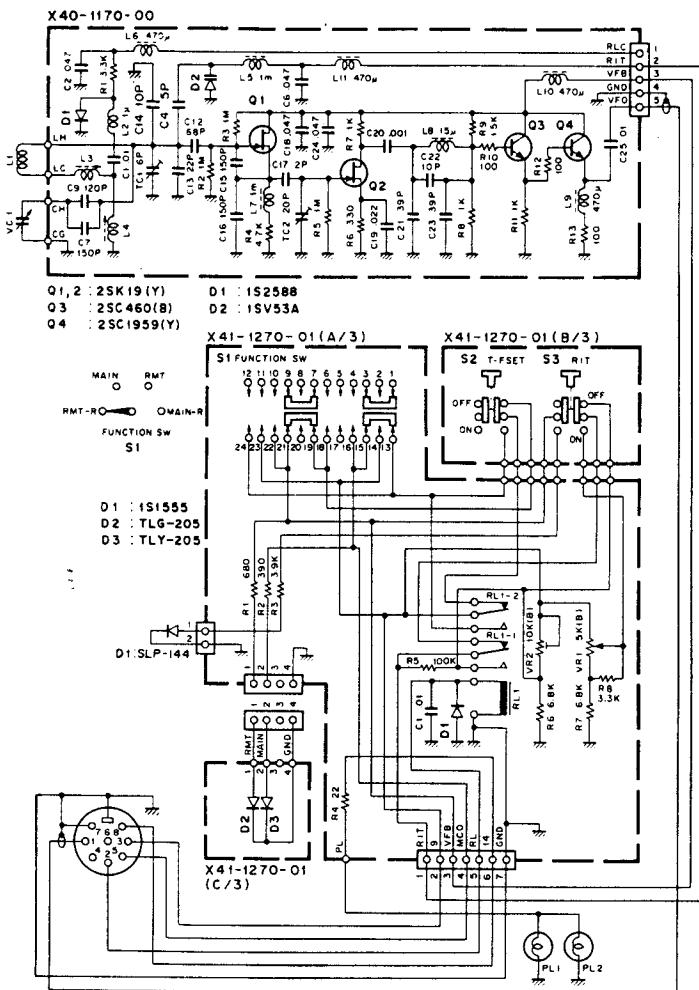

AT-230
SCHEMATIC DIAGRAM

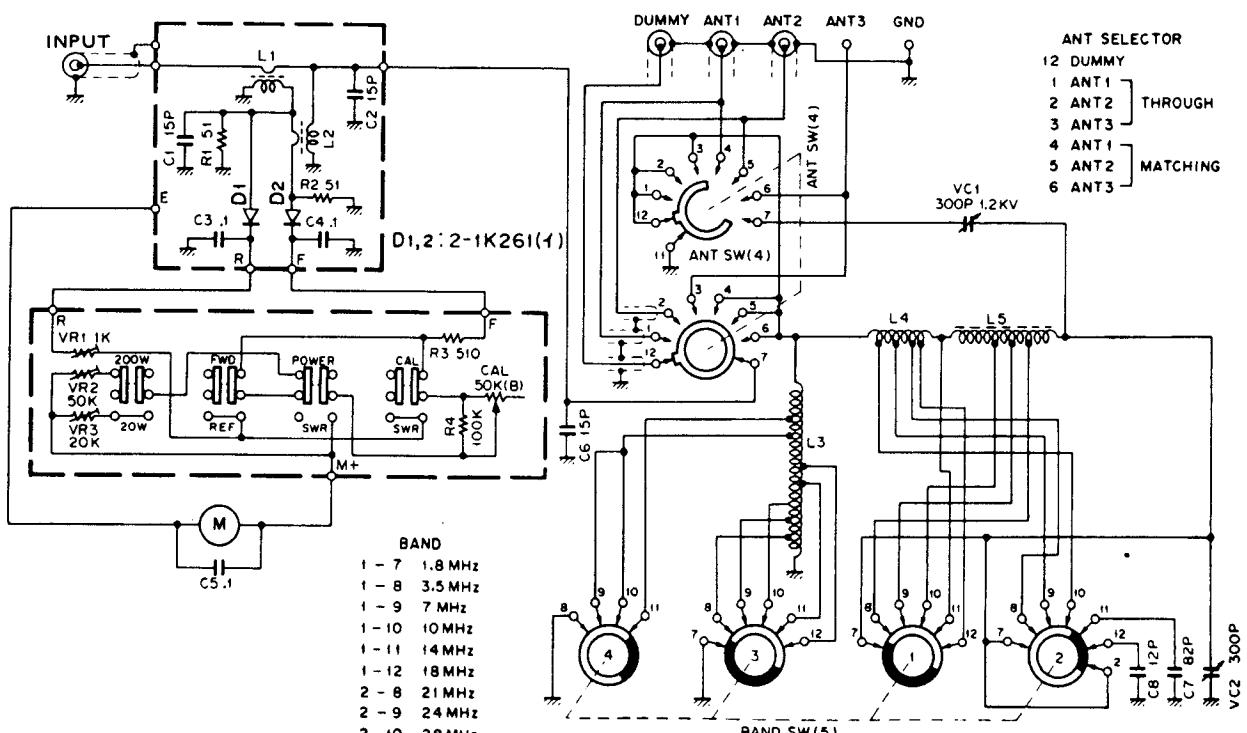

AT-230

SPECIFICATIONS

ANTENNA COUPLER

Frequency Range	9 amateur bands from 1.8 to 29.7 MHz
Input Impedance	50Ω
Output Impedance	10 to 500Ω, unbalanced
Through Power	200W at max.
Insertion Loss	Less than 0.5 dB in matched state
Pi-L	1.8 MHz only
Output Impedance	20 to 500Ω, unbalanced
Through Power	100W at max.

WATTMETER

Type	Through-line wattmeter
Frequency Range	1.8 to 30 MHz
Measurable RF Power	Up to 20/200W, switched
Kinds of RF Power	Forward or reflected power, switched.
Net weight	3.4 kg (7.5 lbs.) approx.
Impedance	50Ω
Accuracy	Better than ±10% of full scale

SWR METER

SWR Detection	Toroid core direction coupler
Measurable Range	1.1 to 10
Min. Power Required	4W

GENERAL

Connectors

INPUT	UHF type, 50Ω
ANT-1	UHF type
ANT-2	UHF type
ANT-3	Stud and wing nut
Dimensions	W 180 mm (7-3/32") H 133 mm (5-15/64") D 288 mm (11-11/32")

NOTE : The circuit and ratings may change without notice due to developments in technology.

PARTS LIST

☆: New parts

Ref. No.	Parts No.	Description	Re-marks
AT-230 GENERAL			
	A01-0786-03	Case (upper)	☆
	A01-0788-02	Case (lower)	☆
	A20-2397-02	Panel	☆
	B07-0632-08	Meter escutcheon (T)	☆
	B07-0633-08	Meter escutcheon (K)(W)	☆
	B20-0808-04	Knob skirt	
	B31-0621-08	Meter	
	B46-0058-00	Warranty card (K)	
	B50-2756-08	Operating manual (K)(W)	☆
	B50-2757-08	Operating manual (T)	☆
VC1, 2	C02-0016-08	Variable cap 300pF 1.2kV	
C7	C91-0419-05	C 82pF 3kV	☆
C8	C91-0402-05	C 12pF 3kV	☆
	D23-0061-04	Bearing	

Ref. No.	Parts No.	Description	Re-marks
	E04-0102-05	UHF type receptacle	
	E23-0015-04	Gnd lug φ3	
	E23-0408-05	Terminal	
	F09-0402-05	Insulating cover	
	F29-0402-08	Insulator	
	G13-0621-04	Cushion	
	H01-2714-04	Carton case (inside)(K)(W)	☆
	H01-2715-04	Carton case (inside)(T)	☆
	H10-2525-02	Packing fixture (R)	☆
	H10-2545-02	Packing fixture (F)	☆
	J02-0049-14	Foot (large)	
	J32 1030-04	Round boss	
L3	L34-0992-08	Main knob R. X Tune	☆
L4	L34-0993-08	Knob. BAND. ANT	☆
L5	L34-0994-08	Knob. CAL	☆
	N14-0506-08	Switch paddle	
	S01-2418-08	Coil	
	S01-5404-08	Coil	
	W02-0302-08	Wing nut, M5 ANT3. GND	
	W02-0303-08	Rotary switch, ANT	
		Rotary switch, BAND	☆
		Switch module	
		Detector module	

SWITCH UNIT (W02-0302-08)


VR1	R12-1024-05	Trim. pot 1kΩ (B)	
VR2	R12-4020-05	Trim. pot 50kΩ (B)	
VR3	R12-3420-08	Trim. pot 20kΩ (B)	
VR4	R05-3407-08	Pot. 50kΩ (B) CAL	
R3	RD14BB2E511J	Carbon resistor 510Ω ±5% 1/4W	
R4	RD14BB2E104J	Carbon resistor 100kΩ ±5% 1/4W	
	S36-2026-15	Paddle switch × 4	

DETECTOR MODULE (W02-0303-08)

C1, 2	FM05ZC150J5	Mica 15pF 500V	
C6	FM05ZC150J5	Mica 15pF 500V	
R1, 2	RD14BB2E510J	Carbon resistor 51Ω ±5% 1/4W	
D1, 2	V11-7763-26	Diode 2-1K261 × 2	
L1, 2	L39-0403-08	Detector coil	

AT-230

OUTSIDE VIEW

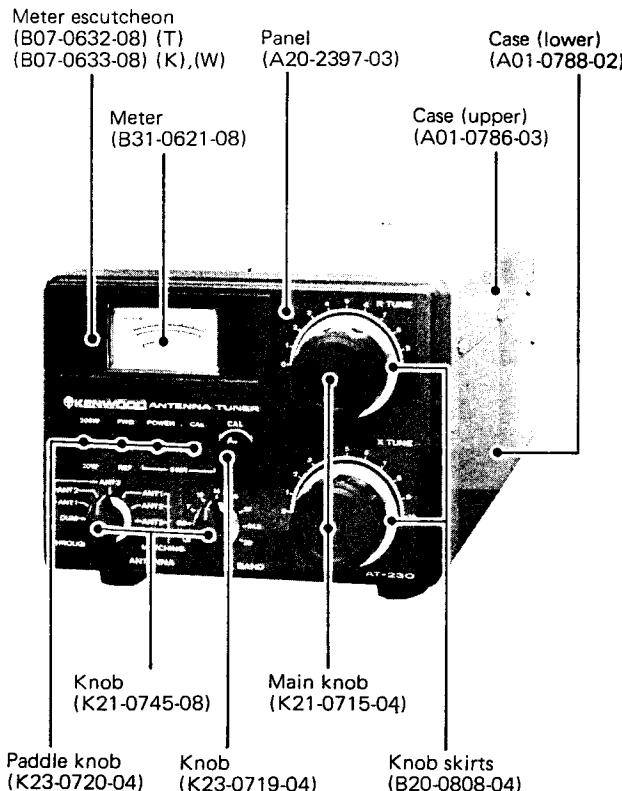

ADJUSTMENTS

1. INSTRUMENTS

1) Terminated Power Meter

1. Frequency range: 50 MHz or more
2. Input impedance: 50Ω
3. Power range: 20W and 200W

2) HF Transmitter or Transceiver

- 1) Output: 100W CW
Variable to 10W.
Example: TS-530, TS-830S

2. POWER METER ADJUSTMENT

1) Test Equipment Connection

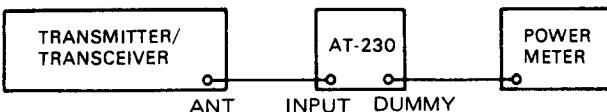


Fig. 1

2) Adjustment

1. Connect as in Fig. 1.
2. Unless otherwise specified, controls should be set as follows:

ANT SW	DUMMY
BAND SW	14
200W/20W SW	200W
FWD/REF SW	FWD
POWER/SWR SW	POWER
CAL/SWR SW	SWR

Tune up the transceiver at 14.175 MHz.

3. Adjust the transceiver for 100W output at the power meter (adjusted by the carrier level control).
Adjust VR2 on the switch unit for a meter reading of 100 on the AT-230.

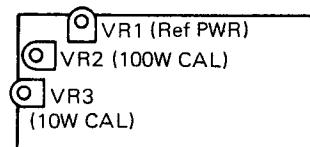


Fig. 2

4. As in step 3, lower transceiver output to 10W and adjust VR3 for a meter indication of 10 on the 20W scale.

3. CALIBRATION OF REF POWER

1) Connection

As in Fig. 1.

2) Adjustment

1. Set controls as described in 2.2.
Confirm 100W CW output reading
2. Unkey the transceiver and reverse the coaxial cable between the INPUT and DUMMY terminals on the AT-230. Move the FWD/REF switch to the REF position.
3. Transmit and adjust VR1 for previously confirmed 100W reading.




SCHEMATIC ABBREVIATION

Connector No.	Terminal name	
VFO ass'y unit (X60-1150-01)		
	RLC	From MODE SW S-18-3, 5
	RIT	RIT voltage input
	VFB	VFO B + 9V
	G	
	VFO	VFO output
PLL unit (X50-1680-01)		
①		BAND SW input information
②	A,B,C,D BLK 12	BCD code from counter unit Blanking signal B + 12V
③	1K CON	Reference signal from PLL Q24 To counter unit from PLL Q29
④	MKR	Marker output
	VCO	VCO output
⑤ , ⑥	VFO	VFO input
⑦	CAR	Carrier output
⑧	RLS TXC IFS USB LSB MS 9	MODE SW S18-3 MODE SW S18-3 IF shift arm of VR-3 From S18-1 + 9V on USB From S18-1 + 9V on LSB Calibrator SW S1-1 B + 9V
Counter unit (X54-1540-00)		
①	0.5 12	0.5 MHz shift signal B + 12V
②	12 CON BLK 1K A~D -6	B + 12V Counter signal input Blanking signal Reference signal 1 kHz BCD input from PLL B - 6V
③	AUX~28B	Band information to PLL
④ , ⑤	AUX~29.5	Band SW information to + 9V on any band
IF unit (X48-1310-00)		
①	12 RIF	B + 12V Receiver IF input
②	NBI NSG	To noise blanker amp Noise blanker gate signal
③	210A 210B 300B	B + 210V B + 210V B + 300V
④	300A	B + 300V
⑤	CWN~SSB	To NAR SW S4-1.2
⑥	TIF AGC	Transceiver IF output Output for AGC
⑦	DET RB2	Detector output Receiver amp bias
⑧	CAR	Carrier input
⑨	VXI	To VOX circuit
⑩	TM M ALM MIC NRM PRC	Meter select SW S-13 arm S meter voltage To ALC meter DC signal MIC input Processor SW OFF Processor SW ON
⑪	MV1 MV2	Top of MIC gain control Arm of MIC gain control

Connector No.	Terminal name	
⑫	-6 AGO AGS RFG SSB 9 CV	B - 6V input AGC off AGC slow Arm of RF gain control From mode SW S18-4 B + 9V Arm of carrier level control
⑬	RSC XIT RIT RTI	Receiver RIT Transmitter RIT RIT voltage to VFO RIT SW S3-1
⑭	ALC RLT RLR RL	ALC input from AF unit Q31 + 9V when transmit + 9V when receive Relay voltage
RF unit (X44-1360-01)		
①	AUX~24.5	To counter unit + 9V on any band
②	28,29 9V	To counter unit + 9V on any band B + 9V
③	ANT RLR	Receiver antenna + 9V at receive
④	MKR	Marker signal input
⑤	AGC RIF	AGC input Receiver IF output
⑥	TOF 12 MXB	Transmit stop signal input for WARC B + 12V MIXer B + turn on signal
⑦	12 TIF 300A	B + 12V Transmit IF signal input From IF unit + 300V
⑧	DRB RB1	Control grid bias for 12BY7A Receiver bias voltage
⑨	H 210A	Heater voltage B + 210V
	VCO	VCO input
	DRV	Drive voltage to 6146B
	NC	Neutralization
AF unit (X49-1150-00)		
①	SSB VXI	+ 9V on SSB mode VOX amp input
②	DET NBI	Detector signal from IF unit Noise blanker amp input
③	AV2 AV3 STE KEY	Arm of AF gain control Top of AF gain control To ground in CW and CW NAR To ground in tune and USB/LSB
④	SP STS	Speaker internal Side tone SW
⑤	SS VXS VXD SP	Stand by SW VOX SW to ground when VOX ON VOX delay control Speaker internal
⑥	VR3 KEY VR1 AV SS RL 9	Final grid bias control To ground in tune and USB/LSB Final grid bias control Anti VOX signal input Stand by SW Relay voltage B + 9V
⑦	RB1 MXB TOF DRB	Bias for Q1 RF amp on RF unit B + to MIXer from Q29 on AF unit TX stop signal for WARC Bias for control grid of 12BY7A


SCHEMATIC ABBREVIATION

Connector No.	Terminal name	
⑧	RLT RLR -6	+ 9V on transmit + 9V on receive B -6V
⑨	ALC RLT RLR RL	ALC output from Q31 + 9V when transmit + 9V when receive Relay voltage
⑩	RAL VR2	External ALC input remote socket Arm of TX bias control
⑪	NBV NBS 9 PRS RF1	Top of noise blanker VR Noise blanker SW B + 9V Processor SW Top of RF gain control
⑫	NSG RB2	Noise blanker gate signal Receiver bias for IF unit
	14A	14V input
	G14	14V input (ground)
	FG	Bias for control grid of 6146B
Final unit (X56-1380-00)		
	DRV FG H IPM SG	Drive input Control grid bias Heater voltage AC12.3V IP meter voltage Screen grid voltage
Rectifier unit (X43-1370-02)		
	800 HV 300B 210B 210A -C 12 SG2 TUN	B + 800V High voltage signal to METER B + 300V B + 210V B + 210V Common B- approx. -100V Screen grid cut off voltage Screen grid voltage Screen grid voltage for TUN

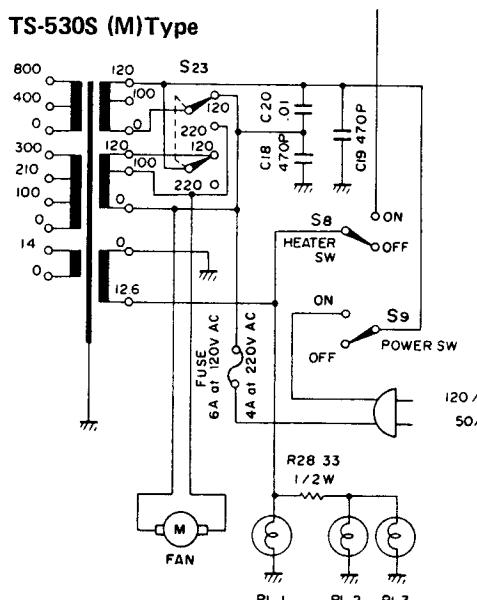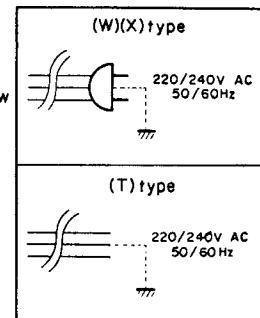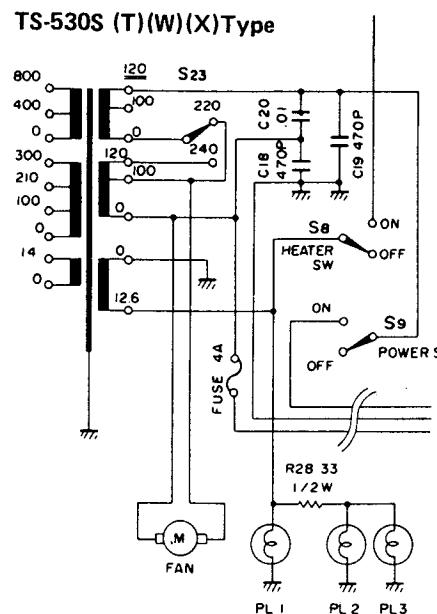


2SA778A 2SC1775
2SA1015 2SC1815
2SC945 2SC1923
2SC1515 2SC1959
2SC1675 2SC2240

2SA473

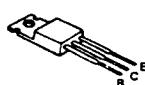


NJM78L05A

2SA562

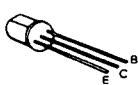


μPC1158H2


SC1515 2SC1959
SC1675 2SC2240

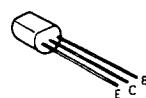


2SC460

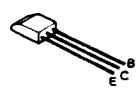

2SK19

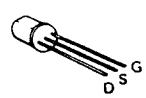

2SK125
2SK30A

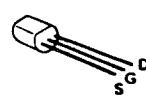

3SK73



MB3712




6




A schematic symbol for a diode or rectifier, consisting of a rectangle with a vertical line extending downwards from its center.

T1 R-205

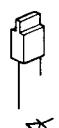

MV-13

SCHEMATIC DIAGI

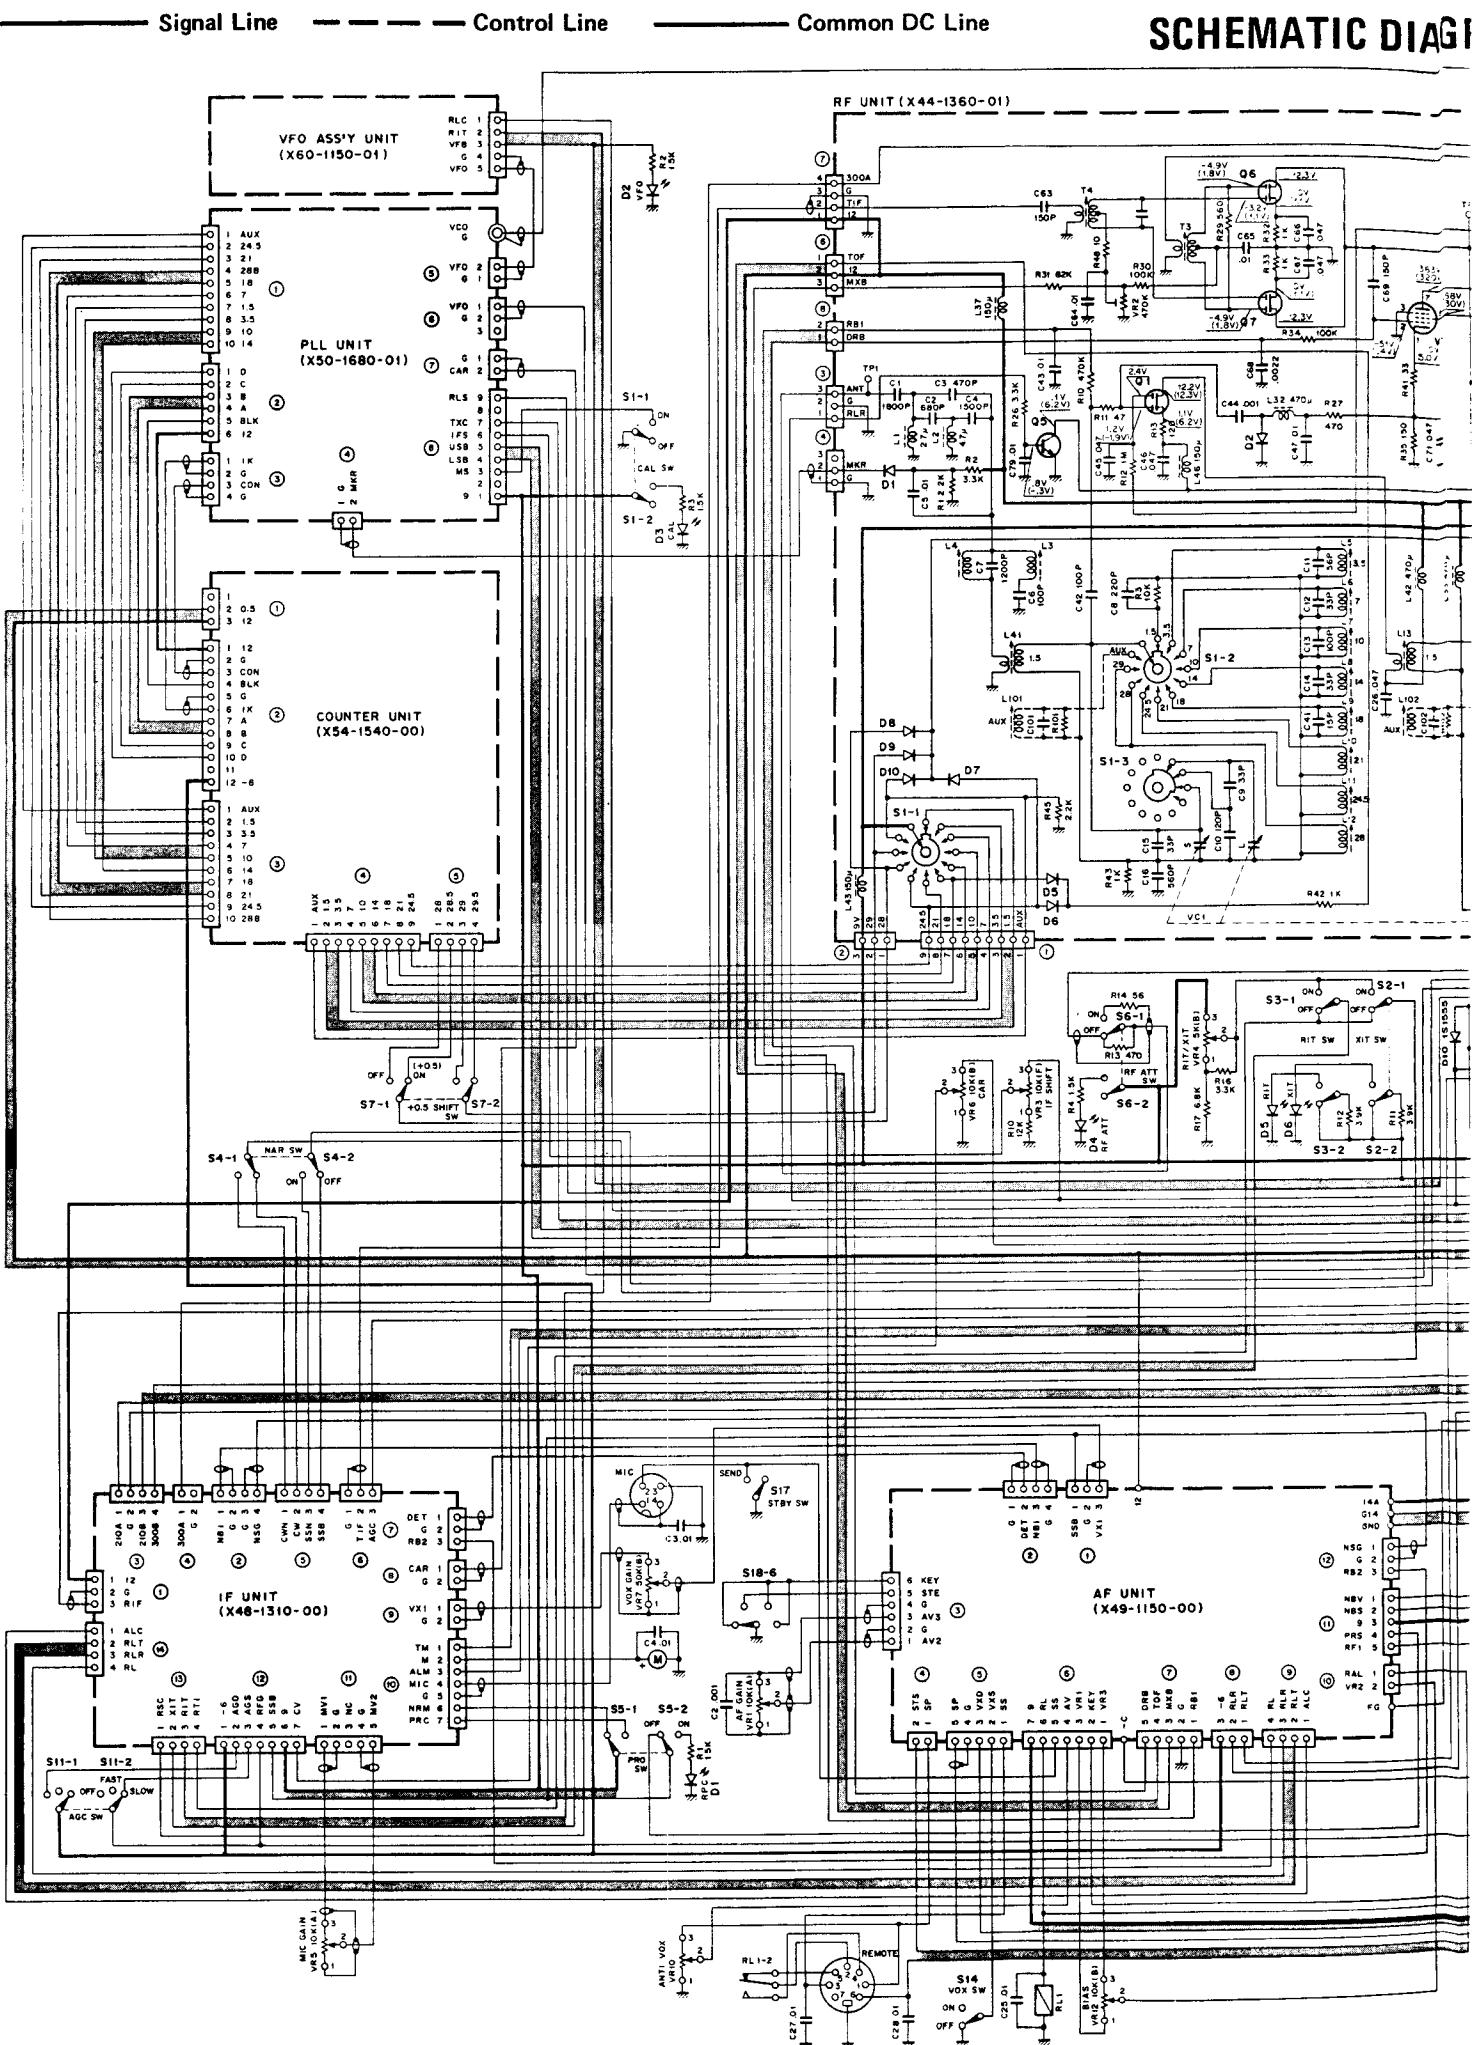


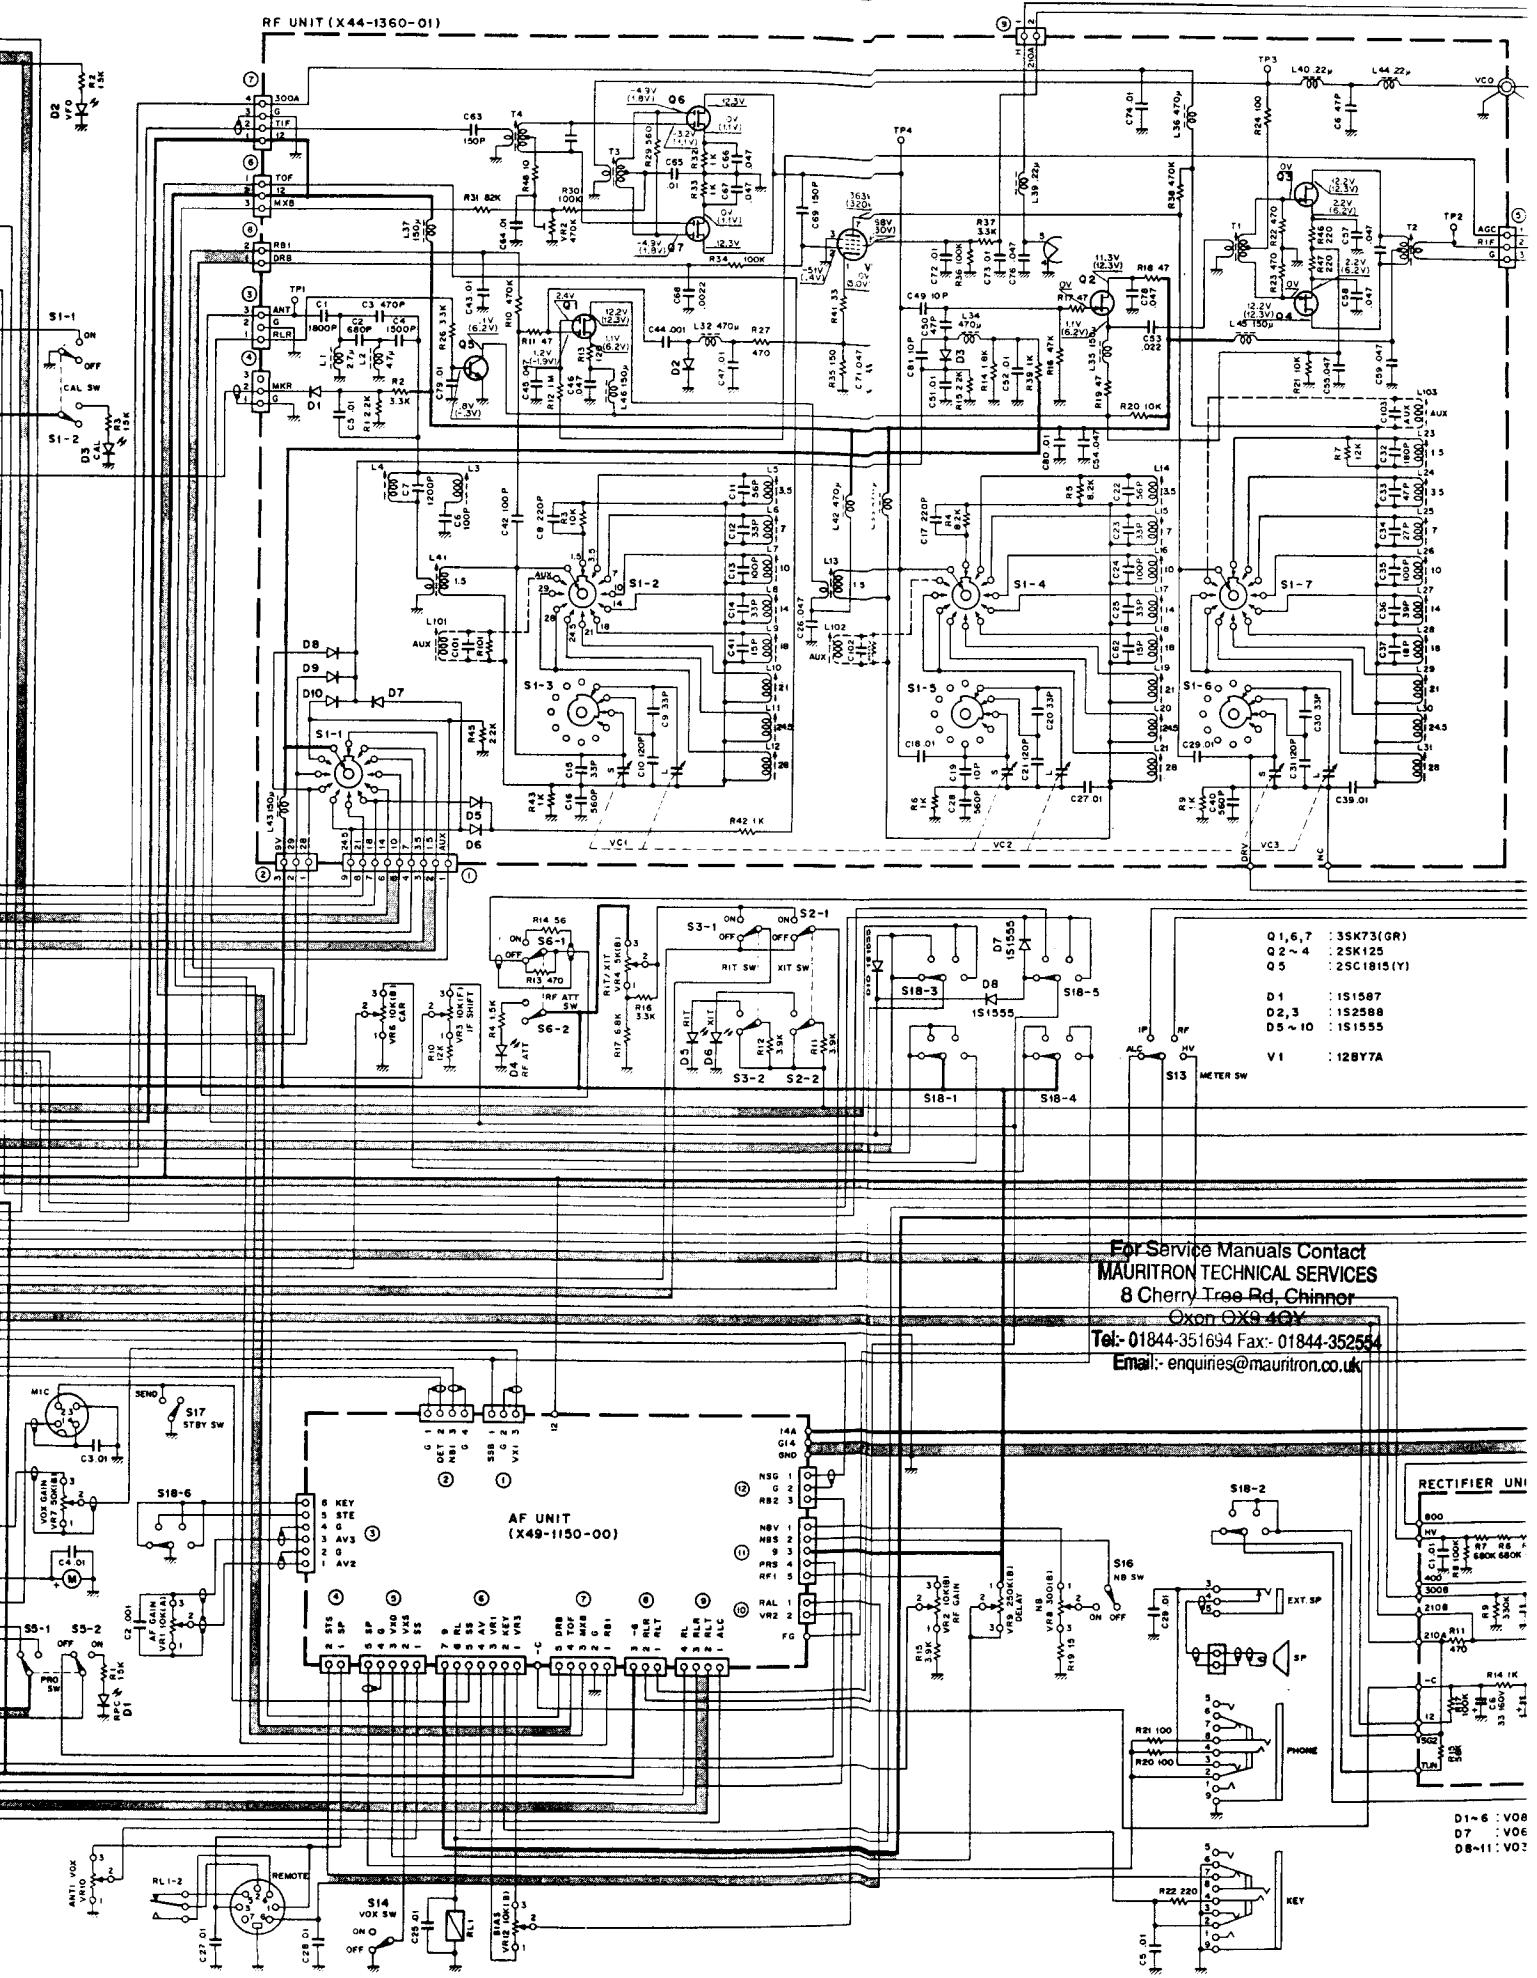


DIAGRAM (K)

Voltage measurement conditions f=14.175MHz, RX no signal, () in TX

TS-530S

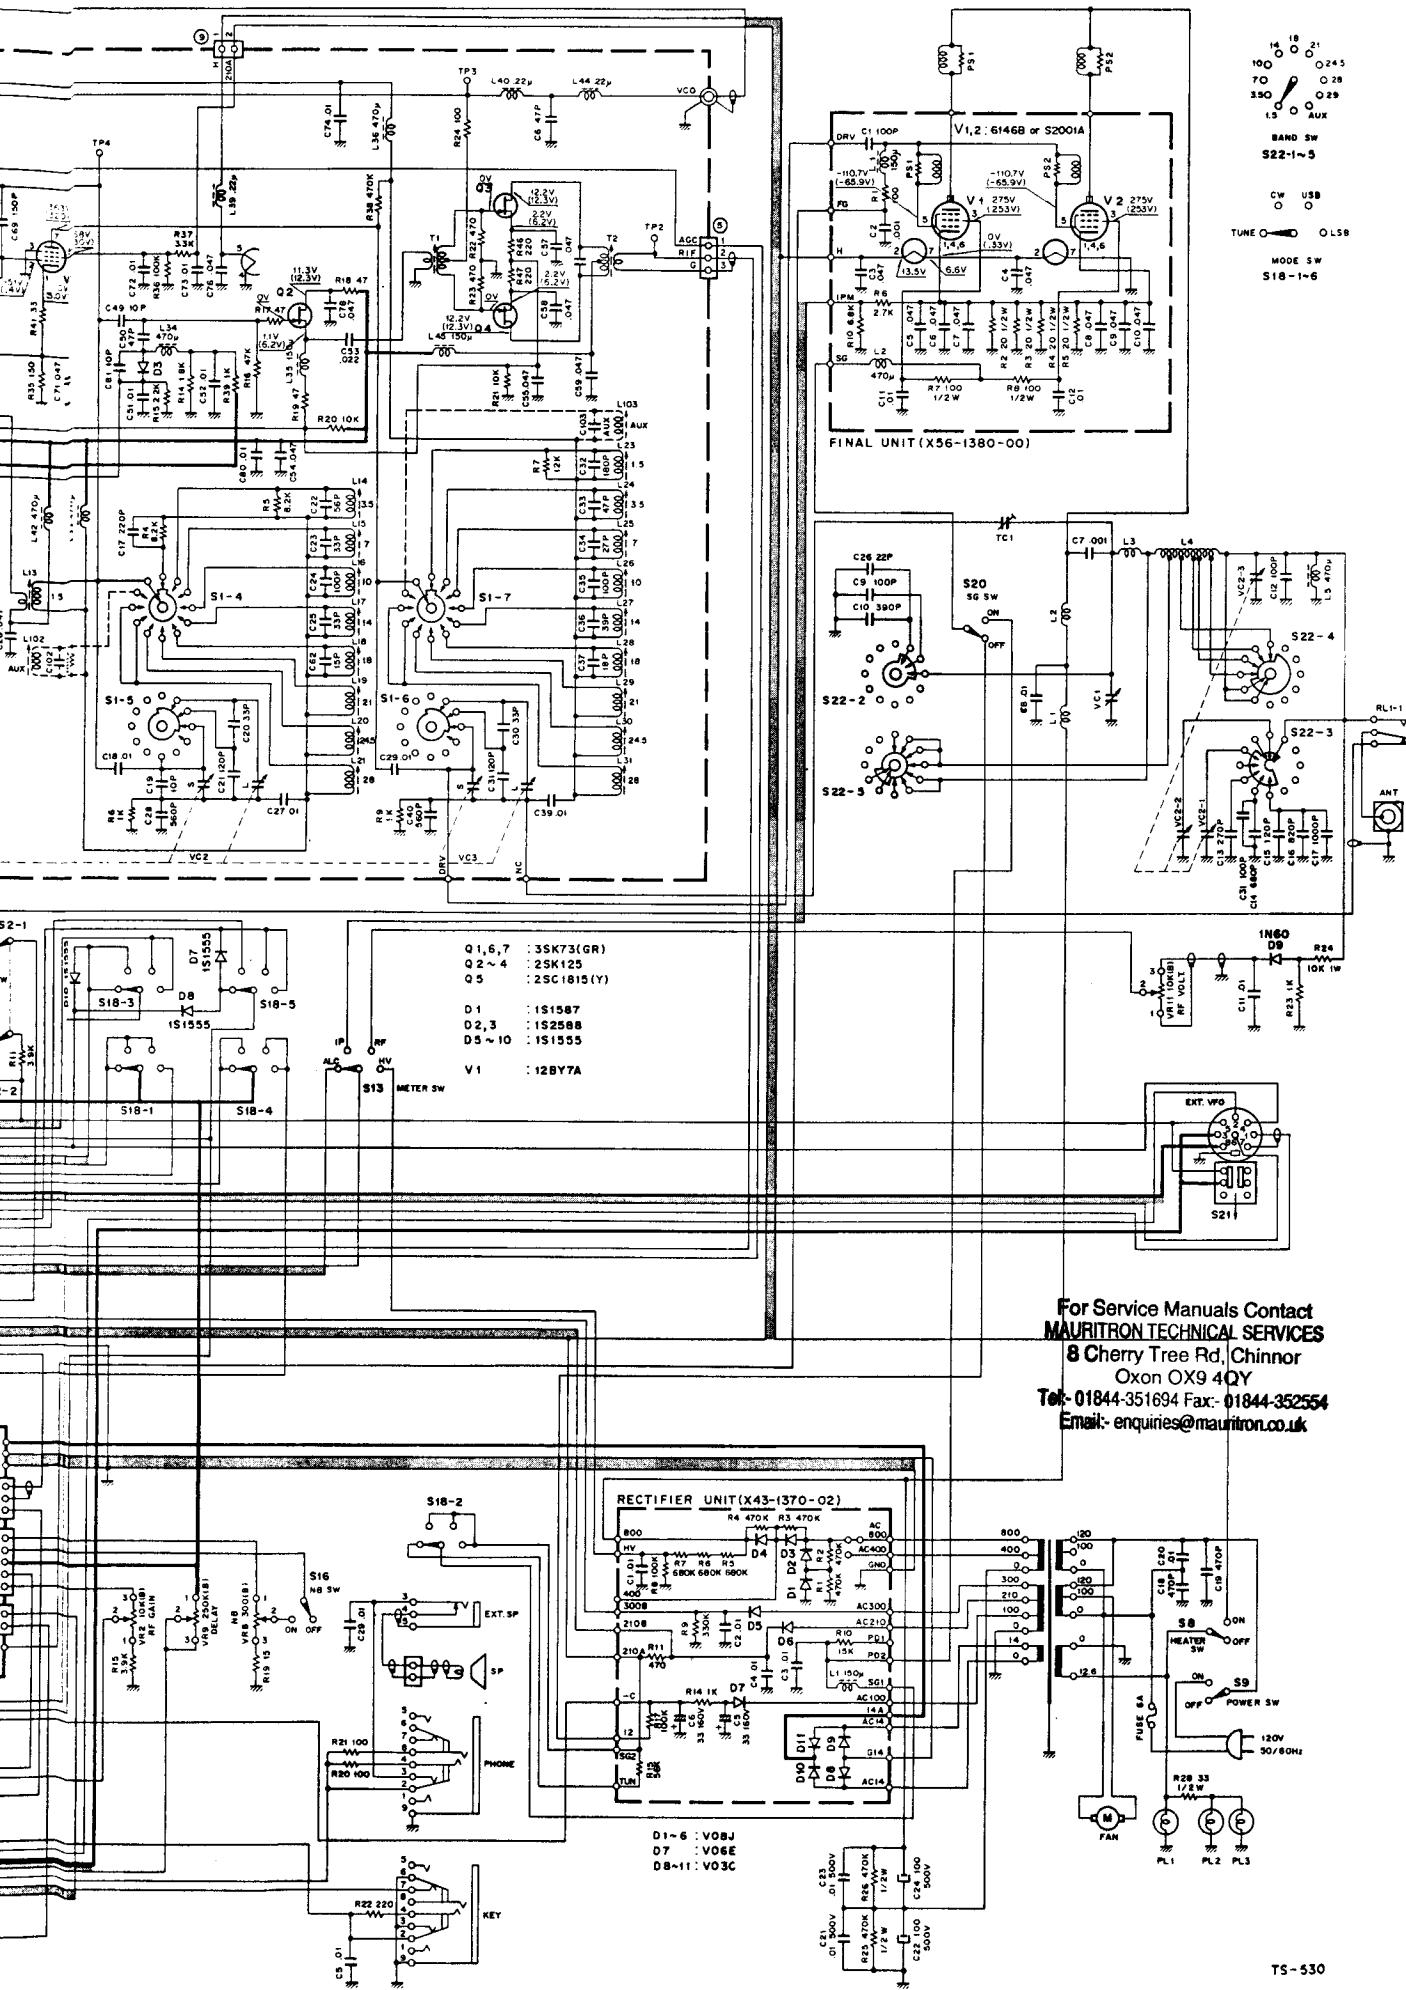


For Service Manuals Contact
MAURITRON TECHNICAL SERVICES

8 Cherry Tree Rd, Chinnor
Oxon OX9 4QY
Tel: 01844-351694 Fax: 01844-352554
Email: enquiries@mauritron.co.uk

TS-530

TS-530SP/D SHEMATIC DIAGRAM


TS-530D ONLY

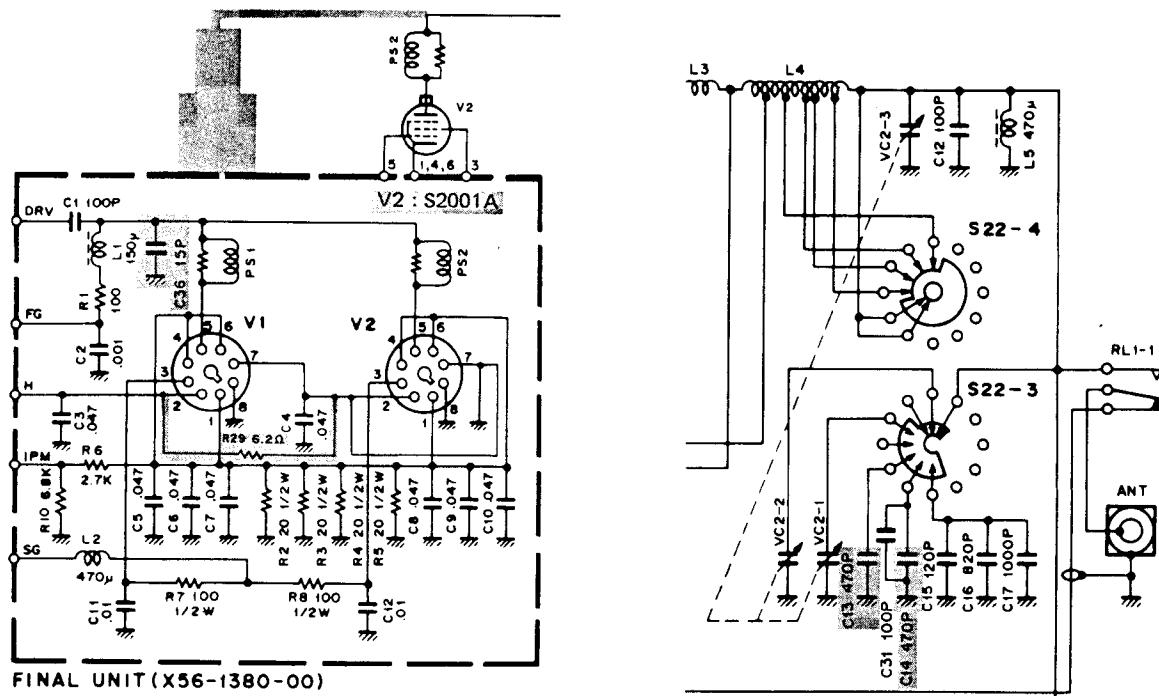

▼NOTCH UNIT


The shaded parts indicate the changed circuit from TS-530S to TS-530SP/D.

NOTCH UNIT (X51-1310-10)

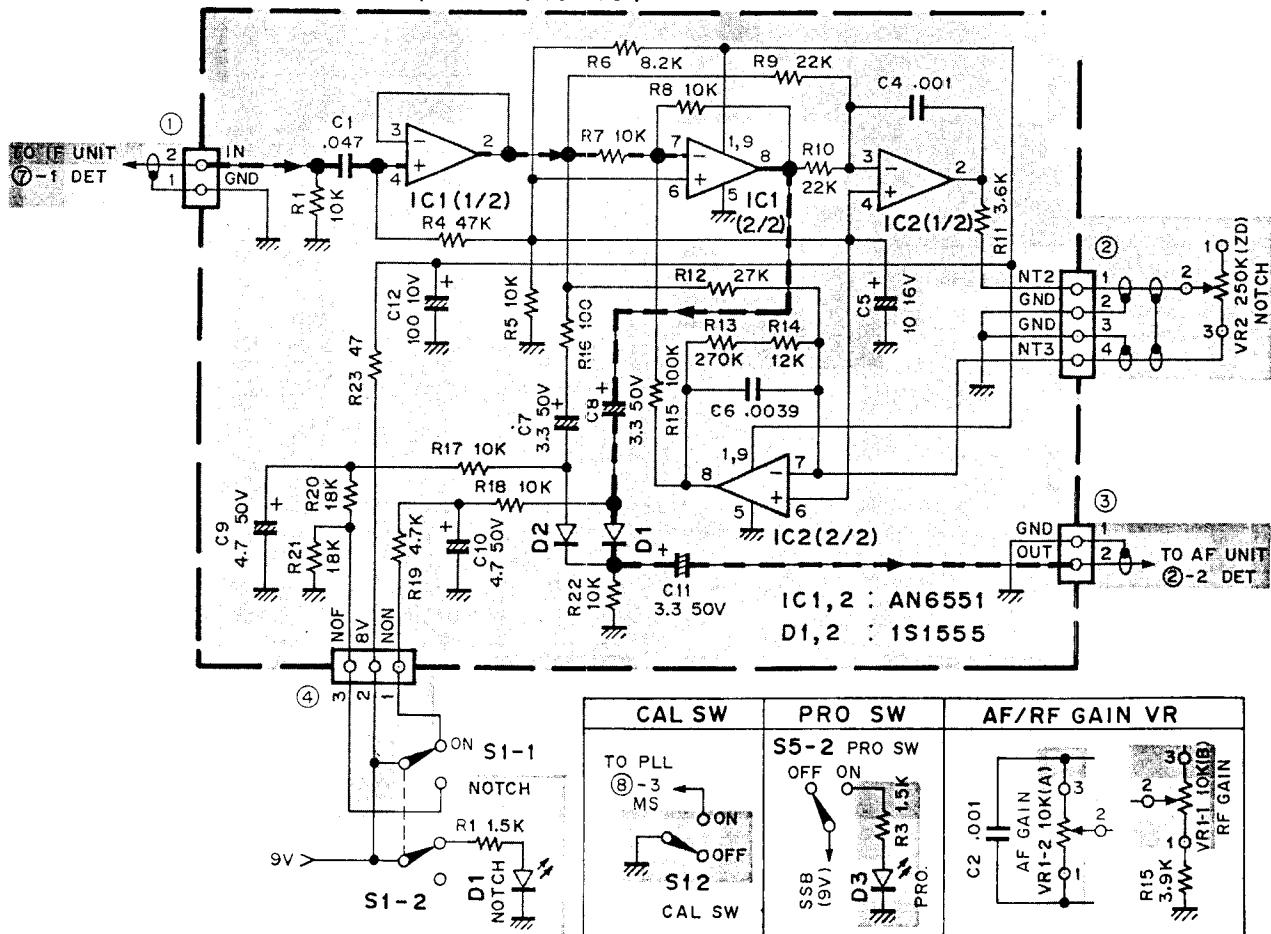


TS-530SP/D

PC BOARD VIEW

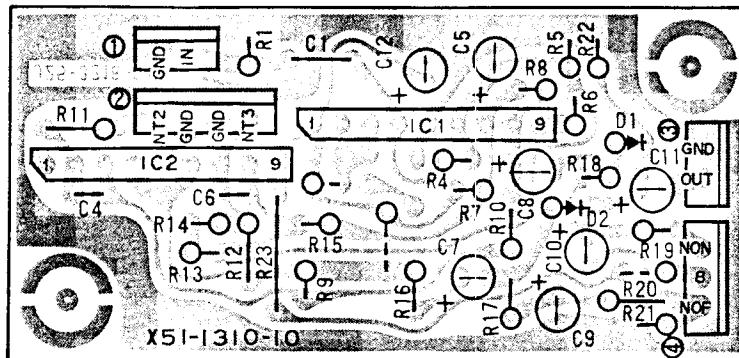

◀ NOTCH UNIT
(X51-1310-10)
View from component side

DISASSEMBLY

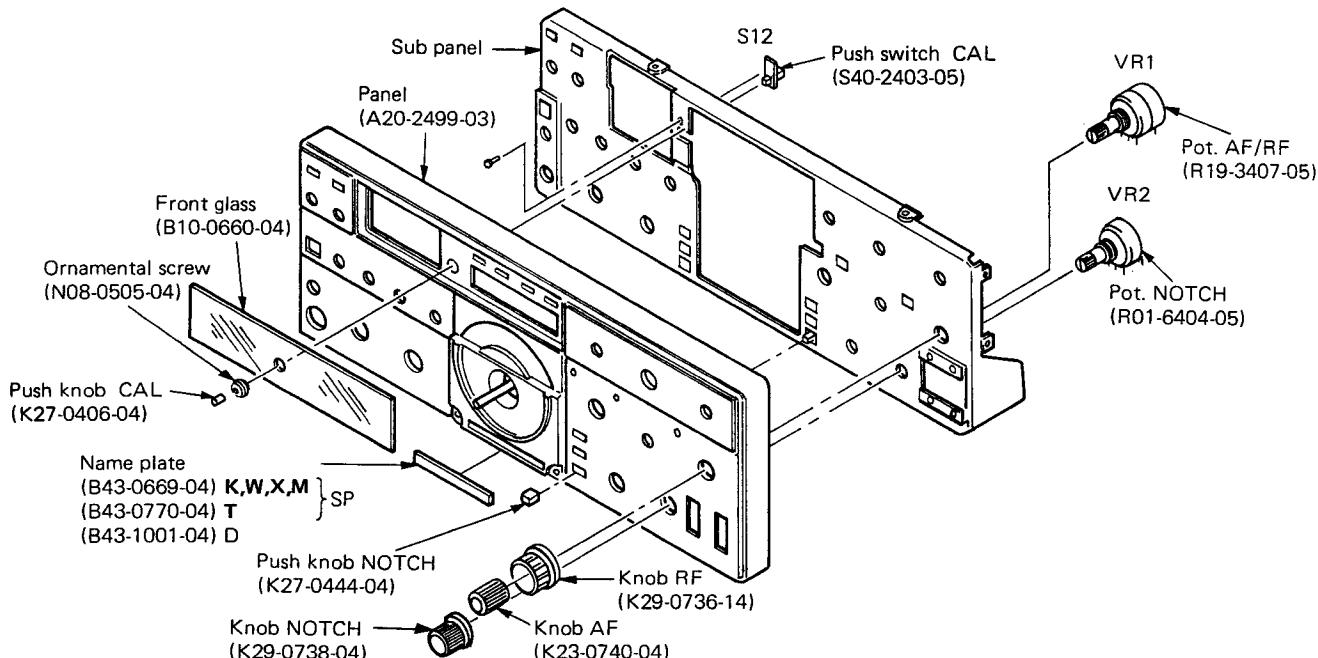


PARTS LIST

Ref. No.	Parts No.	Description	Re-marks	Ref. No.	Parts No.	Description	Re-marks
GENERAL							
	A20-2499-03	Panel	★	S12	S40-2403-05	Push switch CAL	
	B10-0660-04	Front glass (large)	★		T91-0318-05	Microphone 10kΩ X,M	★
	B43-0669-04	Name plate K,W,X,M (SP)	★	IC1,2	CQ92M1H473K	AN6551	
	B43-0700-04	Name plate T (SP)	★	D1,2	CQ92M1H102K	1S1555	
	B43-1001-04	Name plate (D)	★	C1	CE04W1C100M	E 10 16V	
	B50-4075-00	Operating manual K,W,X,M (SP,D)	★	C4	CQ92M1H392K	ML 0.047	
	B50-4076-00	Operating manual T (SP)	★	C5	CE04W1H3R3M	ML 0.001	
C13,14	CC45SL2H471J	C 470pF 500V (D)	★	C6	CE04W1H4R7M	E 3.3 50V	
	H01-4520-04	Carton case inside (SP)	★	C7,8	CE04W1H3R3M	E 4.7 50V	
	H03-2151-04	Carton case outside (D)	★	C9,10	CE04W1H4R7M	E 3.3 50V	
	H03-2152-04	Carton case outside (D)	★	C11	CE04W1H3R3M	E 100 10V	
	K23-0740-04	Knob AF		C12	CE04W1A101M		
	K29-0736-14	Knob RF		E40-0273-05		Mini connector 2P	
	L01-8206-05	Power trans (D)	★	E40-0373-05		Mini connector 3P	
	N08-0505-04	Ornamental screw CAL		E40-0473-05		Mini connector 4P	
VR1	R19-3407-05	Pot. 100kΩ(A)/10kΩ(B) AF/RF					
VR2	R01-6404-05	Pot. 250kΩ(ZD) NOTCH					

BLOCK DIAGRAM

* TS-530S/SP
6146B/S2001A x 2
TS-530D
S2001A x 1

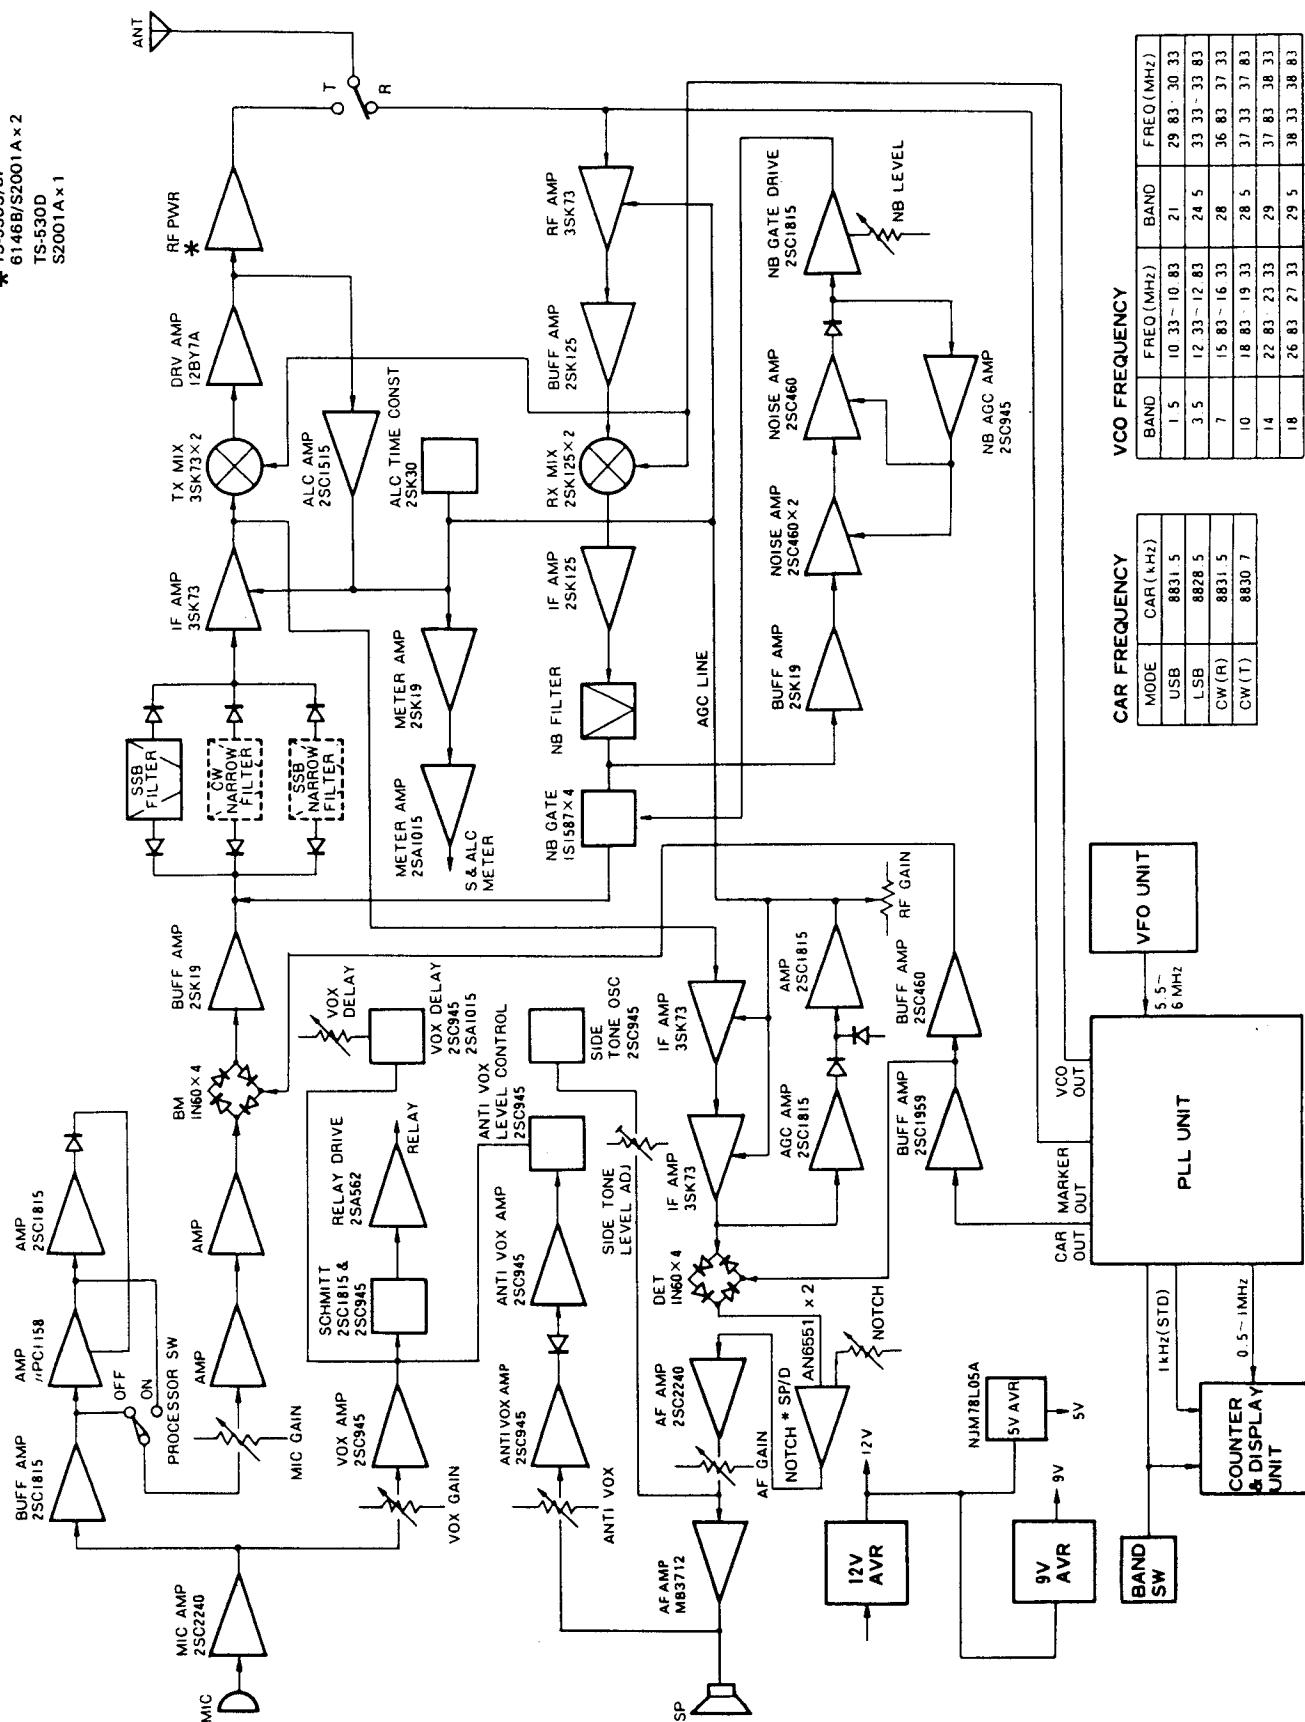

SP-230/PK-3

SPECIFICATIONS

Speaker used:	12 cm dia.
Rated Input:	2 Watts
Impedance:	8Ω
Frequency response:	100Hz to 5kHz.
Filter cut-off frequency,	
LOW:	400Hz, -3dB.
HIGH 1:	3kHz, -3dB.
HIGH 2:	1.5kHz, -3dB.
HIGH 1 + HIGH 2:	1 kHz, -3dB.
Filter attenuation:	-6dB/oct.
Dimensions:	W 180 mm (7-1/16") H 133 mm (5-1/4") D 287 mm (11-5/16")
Net weight:	1.8 kg. (4.0 lbs.)
Accessories furnished:	Speaker cord, 1 pc. (E14-0101-05) Extension foot, 2 pcs. (J02-0049-14) Screw, M4 x 12, 2 pcs. (N30-4012-41) 1 pin plug, 2 pcs. (E20-1610-05)

Ref. No.	Parts No.	Description	Re-marks
	A01-0786-03	Case (upper)	
	A01-0789-02	Case (lower)	★
	A20-2399-05	Panel (T)	★
	A20-2400-05	Panel (K)(W)	★
	B46-0058-00	Warranty card (K)	
	B50-2759-00	Operating manual (K)(W)	★
	B50-2760-00	Operating manual (T)	★
	E11-0404-05	Phone jack	
	E12-0001-05	Phone plug	
	E13-0361-05	3P Pin jack	
	E14-0101-05	1P Pin plug	
	E30-1610-05	Connector with lead	
	G53-0502-04	Packing	
	H01-2723-04	Carton (inside)(K)(W)	★
	H01-2724-04	Carton case (inside)(T)	★
	H10-2523-02	Packing fixture (F)	
	H10-2525-02	Packing fixture (R)	
	H20-0276-03	Protective cover	
	H25-0049-03	Protective bag	
	J02-0049-14	Foot	
	K29-0716-04	Push knob	
	L79-0443-25	Filter	
	RS14AB3D8R2J	Solid 8.2Ω 2W	
	S40-2414-05	Push switch INPUT	
	S42-3401-05	Push switch LOW, HIGH 1, 2	
	T06-0011-06	Speaker	

PK-3

POWER UP KIT for the TS-530D

Ref. No.	Parts No.	Description	Re-marks
	S2001A		
	B50-4103-00	Instruction manual	★
	E90-0004-15	Plate cap	
	H01-4540-03	Carton case	★
	H21-0802-04	Protective sheet	★
	H25-0096-04	Protective bag	★
	L39-0046-05	PS coil PLATE	